



PIVOT DOOR

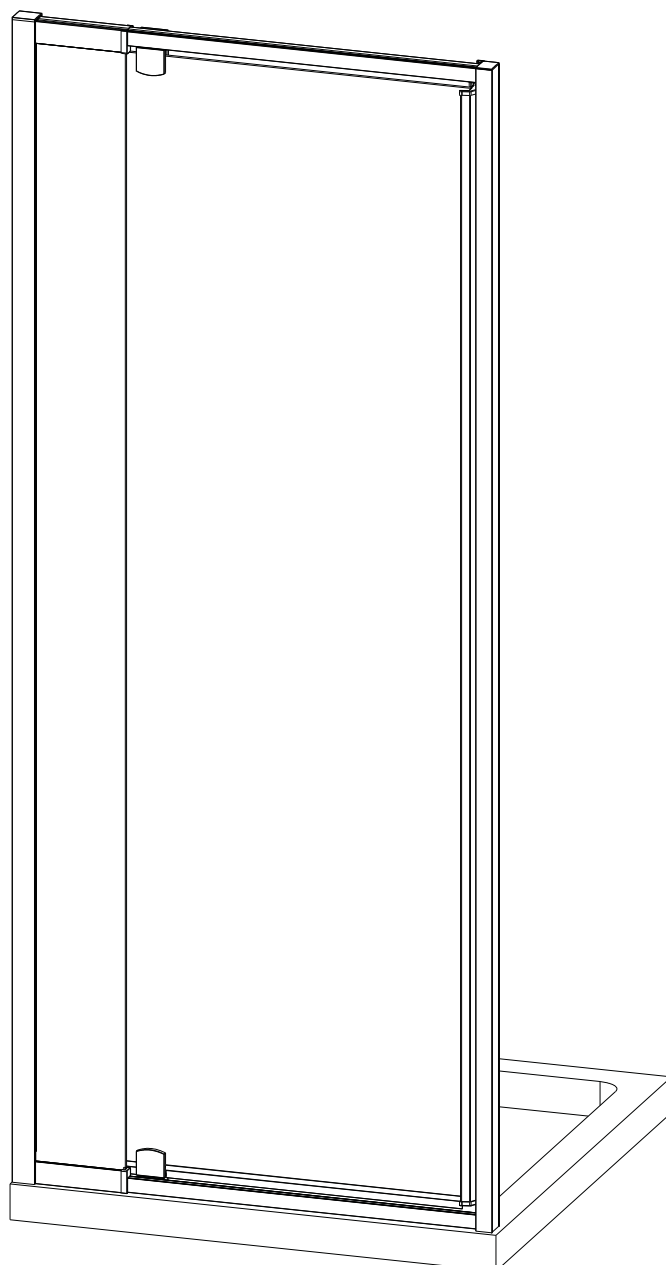


ASSEMBLY INSTRUCTIONS-DRAWING

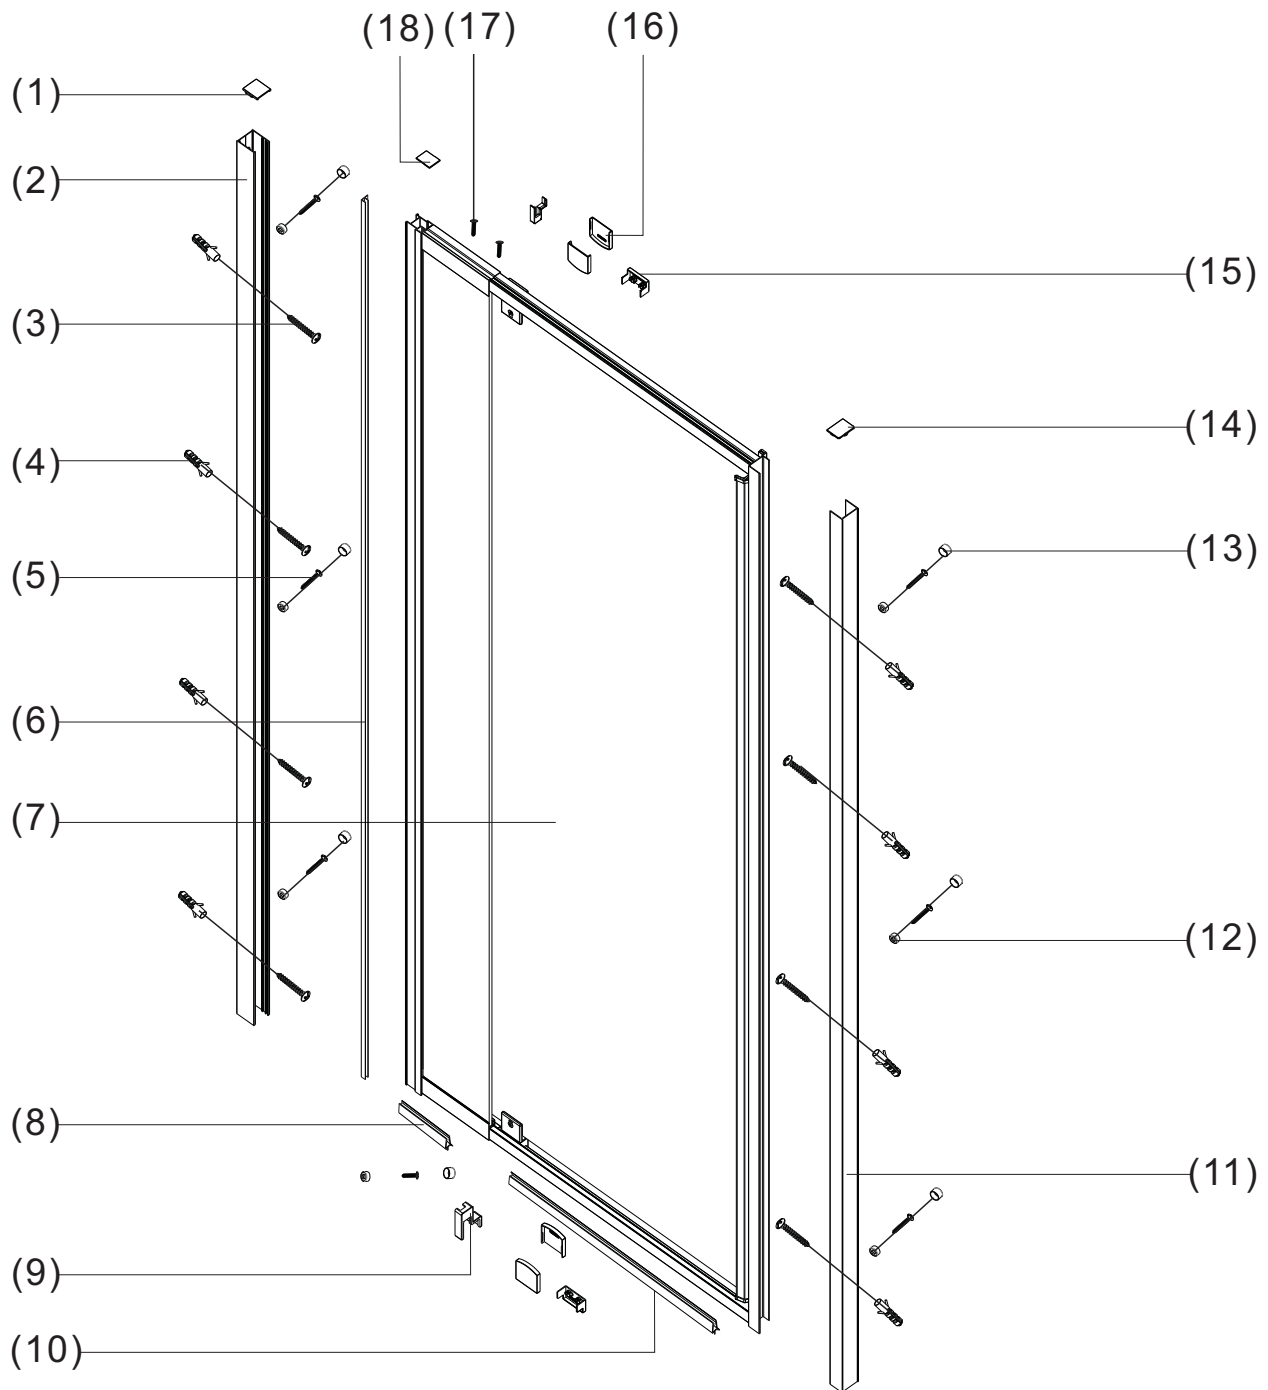

- (1) 1xWall Profile Cover A
- (2) 1xWall Post A
- (3) 8xScrews 4x30
- (4) 8xWall Plugs
- (5) 6xScrews 4x16
- (6) 1xVertical Seal
- (7) 1xClass Pivot Door
- (8) 1xBottom Seal A
- (9) 2x Guide Rail Covers (L+R)

- (10) 1xBottom Seal B
- (11) 1xWall Post B
- (12) 7x Screw Cover Clips
- (13) 7x Screw Cover Caps
- (14) 1xWall Profile Cover B
- (15) 2x Pivot Hinge Caps
- (16) 4x Glass Clips Covers
- (17) 3xScrews 4x10(Sink Head)
- (18) 1xVertical Profile Cover

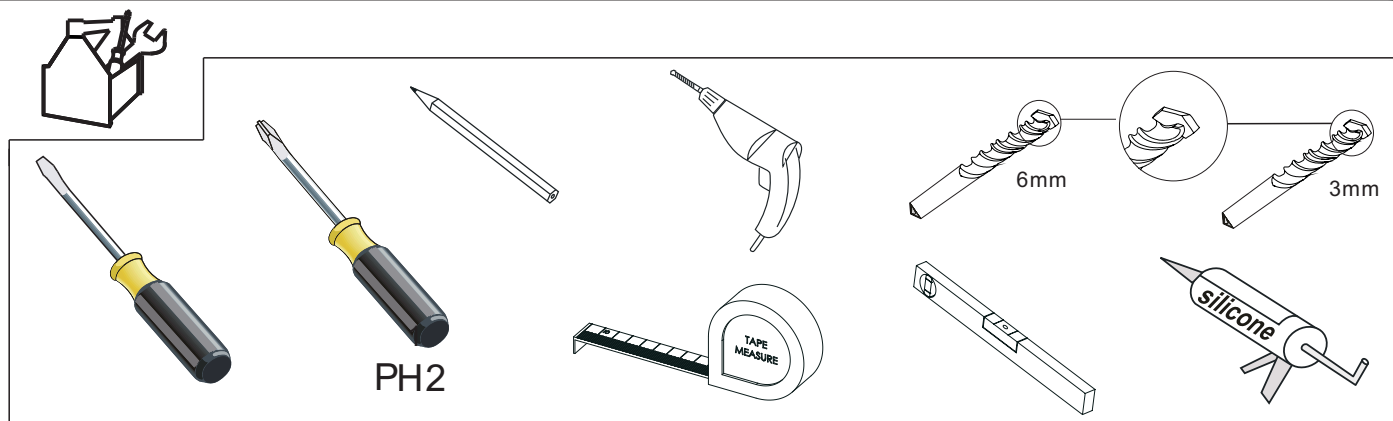



ASSEMBLY INSTRUCTIONS

If you require help, we advise you firstly contact a competent plumber


Installation Steps

Step 1


MAKE SURE THE TRAY IS LEVEL, USING A SPIRIT LEVEL, BEFORE INSTALLING THIS SHOWER PANEL / DOOR.

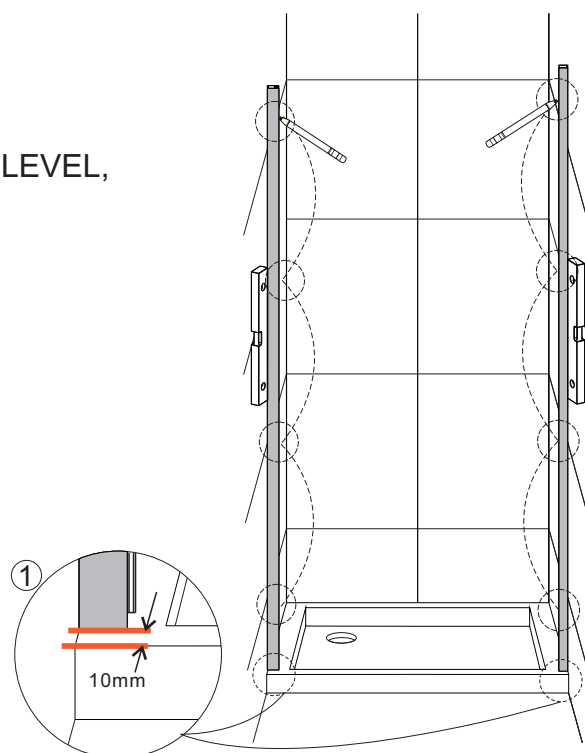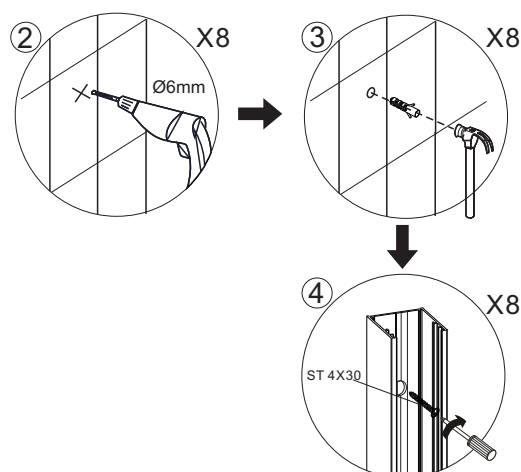


Step 2

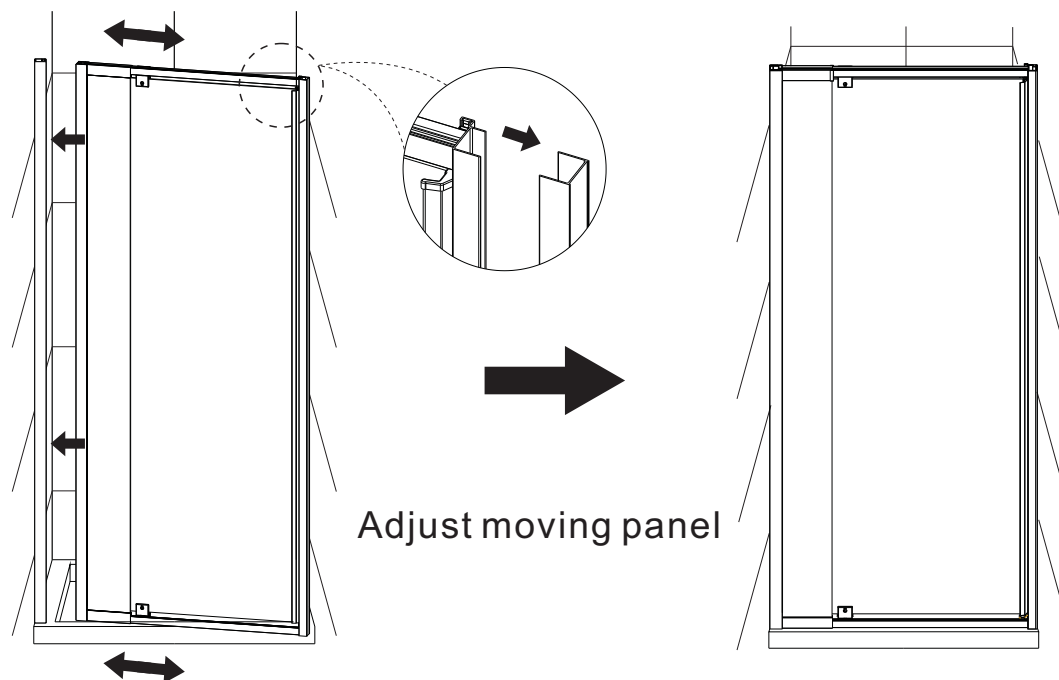


Step 3

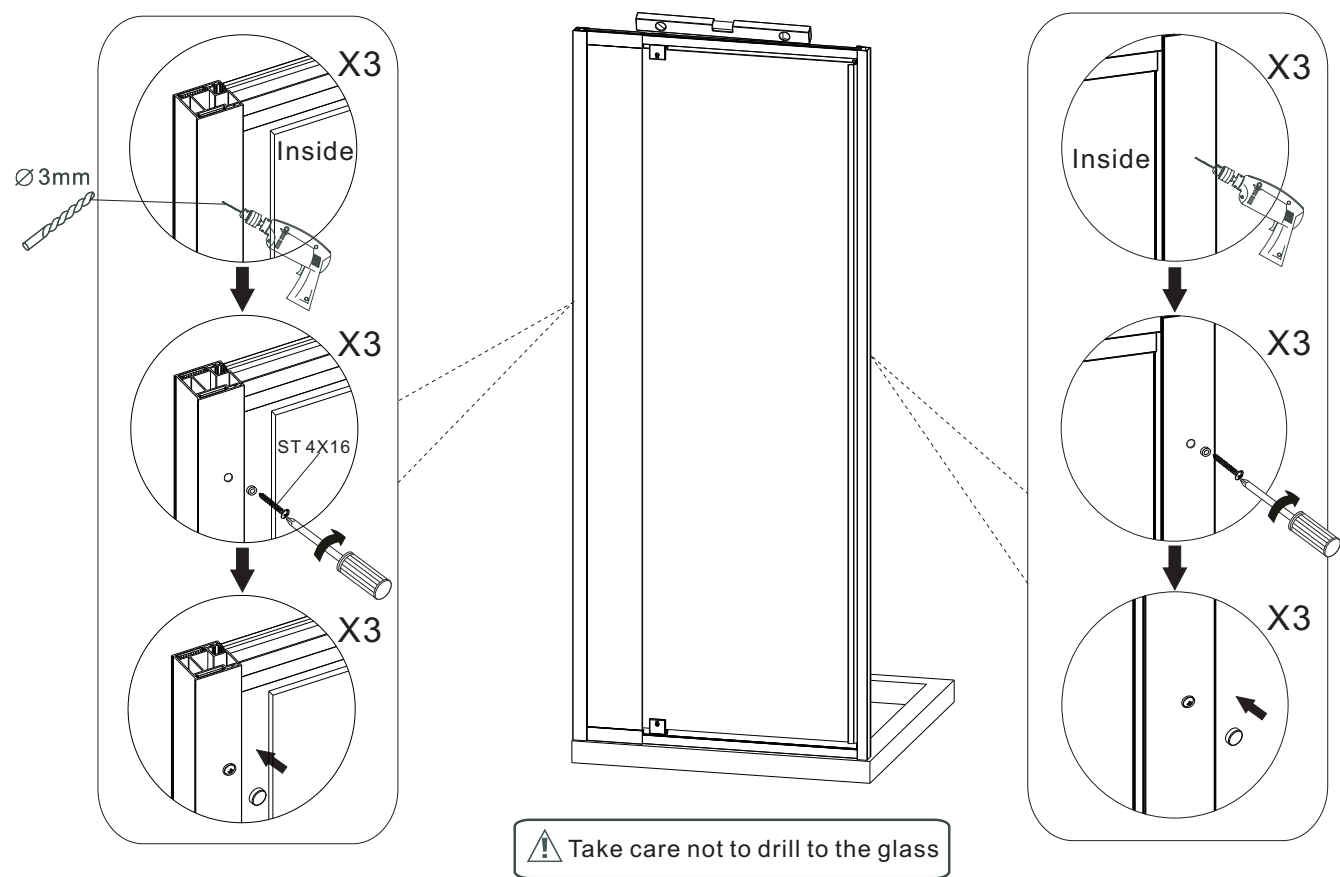

Step 4

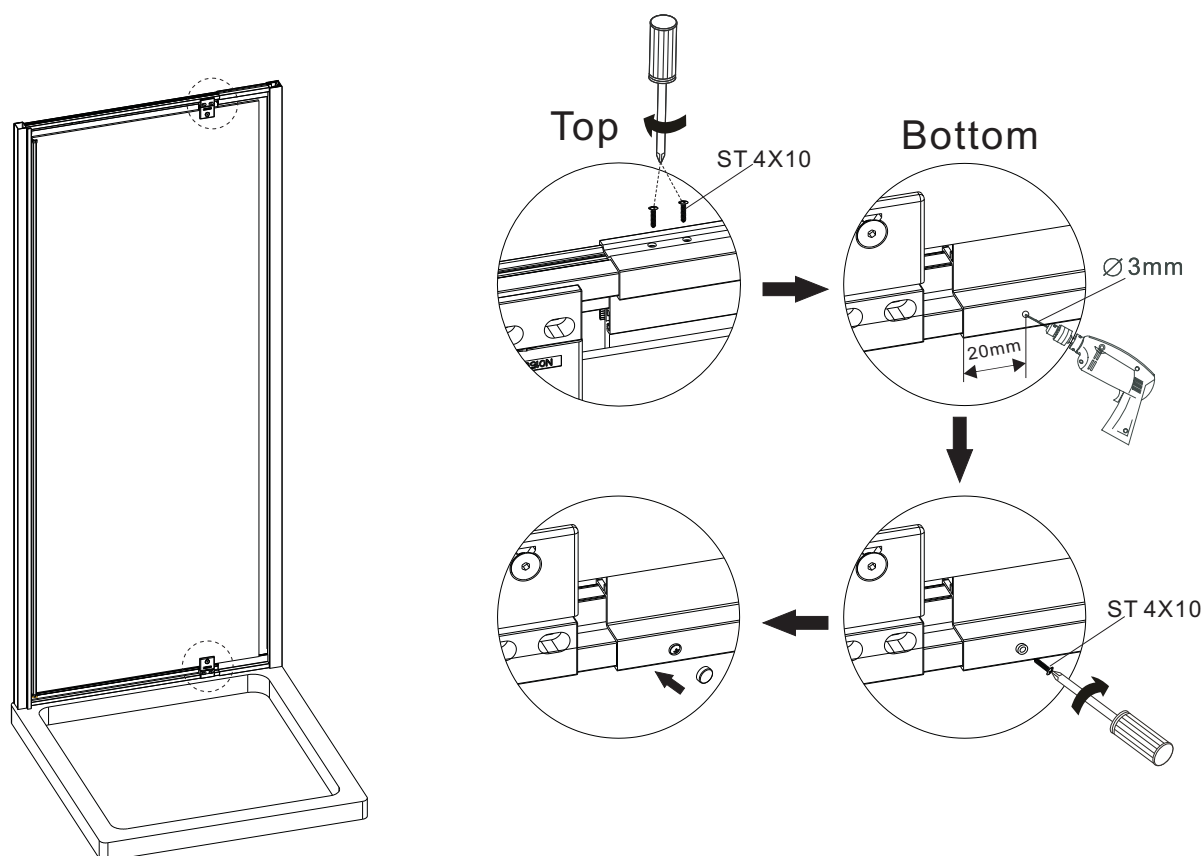

Step 5

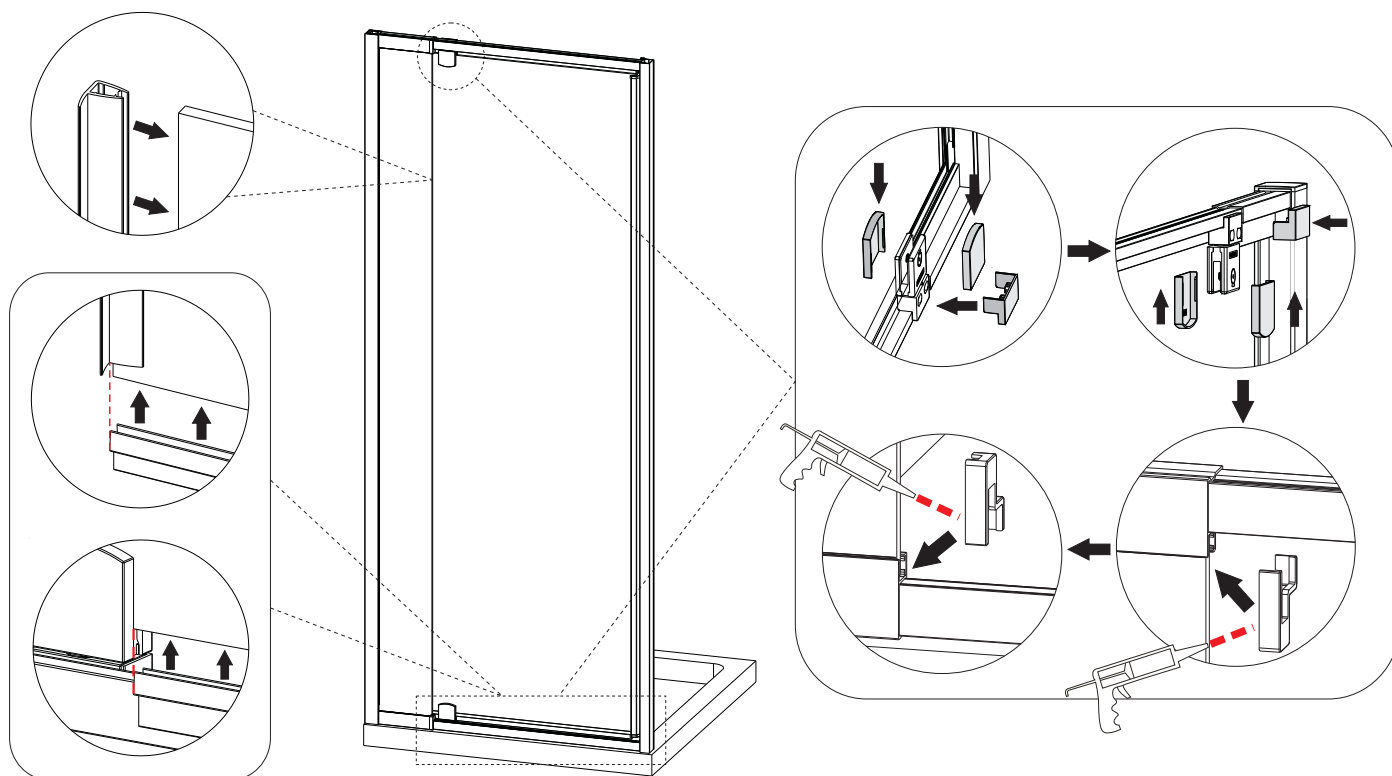

Step 6

