




Side Panel For Pivot Door

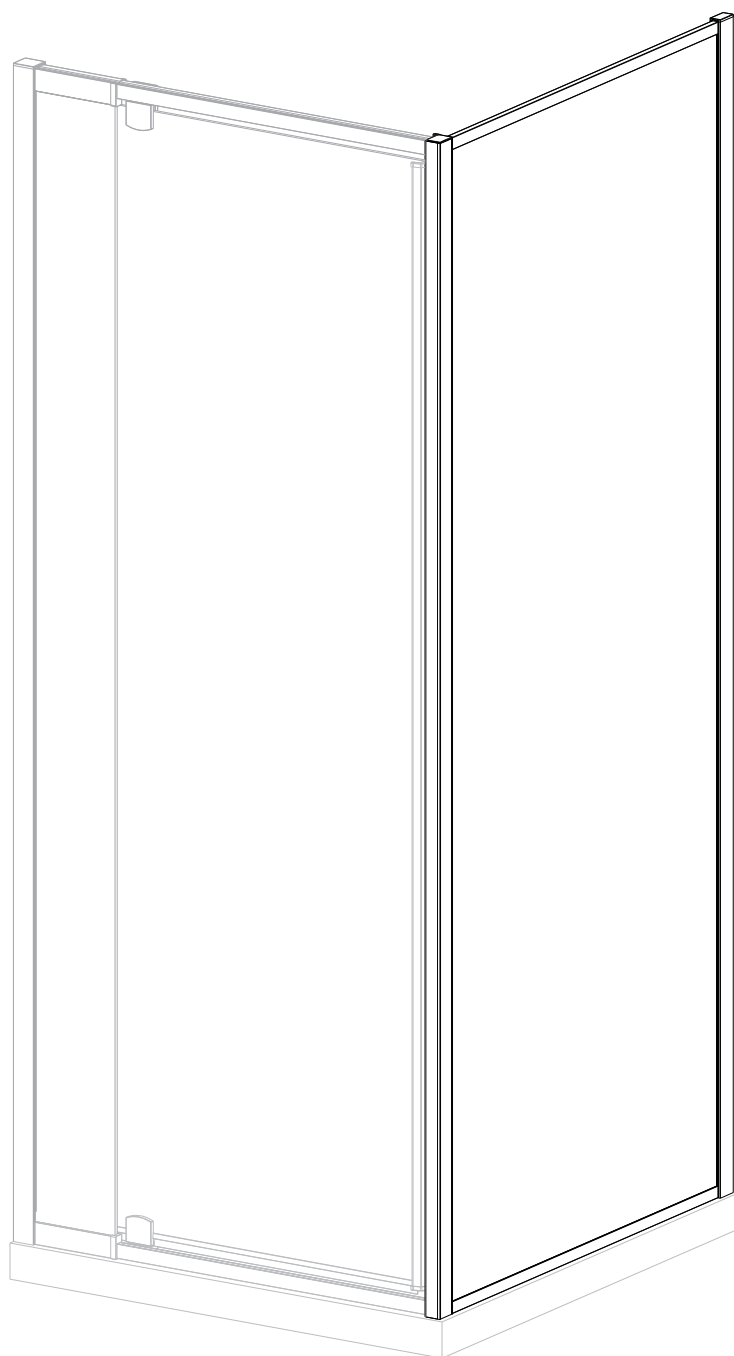

ASSEMBLY INSTRUCTIONS-DRAWING

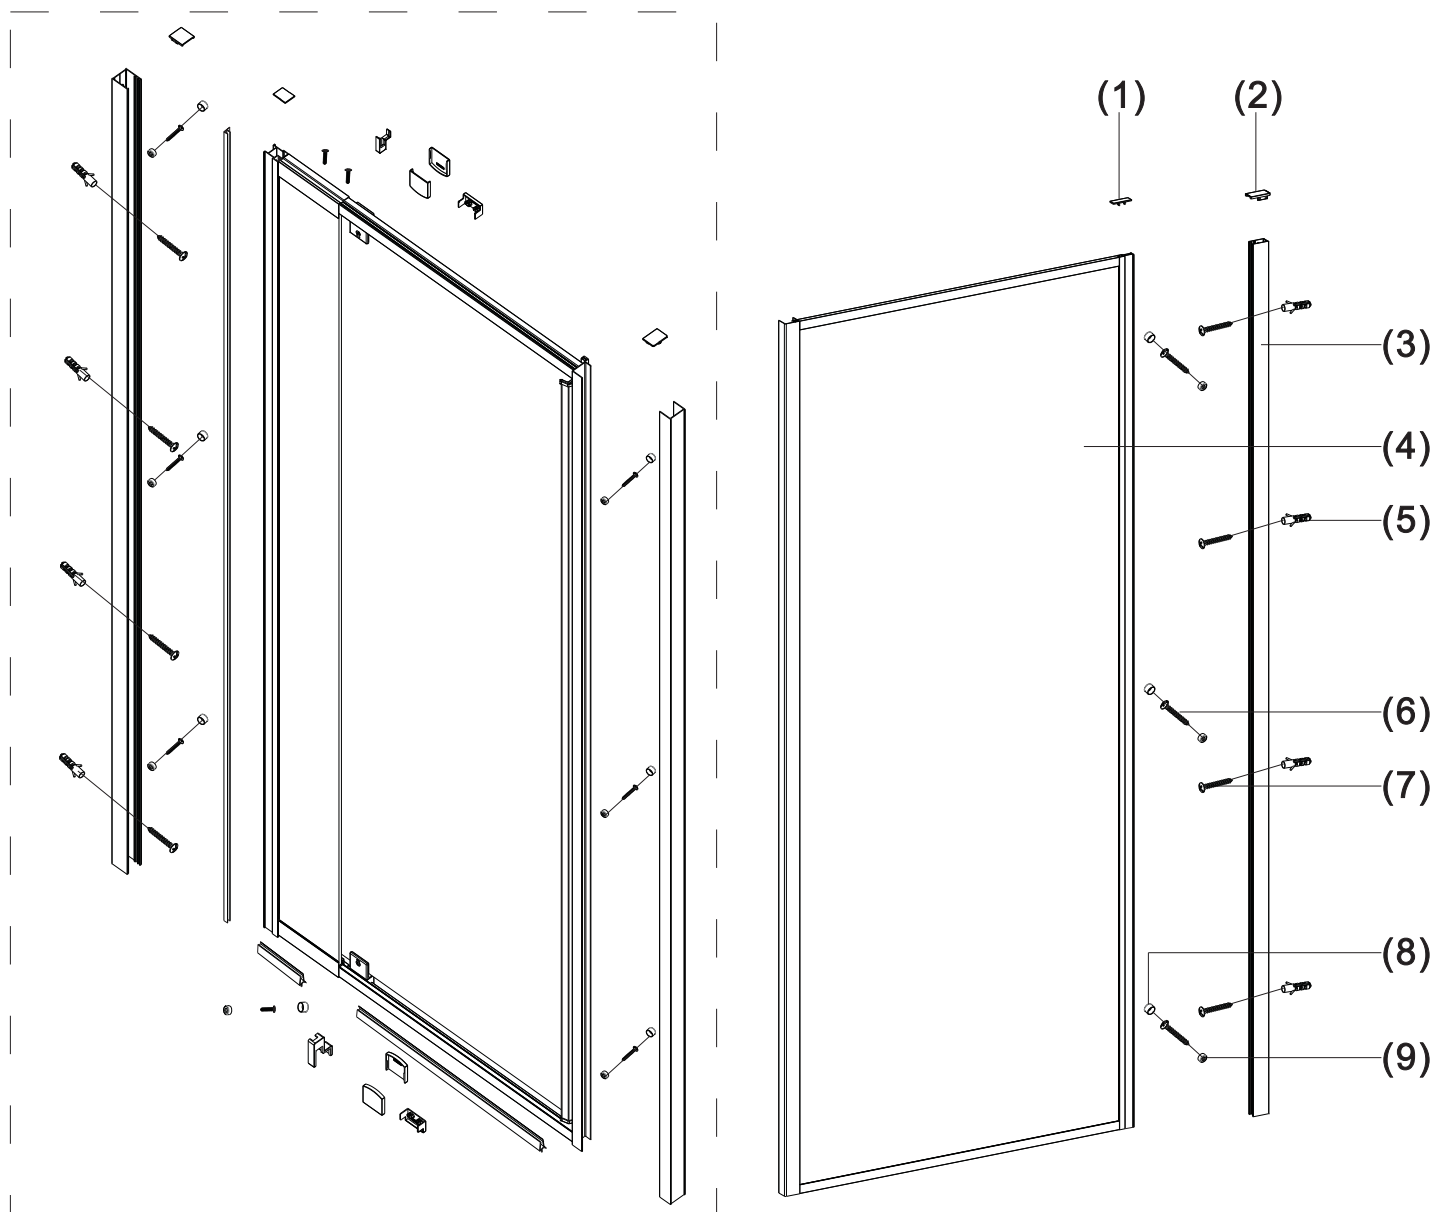

- (1) 1xVertical Profile Cover
- (2) 1xWall Profile Cover
- (3) 1xWall Post
- (4) 1xSide Panel
- (5) 4xWall Plugs
- (6) 3xScrews 4x16
- (7) 4xScrews 4x30
- (8) 3x Screw Cover Caps
- (9) 3x Screw Cover Clips

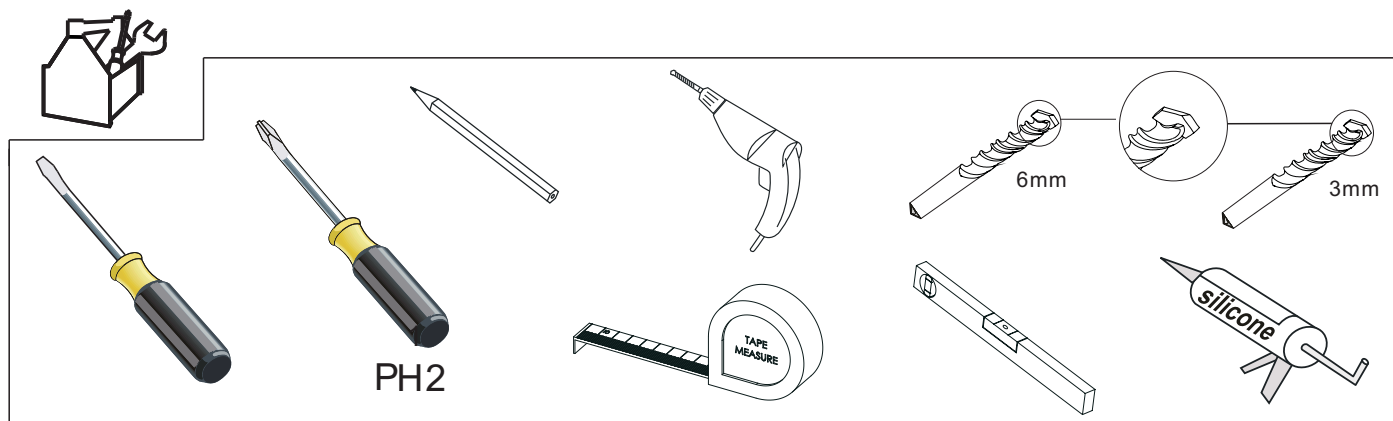

ASSEMBLY INSTRUCTIONS

If you require help, we advise you firstly contact a competent plumber

Installation



Steps

Step 1


MAKE SURE THE TRAY IS LEVEL, USING A SPIRIT LEVEL, BEFORE INSTALLING.

THIS SHOWER PANEL / DOOR.


CODE	A	B
SS01-900	820-900	N/A
SS01-1200	1060-1200	N/A
SS01-SF855	N/A	835-845

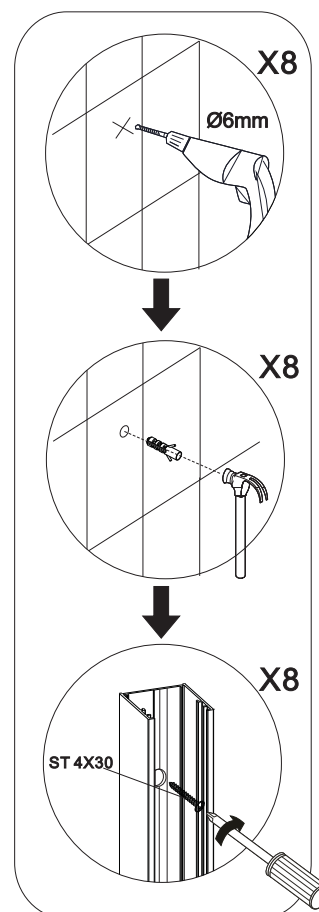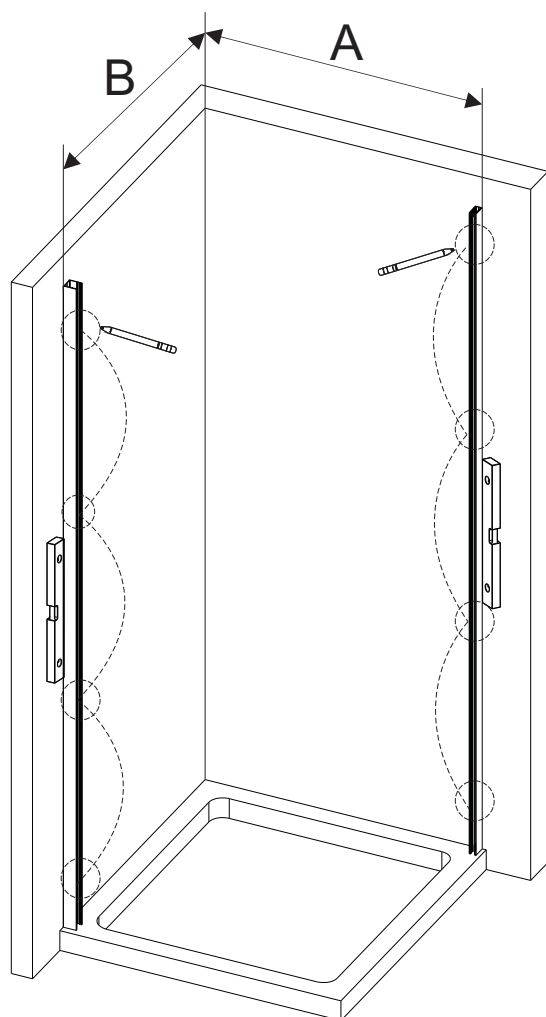

Step 2

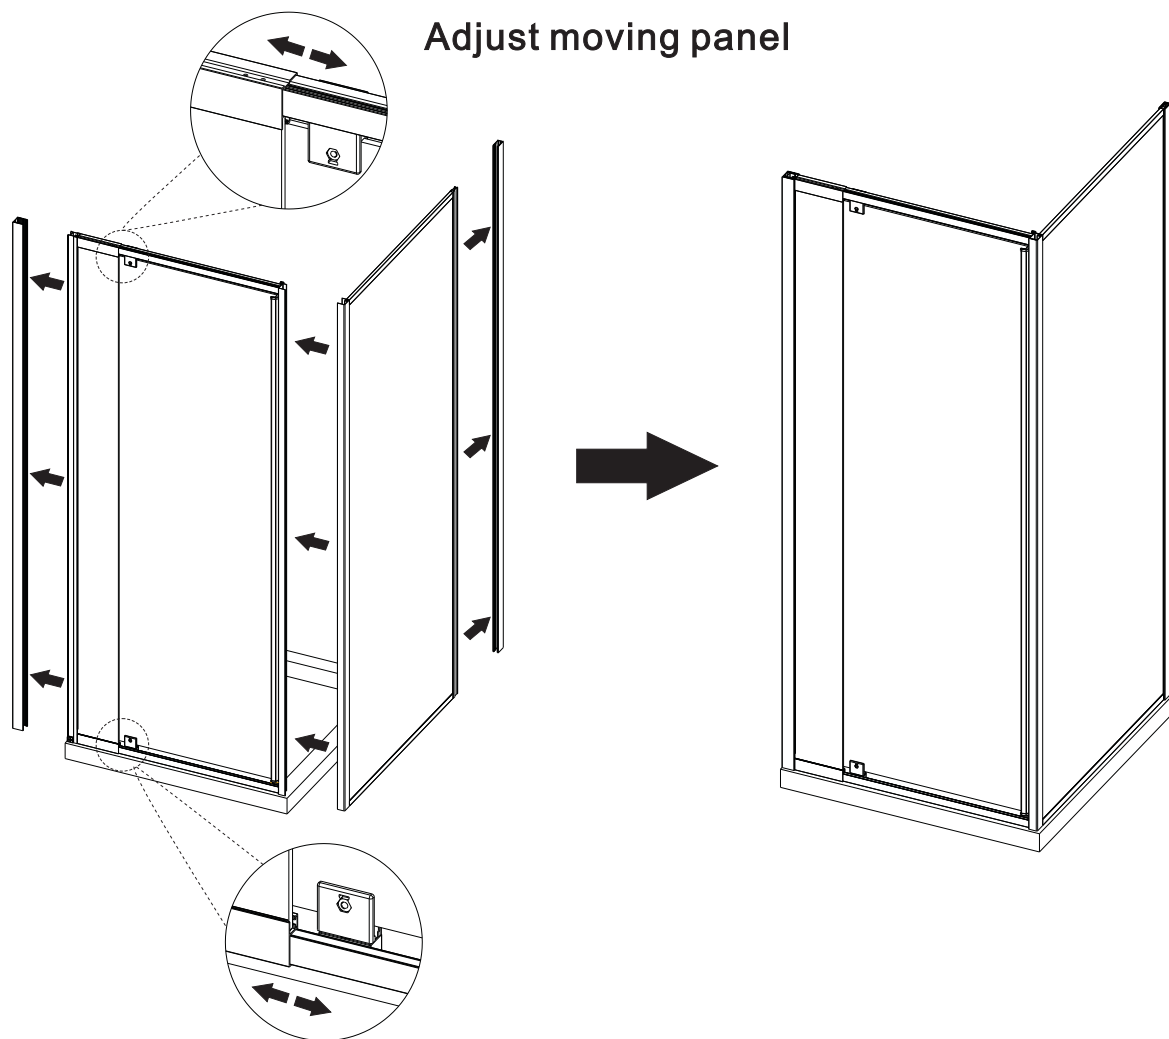


Step 3

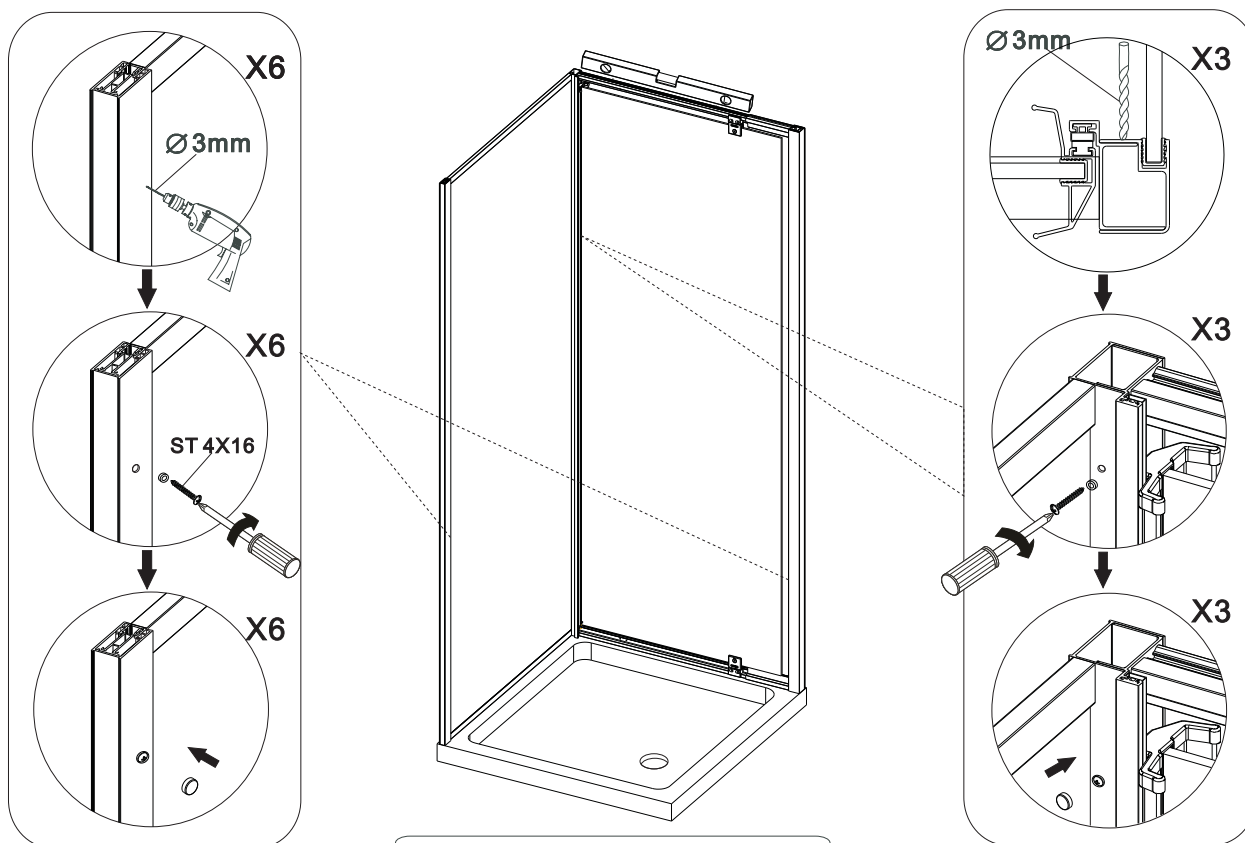


 **Take care not to drill to the glass**


Step 4

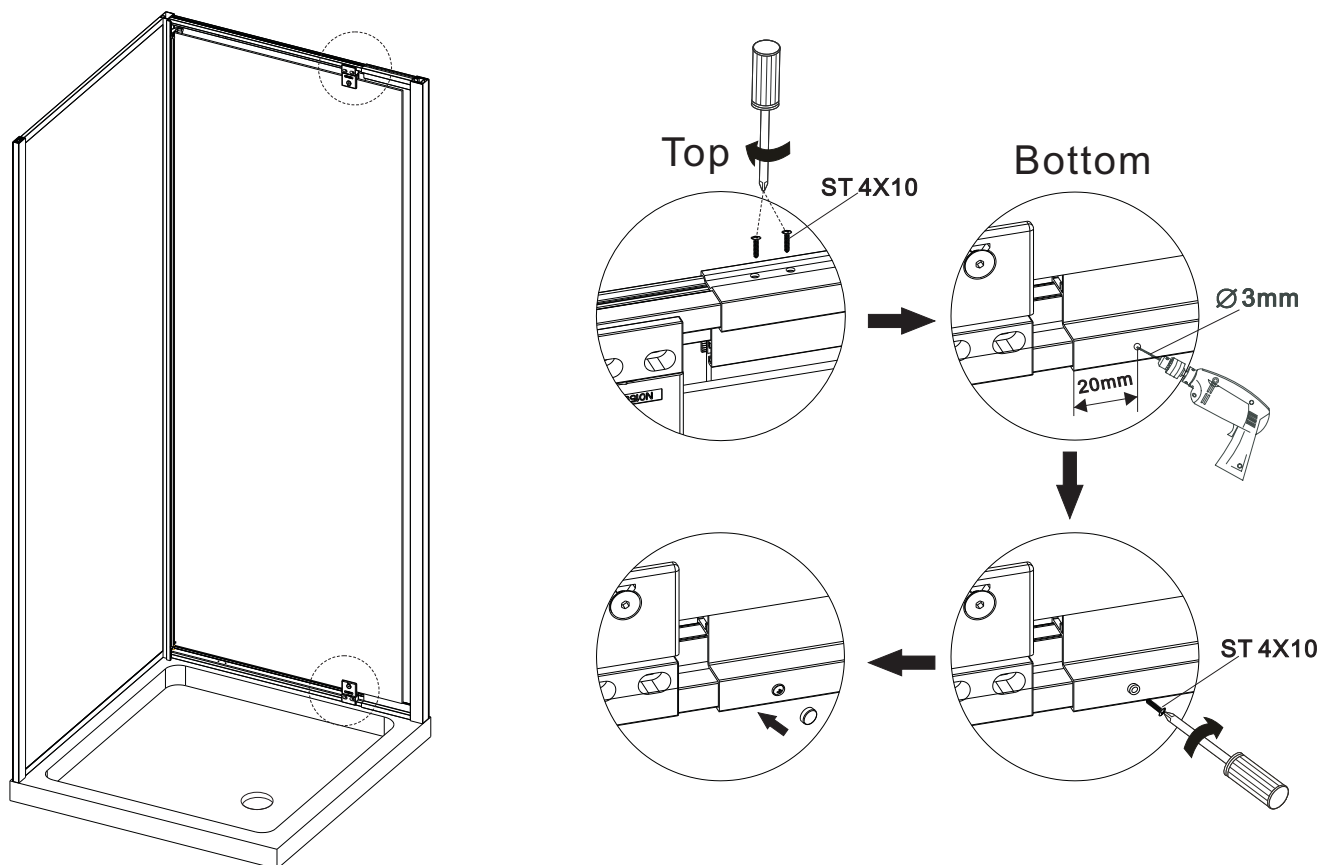


Step 5

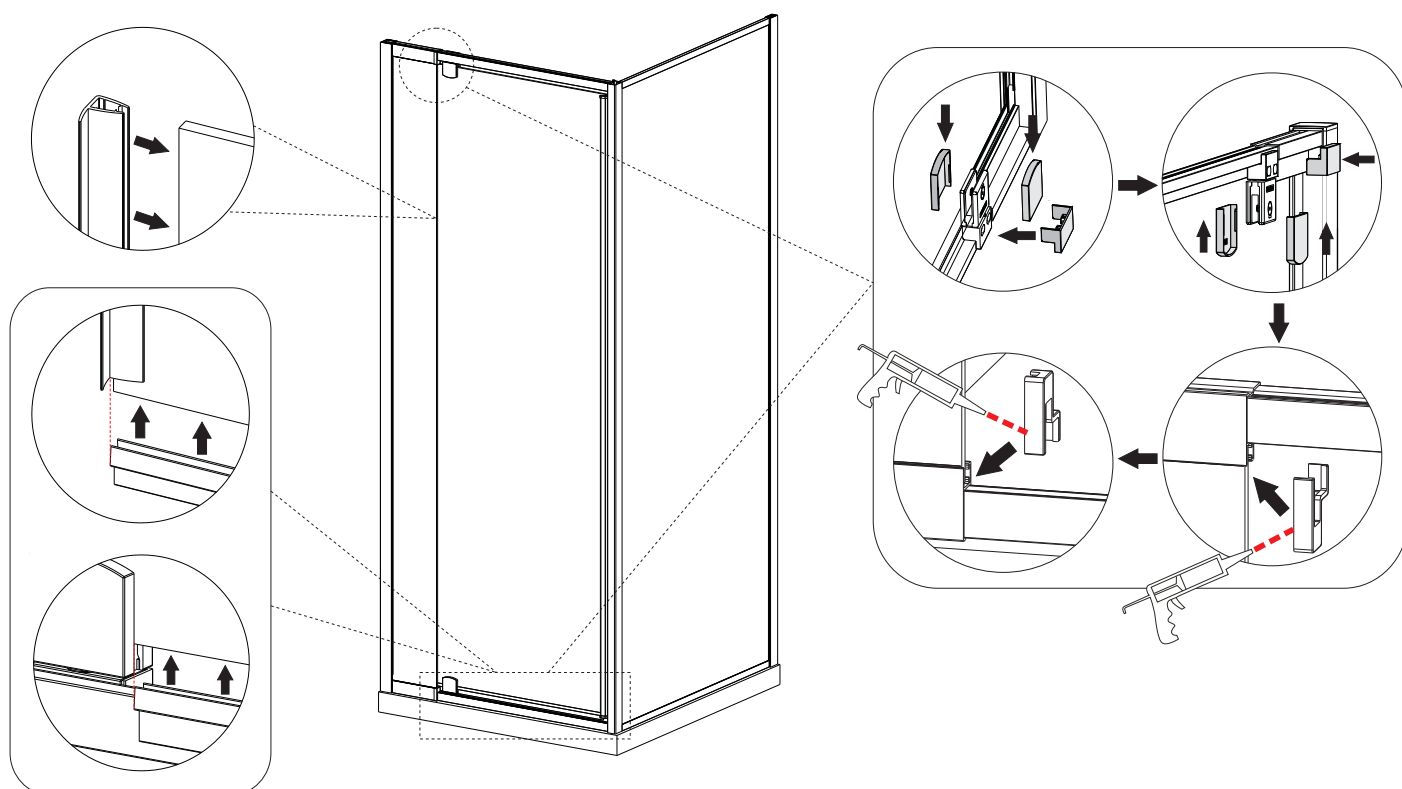

Step 6

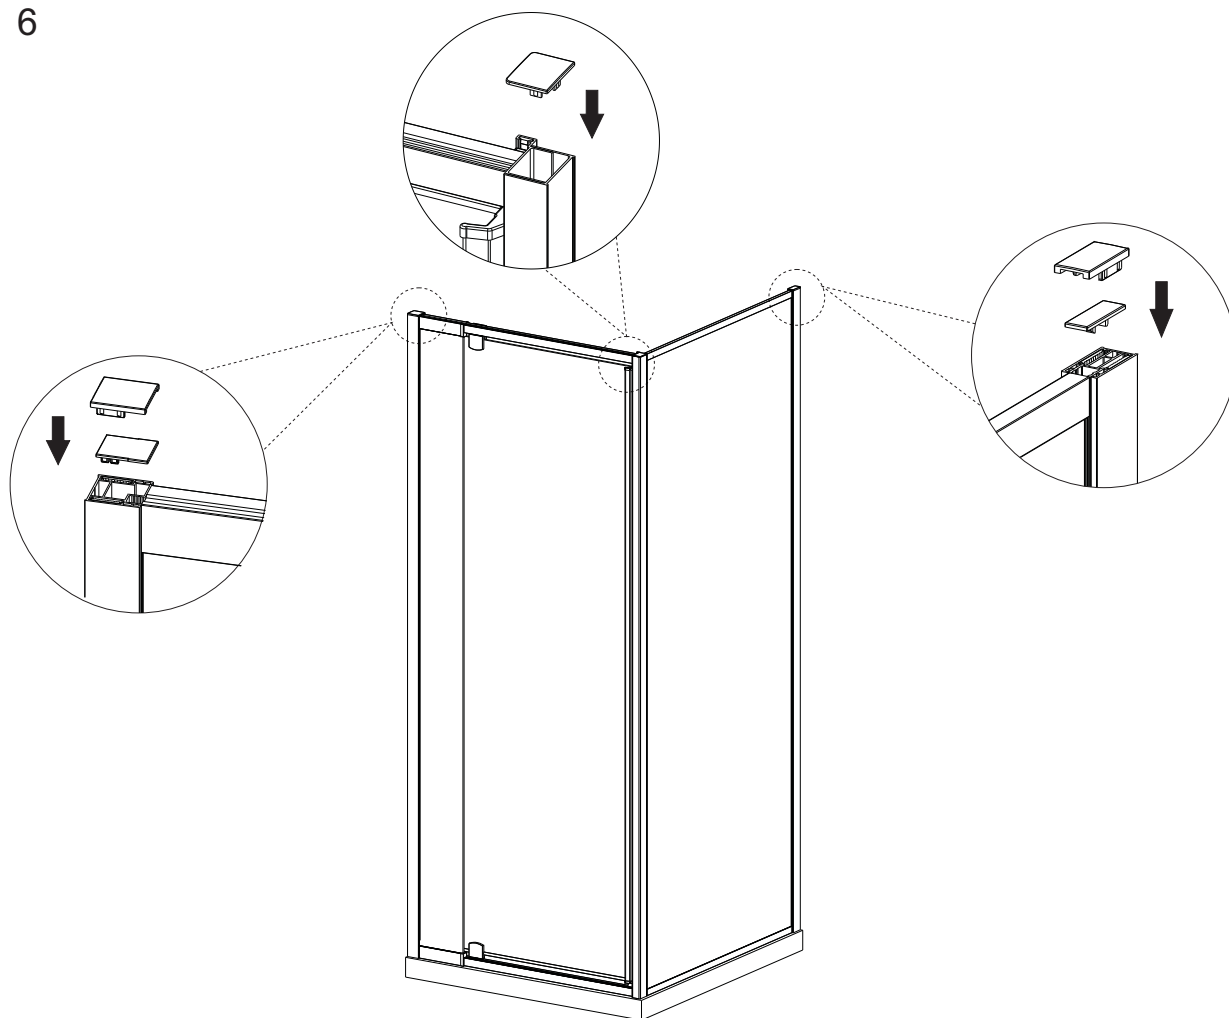

Step 7

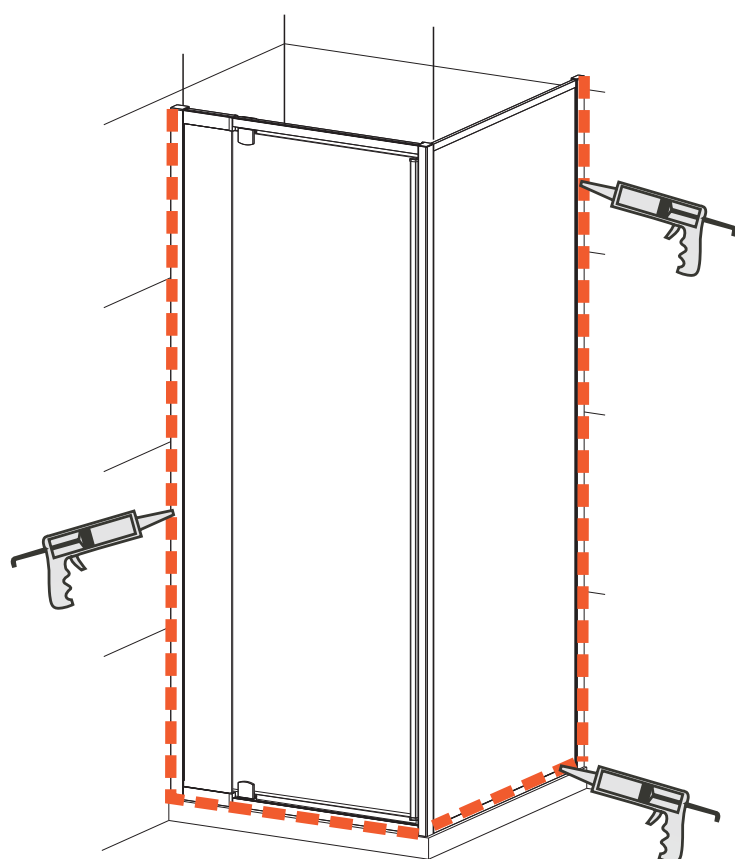

Silicone (inside edge only) where the vertical profiles meet the wall, and the horizontal profile meets the tray