



CORNER DOOR

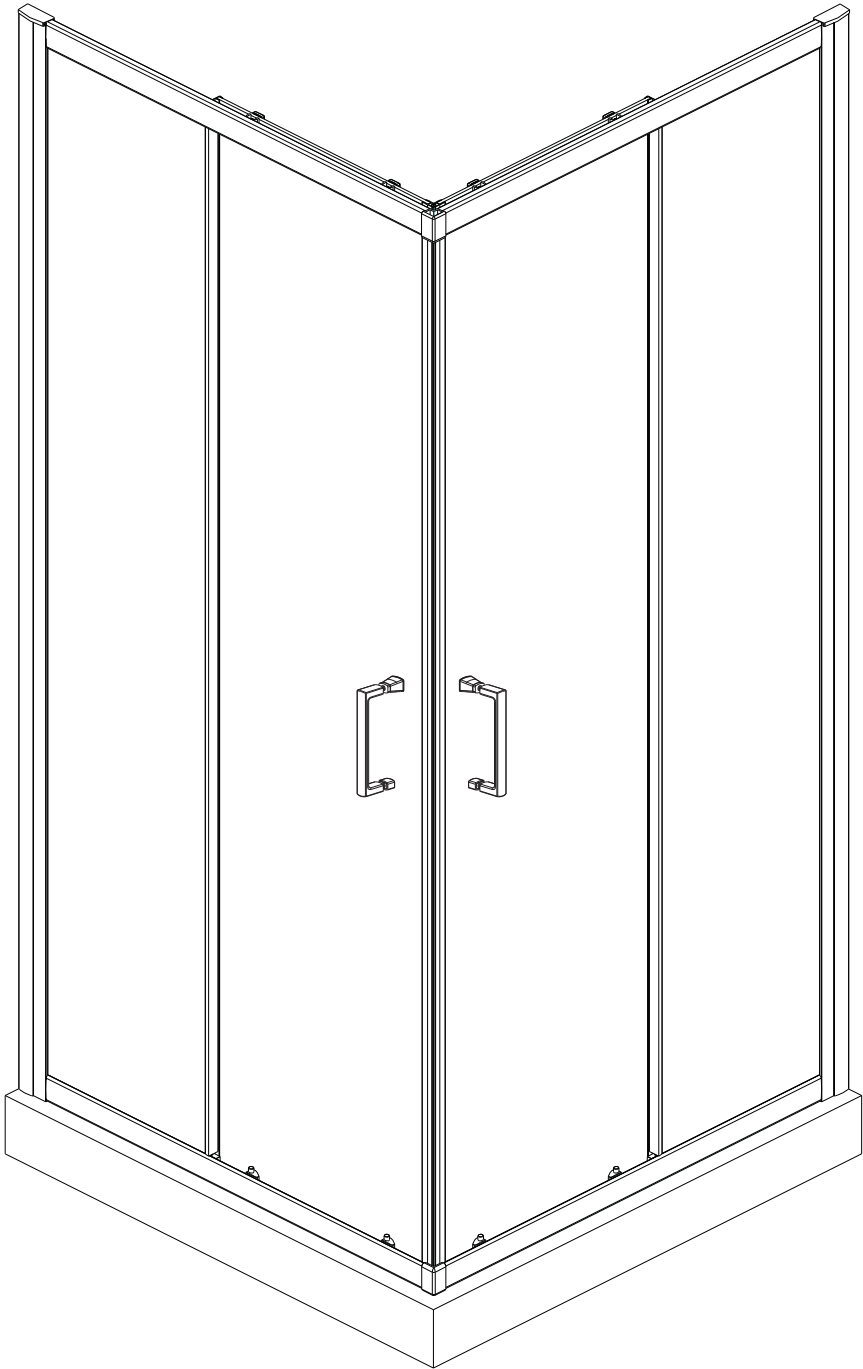


ASSEMBLY INSTRUCTIONS-DRAWING

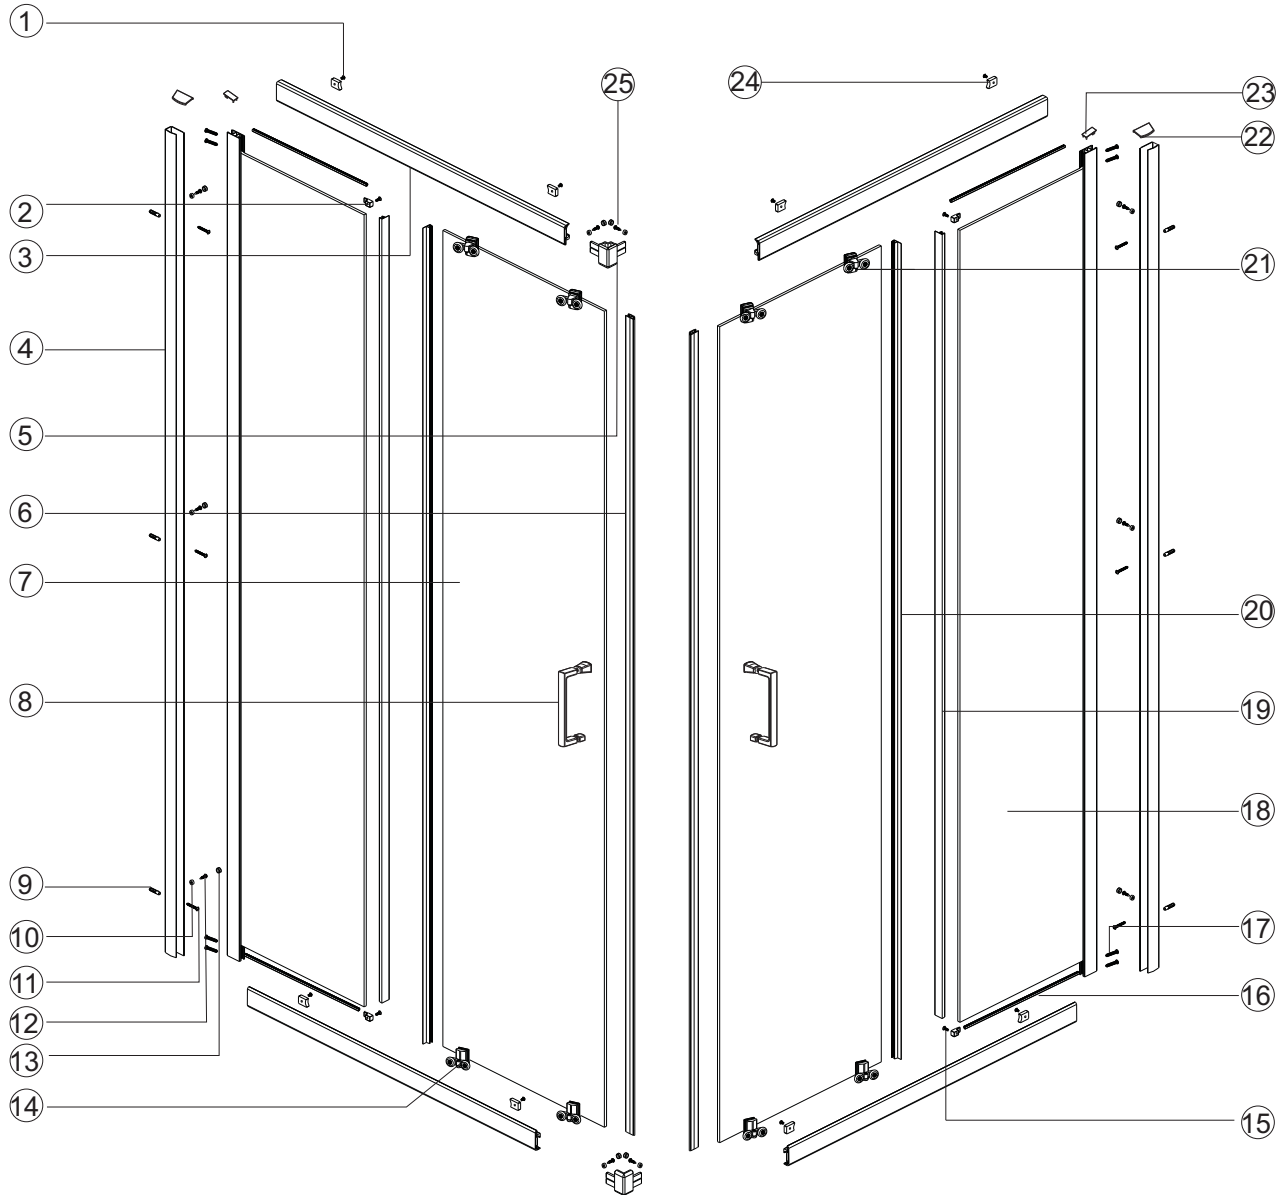

- (1) 8xRoller Stop Screws (4x8)
- (2) 4xFixed Glass Clips
- (3) 4xTop And Bottom Profiles
- (4) 2xWall Profiles
- (5) 2xCorner Brackests
- (6) 2xMagnet Seals
- (7) 2xMoving Panels
- (8) 2xHandles
- (9) 6xWall Plugs
- (10)10xCover Cap Clips
- (11) 6xFixing Frame Screws (4x30)
- (12) 6xScrews (4x12)
- (13) 10xScrew Cover Caps

- (14) 4xBottom Rollers
- (15) 4xFixed Glass Clip Screws (4x12)
- (16) 4xTop And Bottom Seals
- (17) 8xScrews (3.5x30)
- (18) 2xFixed Panels
- (19) 2xUpright Seals For Fixed Panel
- (20) 2xUpright Seals For Moving Panel
- (21) 4xTop Rollers
- (22) 2xWall Profile Cover Caps
- (23) 2xUpright Profile Cover Caps
- (24) 8xRoller Stops
- (25) 4xScrews (4x6)

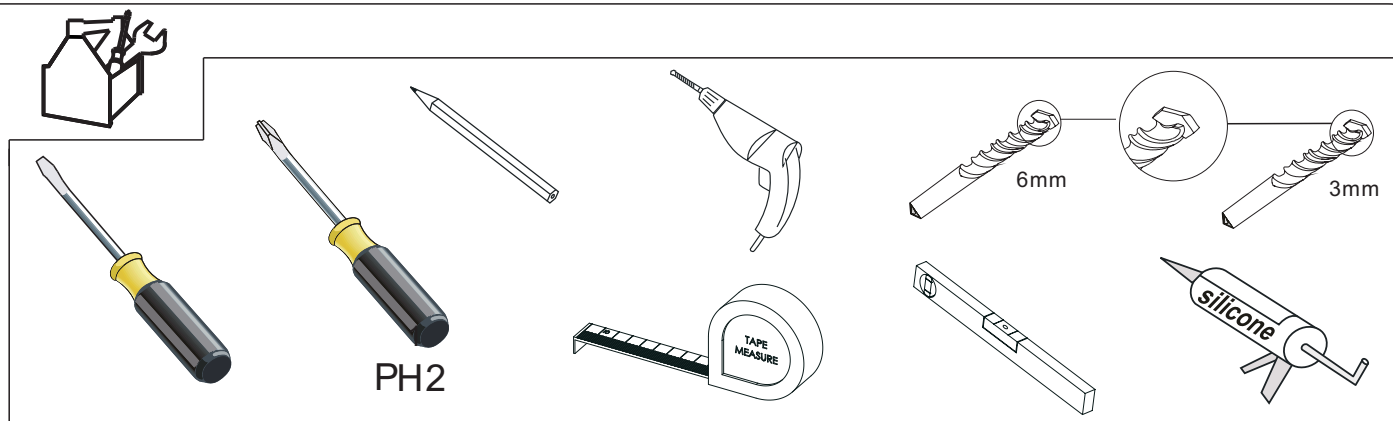

ASSEMBLY INSTRUCTIONS




If you require help, we advise you firstly contact a competent plumber Installation

Step 1

MAKE SURE THE TRAY IS LEVEL, USING A SPIRIT LEVEL, BEFORE INSTALLING.


THIS SHOWER PANEL / DOOR.

Step 2

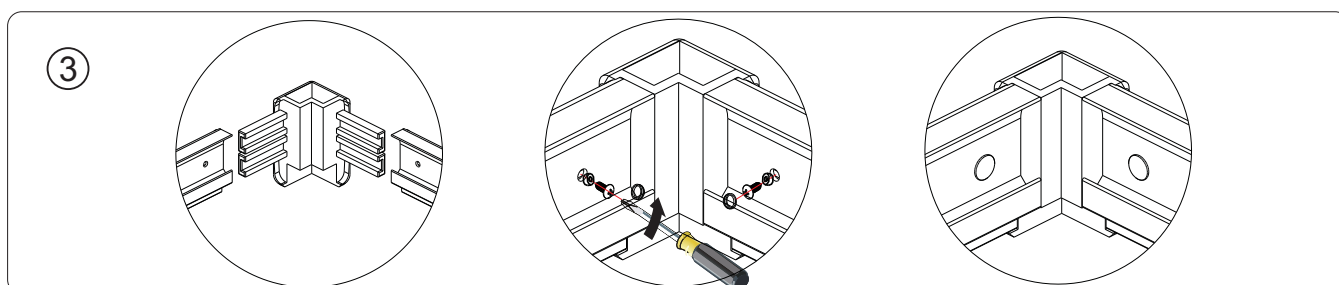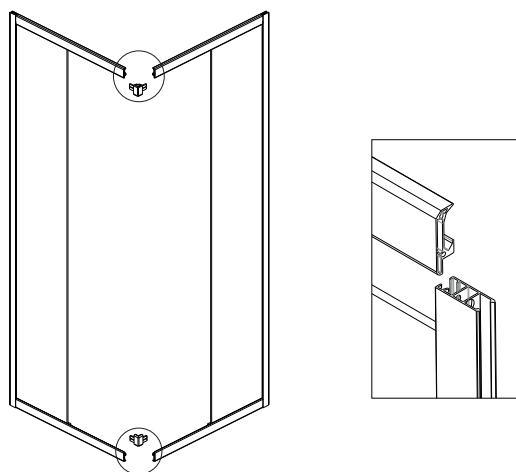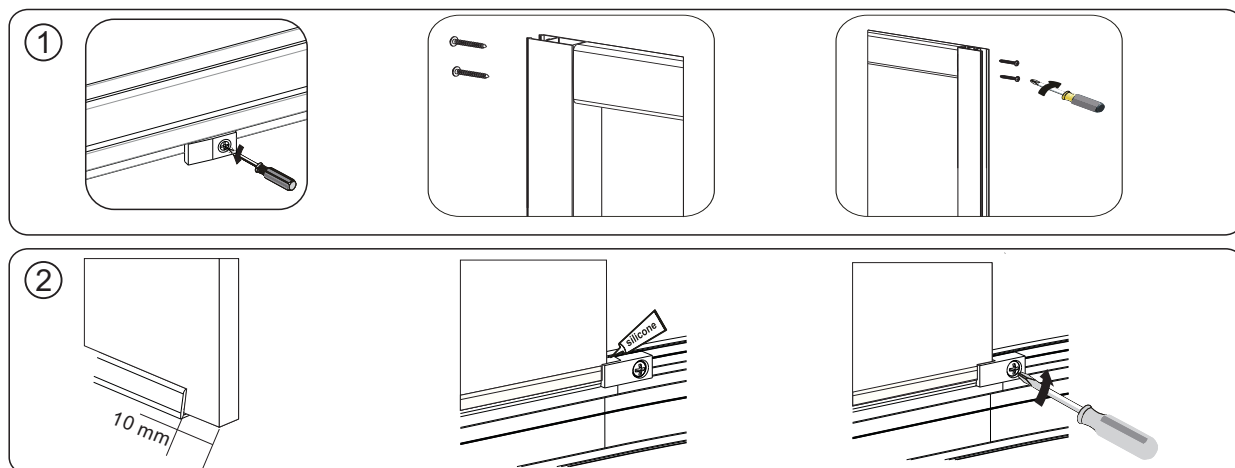


INSIDE


Step 3

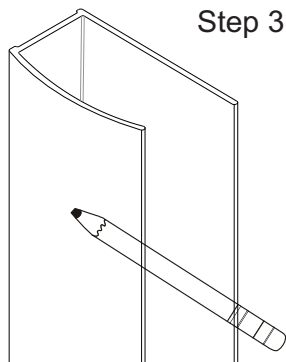


Ø6mm

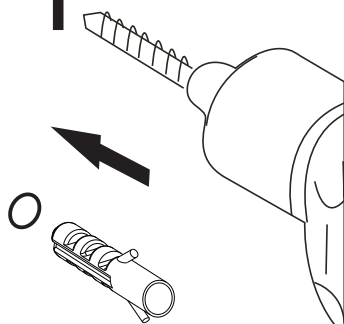


Step 4

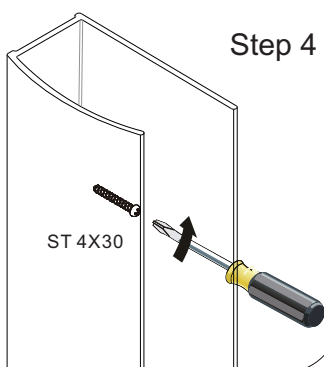


ST 4X30

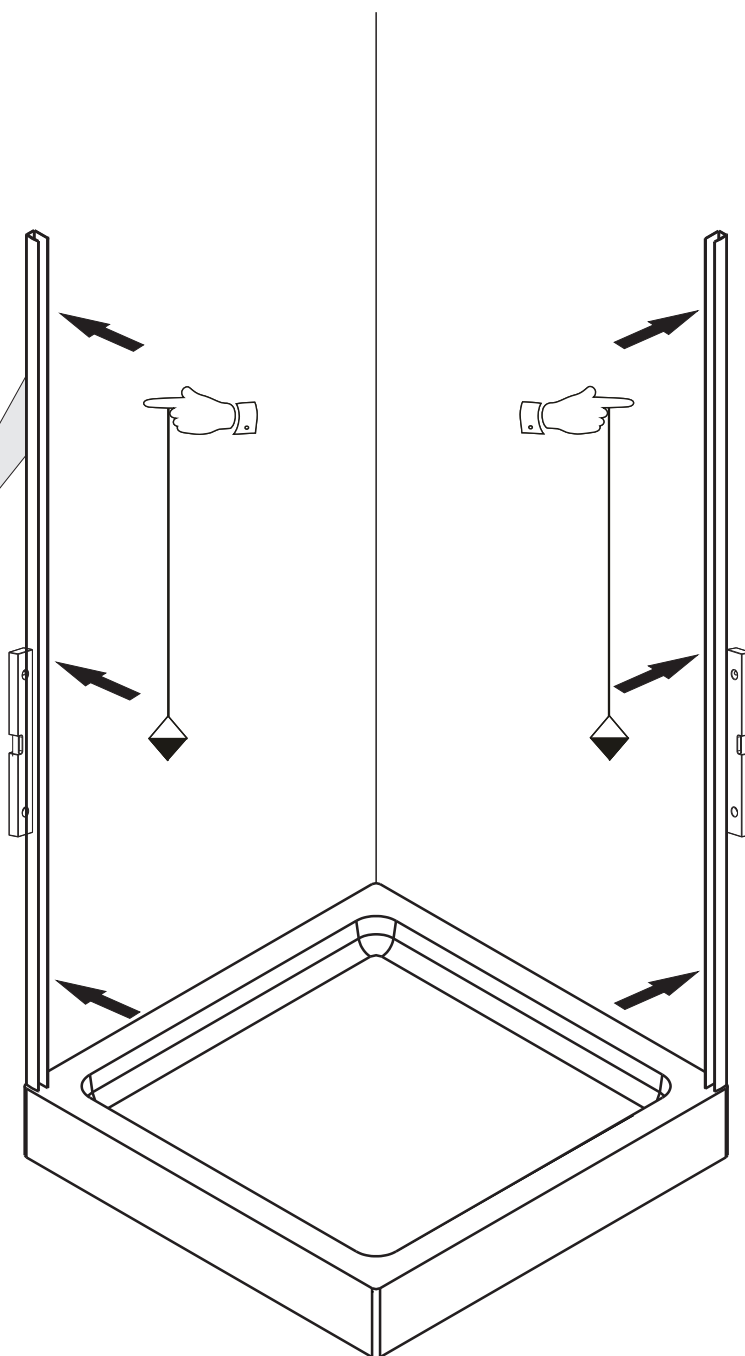


Step 5

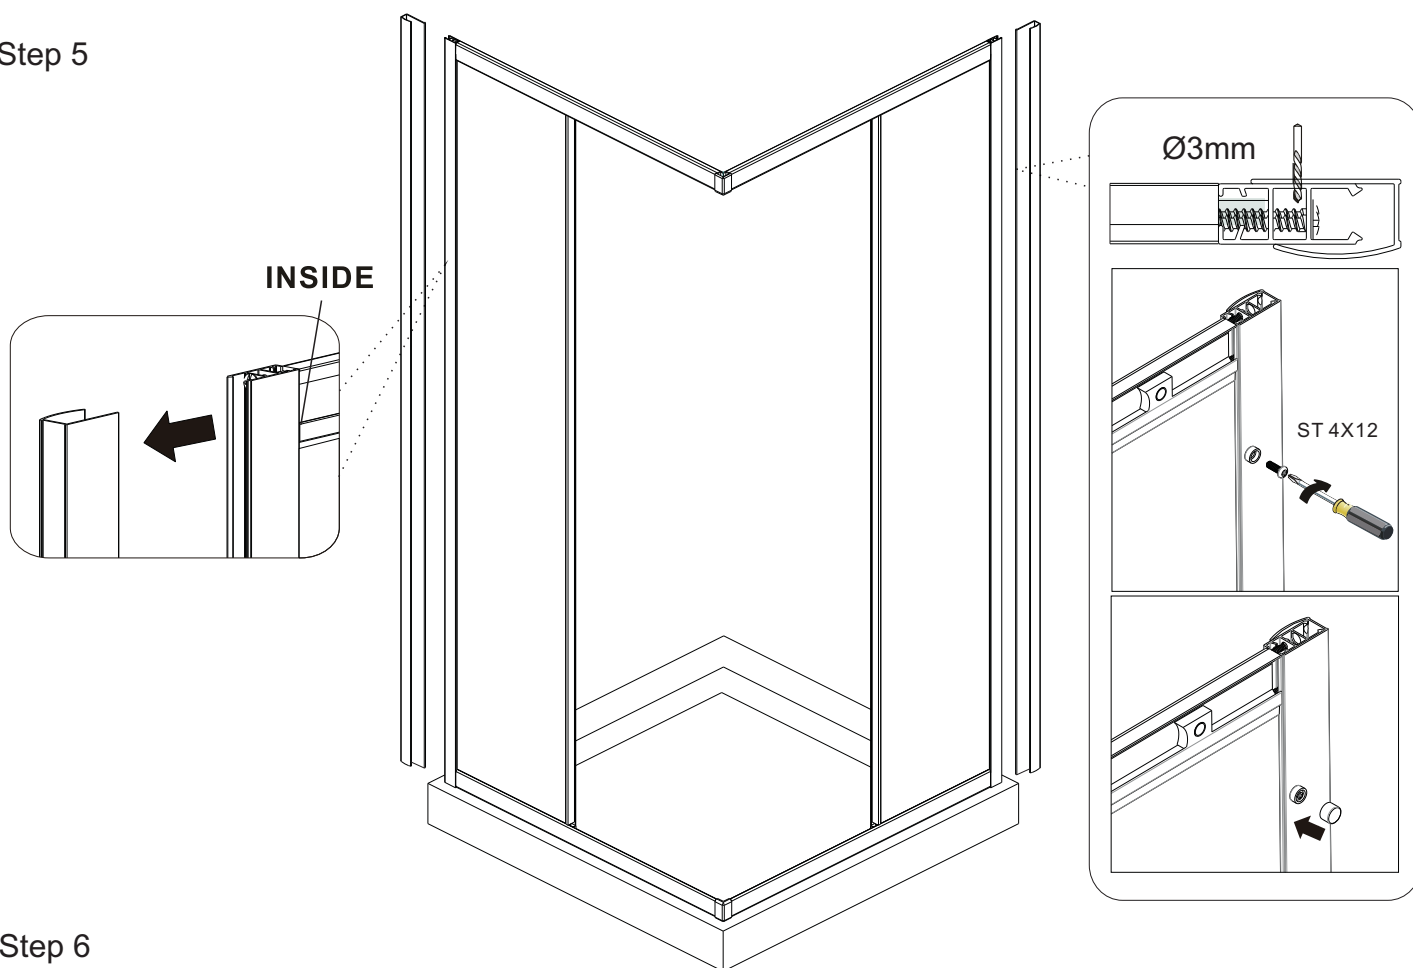


Step 6

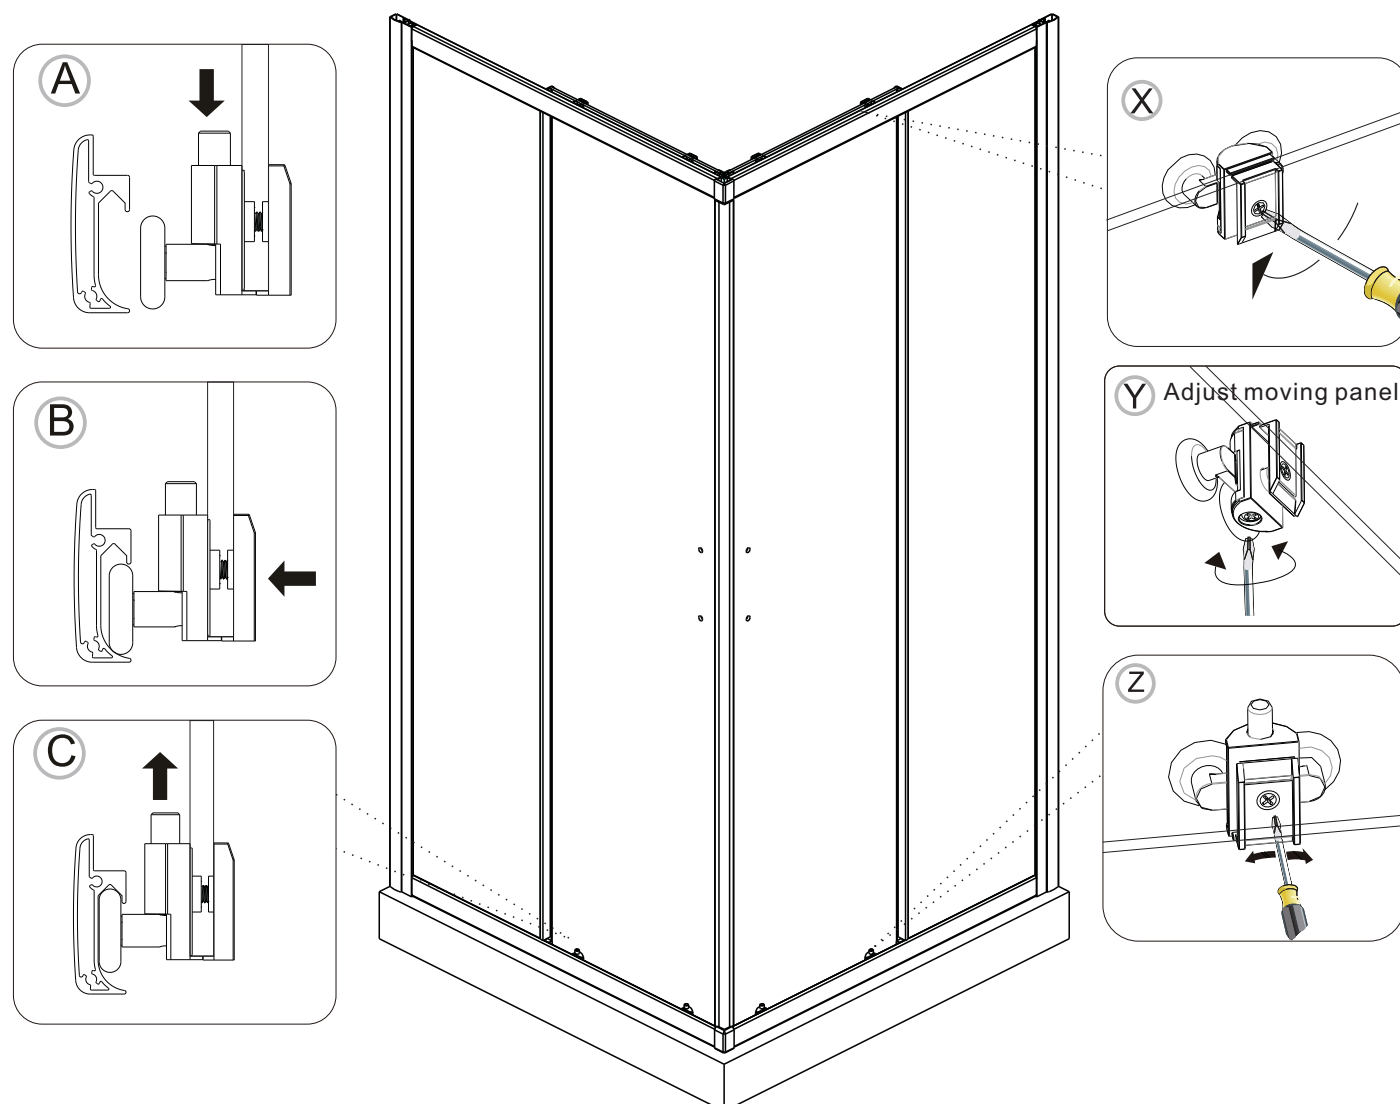

Step 7

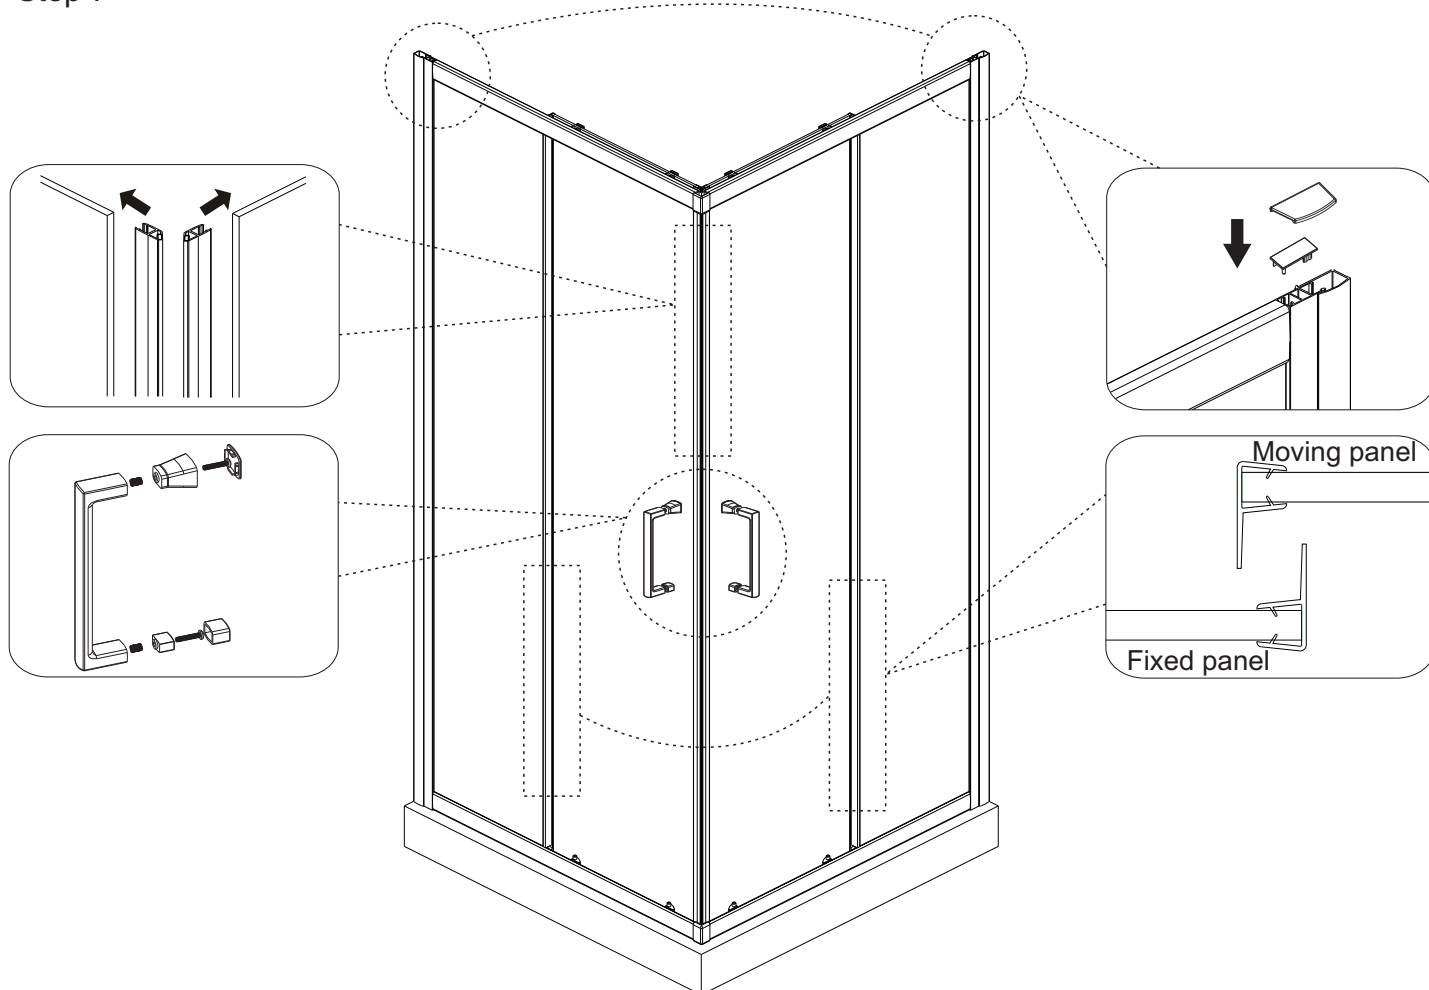

Step 8

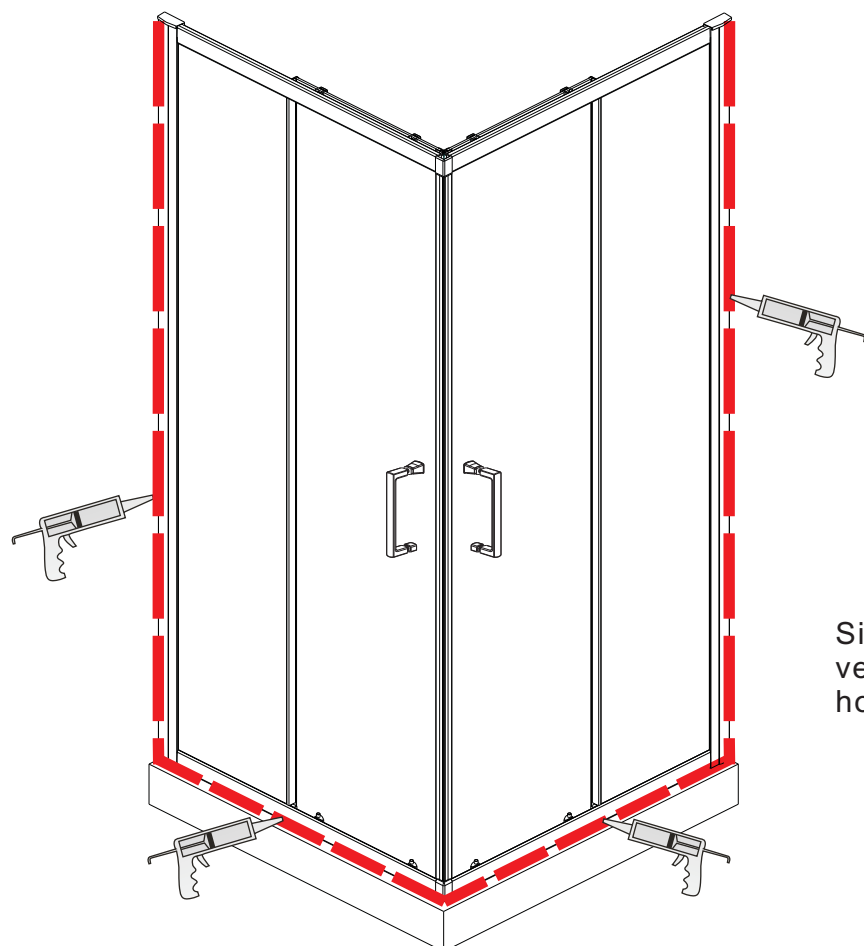

Silicone (inside edge only) where the vertical profiles meet the wall, and the horizontal profile meets the tray