



8mm SLIDING DOOR

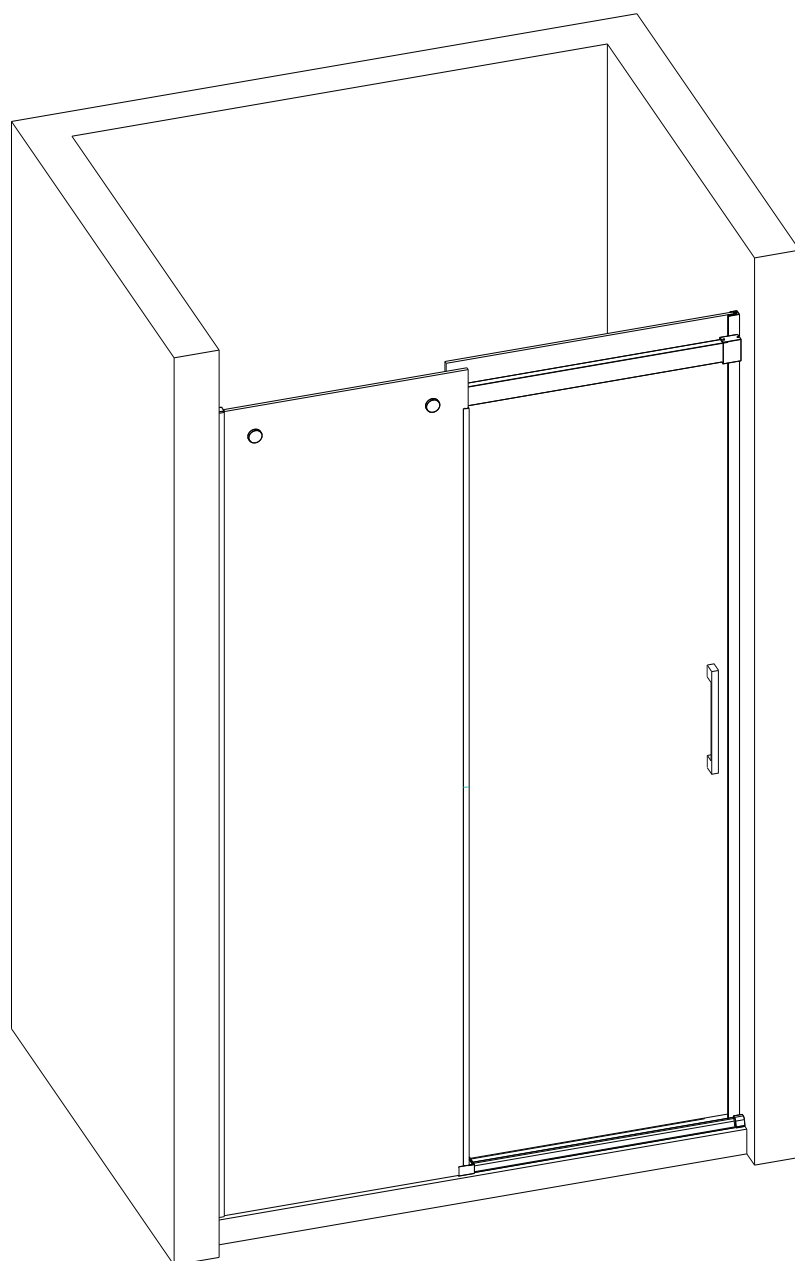

ASSEMBLY INSTRUCTIONS-DRAWING

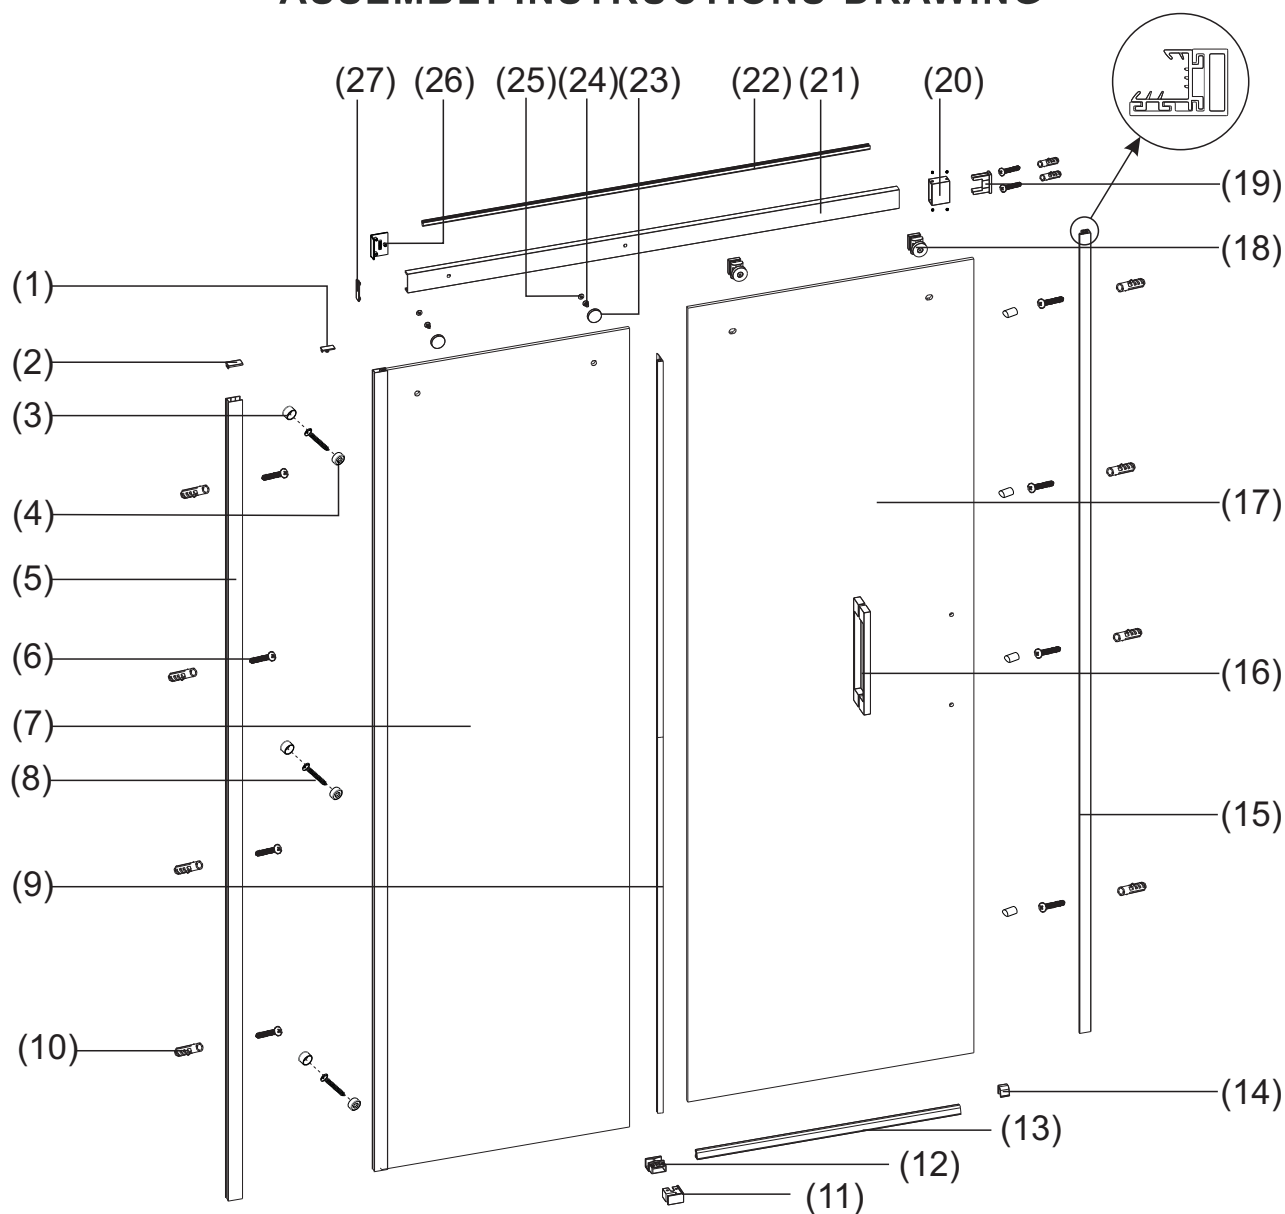

(1) 1x Vertical Profile Cover Cap

(2) 1x Wall Profile Cover Cap

(3) 3x Screw Cover Caps

(4) 3x Screw Cover Clips

(5) 1x Wall Profile A

(6) 10x Screws (4x30)

(7) 1x Fixed Panel

(8) 3x Screws (4x12)

(9) 1x Fixed Panel Seal

(10) 10x Wall Plugs

(11) 2x Bottom Guide Blocks Part A (L+R)

(12) 1x Bottom Guide Blocks Part B

(13) 1x Drip Strip

(14) 2x Drip Strip End Caps (L+R)

(15) 1x Wall Profile B

(16) 1x Handle

(17) 1x Moving Panel

(18) 2x Rollers

(19) 1x Wall Fixing Seat

(20) 1x Adjustment Bracket

(21) 1x Guide Rail

(22) 1x Guide Rail Seal


(23) 2x Glass-Fitting Parts

(24) 2x Screws

(25) 2x Screw Caps

(26) 1x Door Stop Cap

(27) 1x Cover Cap (Guide Rail)

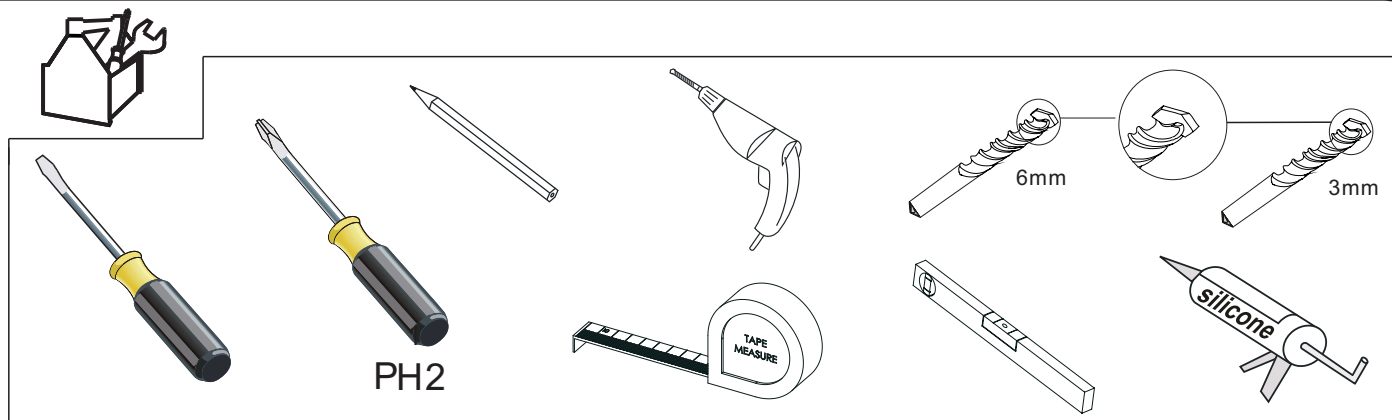







ASSEMBLY INSTRUCTIONS

If you require help, we advise you firstly contact a competent plumber
Installation Steps


Step 1

MAKE SURE THE TRAY IS LEVEL, USING A SPIRIT LEVEL, BEFORE INSTALLING.


THIS SHOWER PANEL / DOOR.

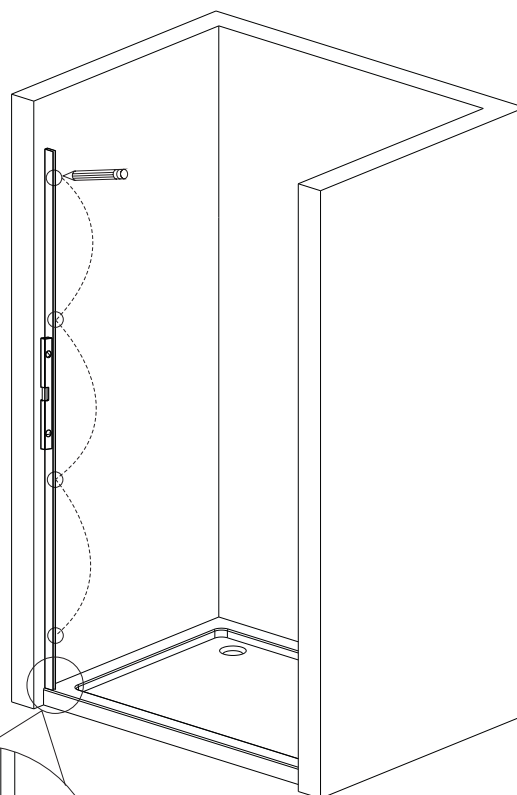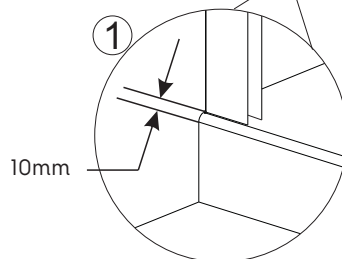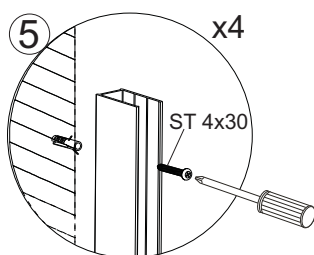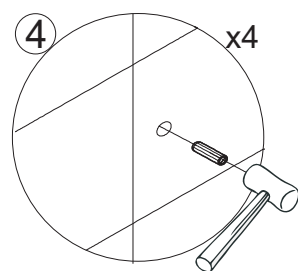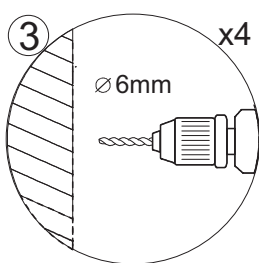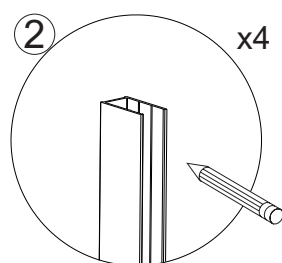


Step 2

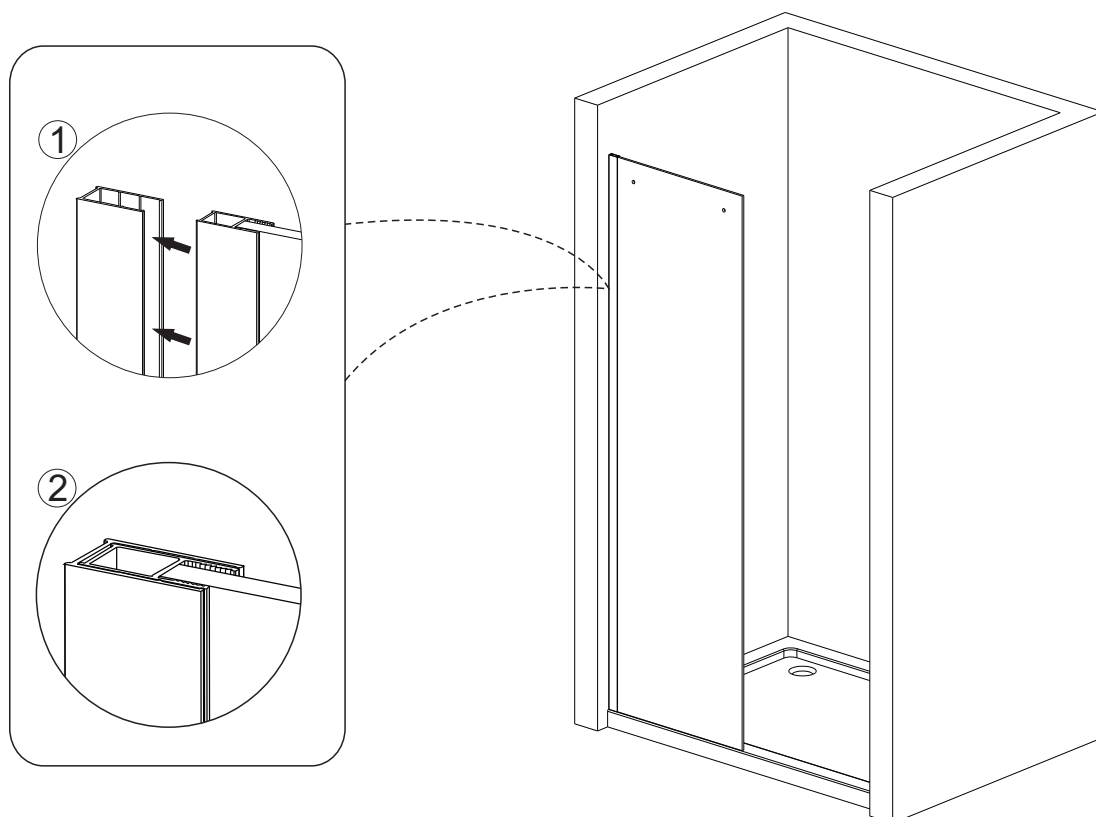


Step 3

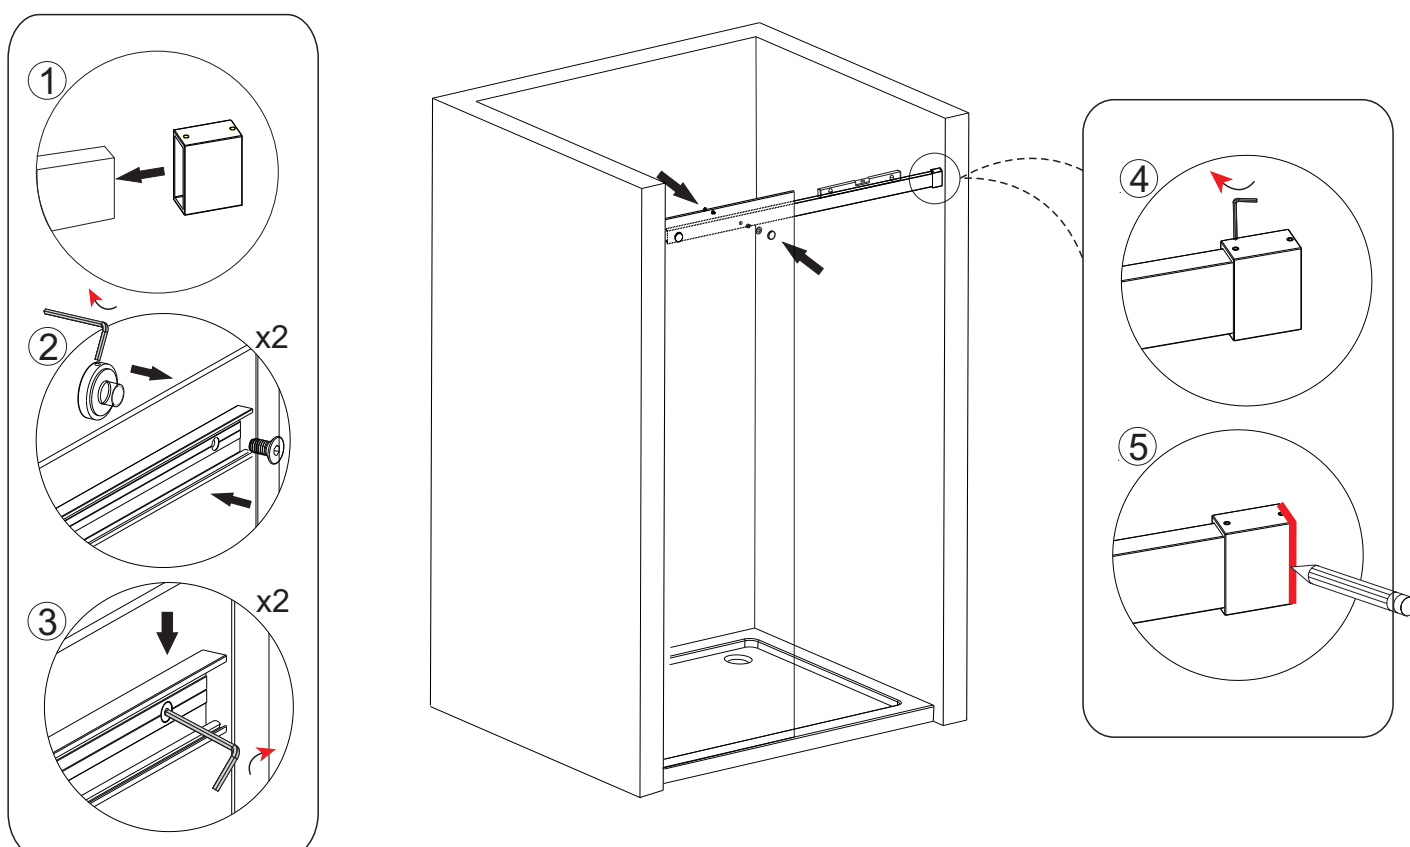




Step 4

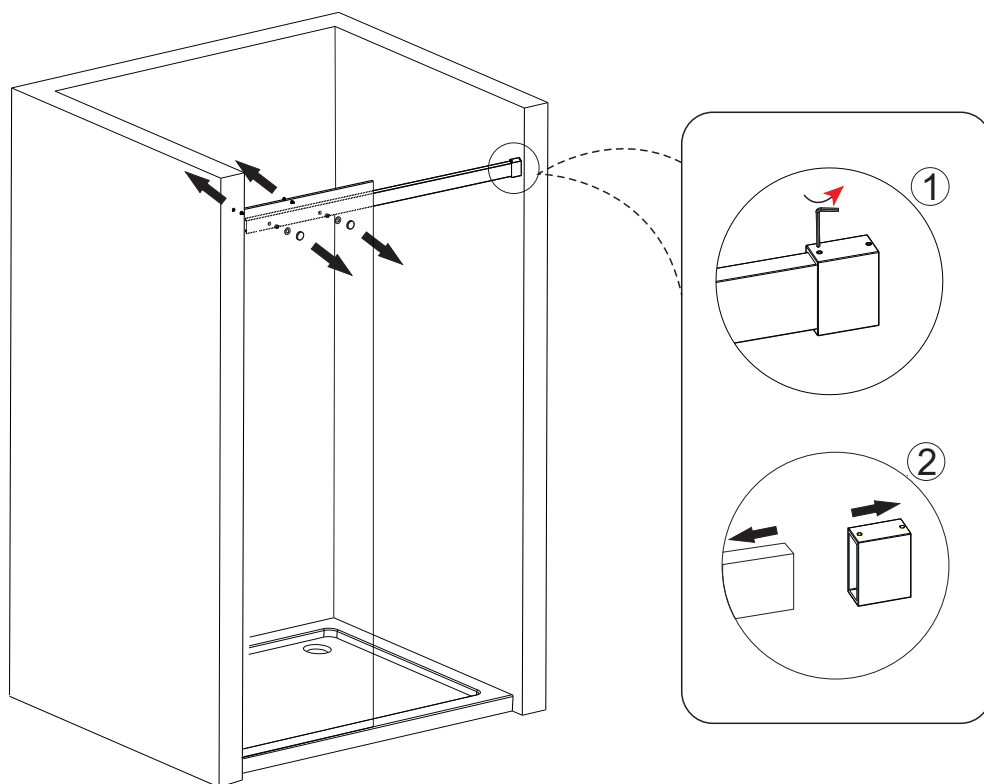




Step 5

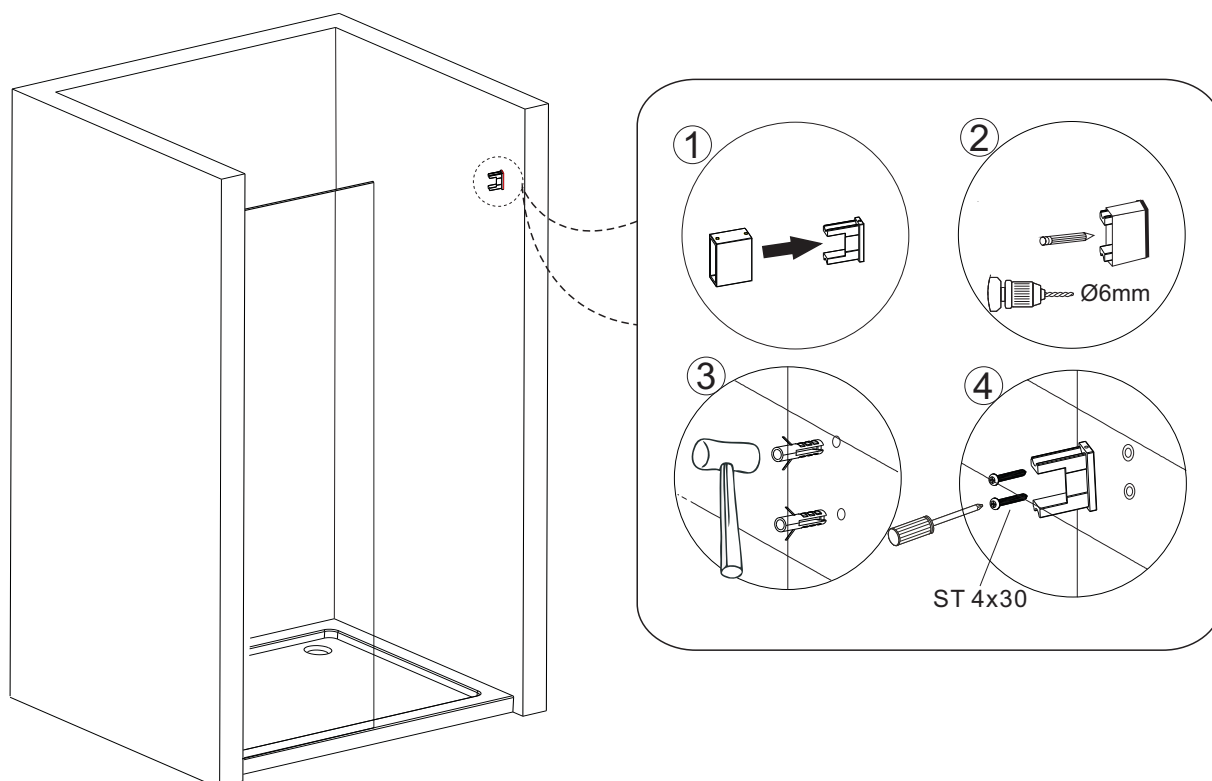


Step 6

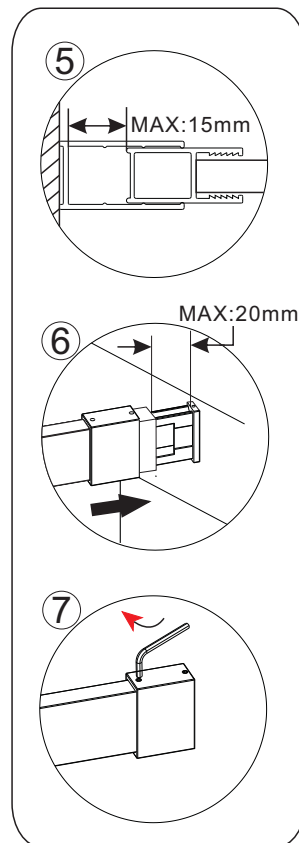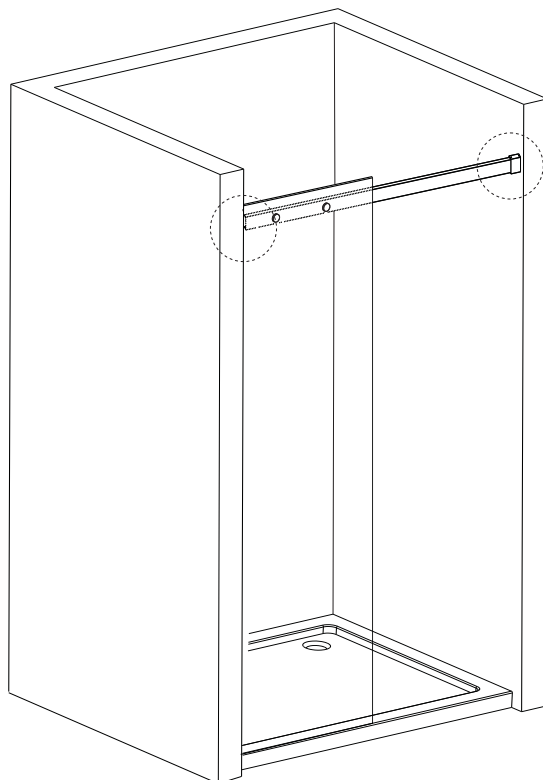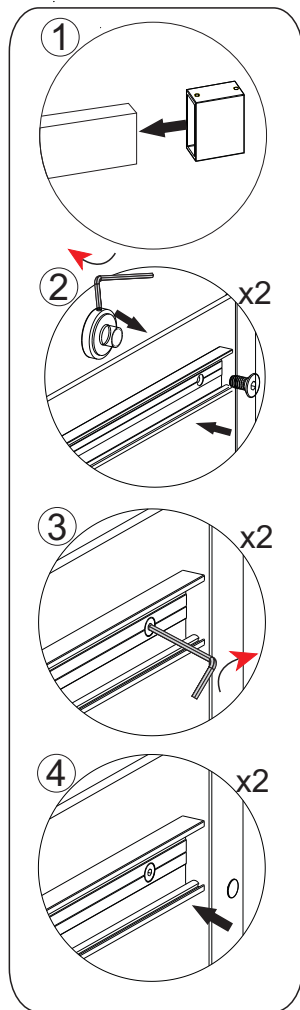


Step 7

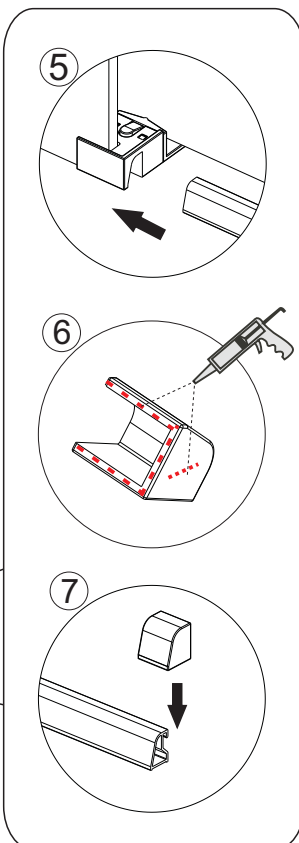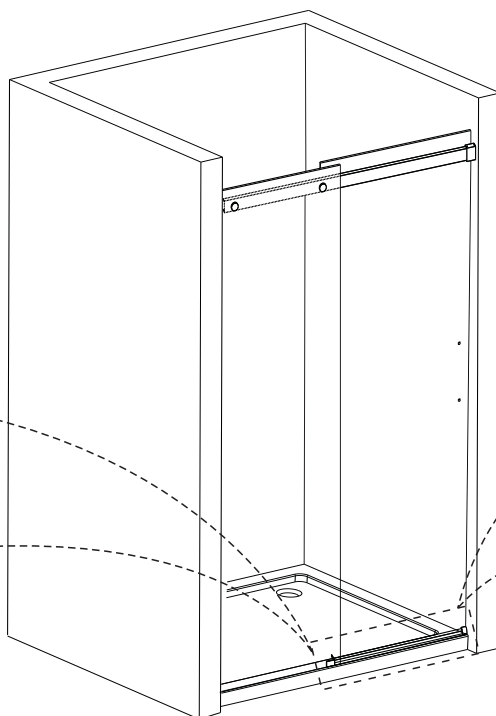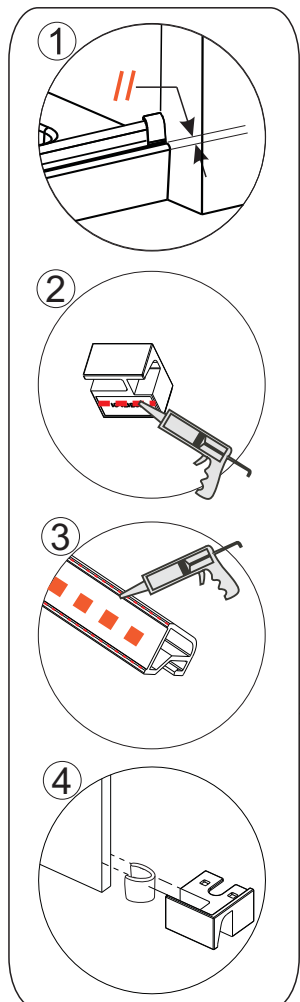


Step 8

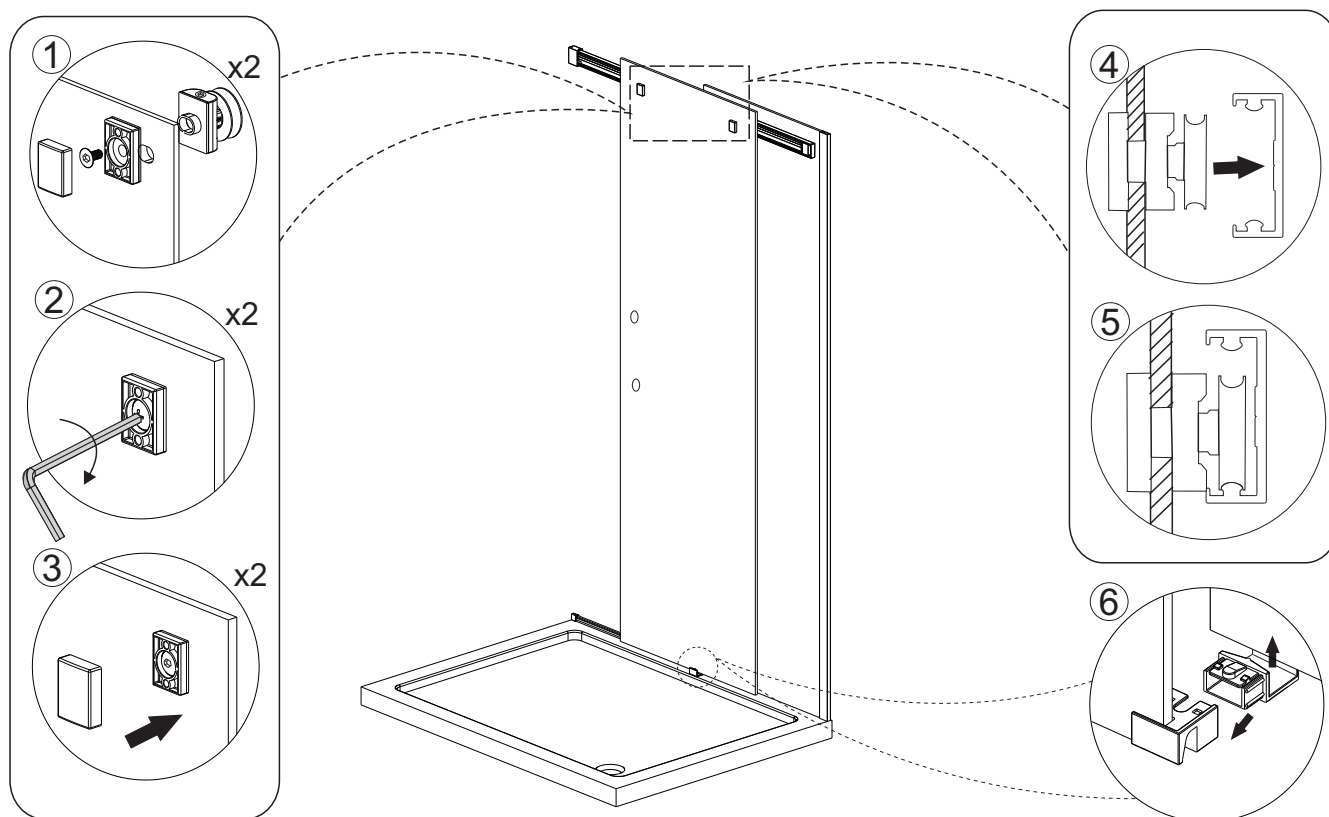



Step 9

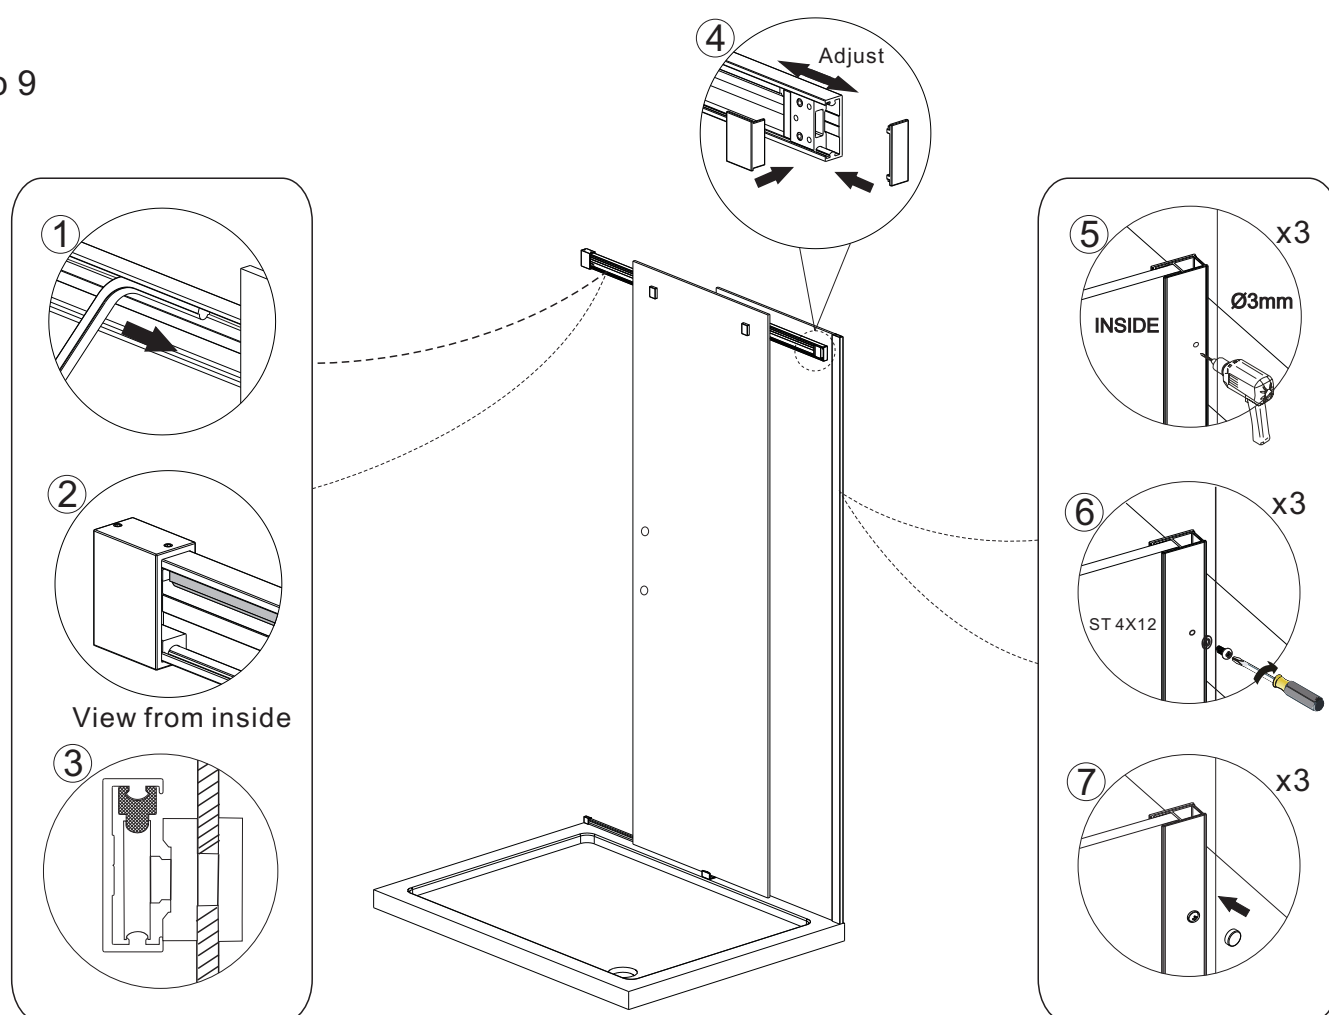


Step 10

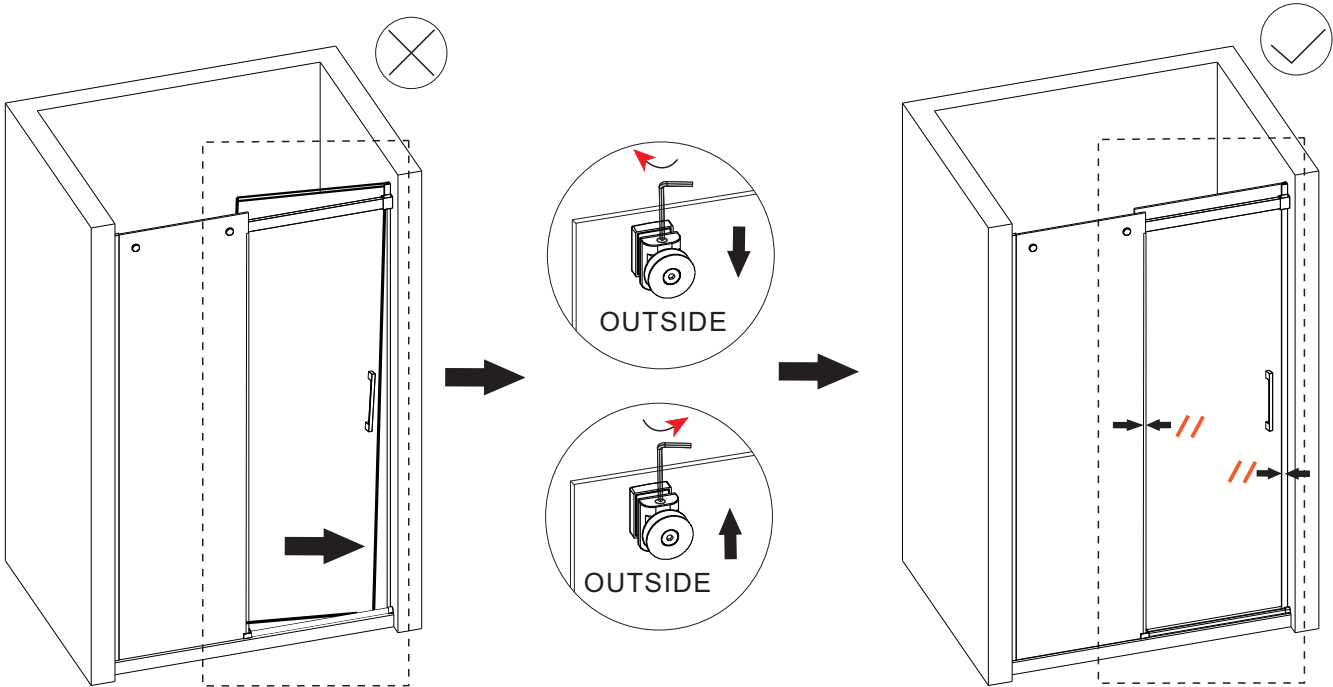


Step 11

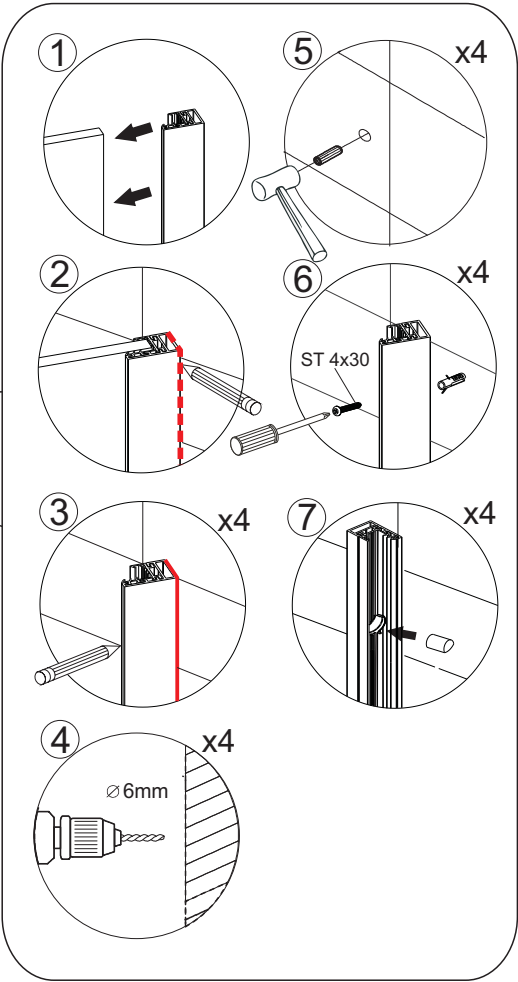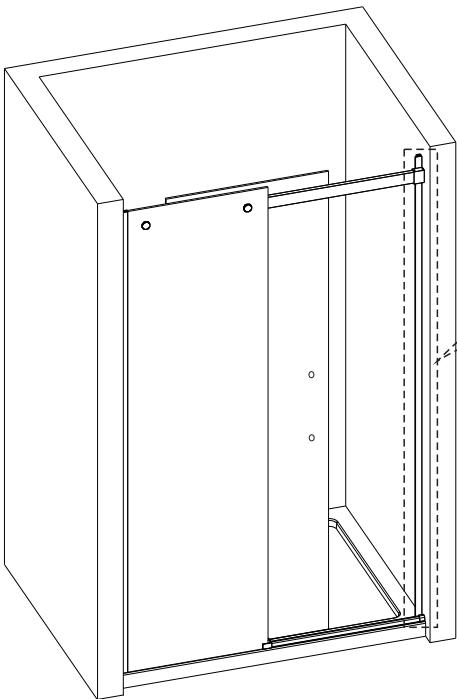

Step 12

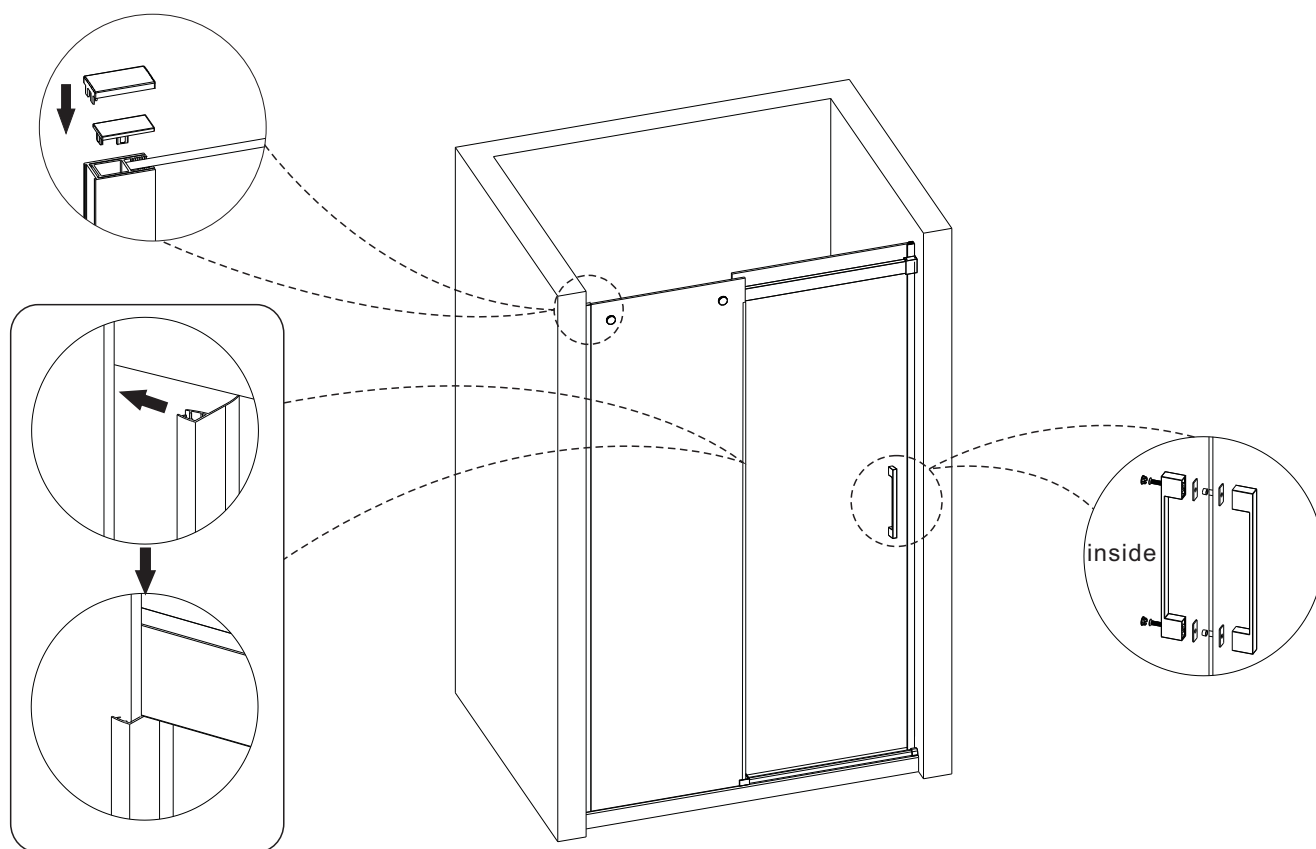

Step 13

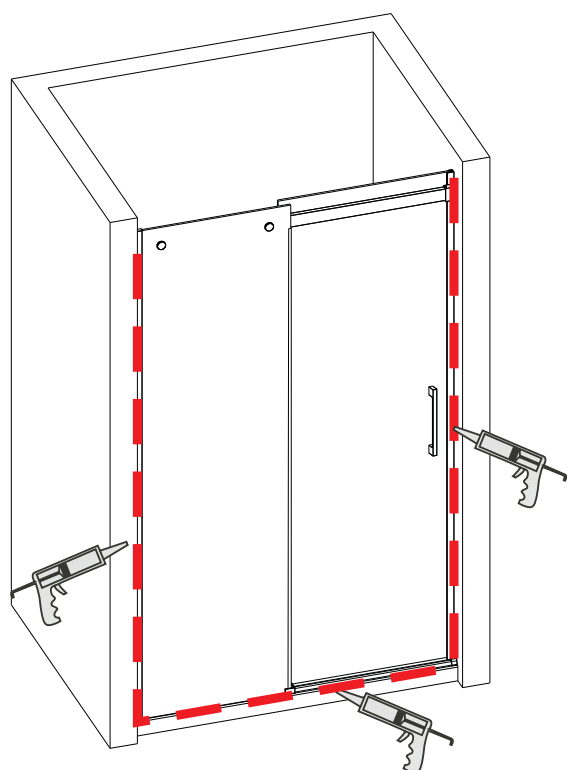

Silicone (inside edge only) where the vertical profiles meet the wall, and the horizontal profile meets the tray