



8mm SIDE PANEL FOR SLIDING DOOR

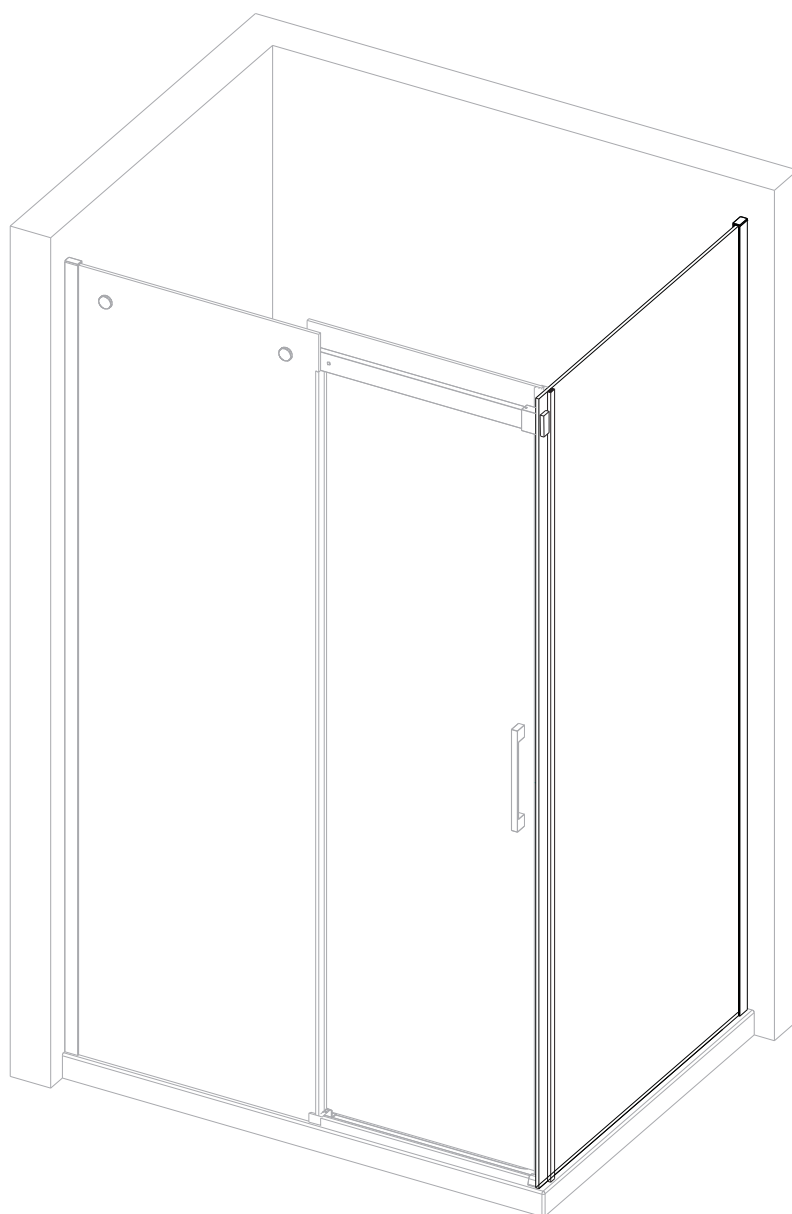

ASSEMBLY INSTRUCTIONS-DRAWING

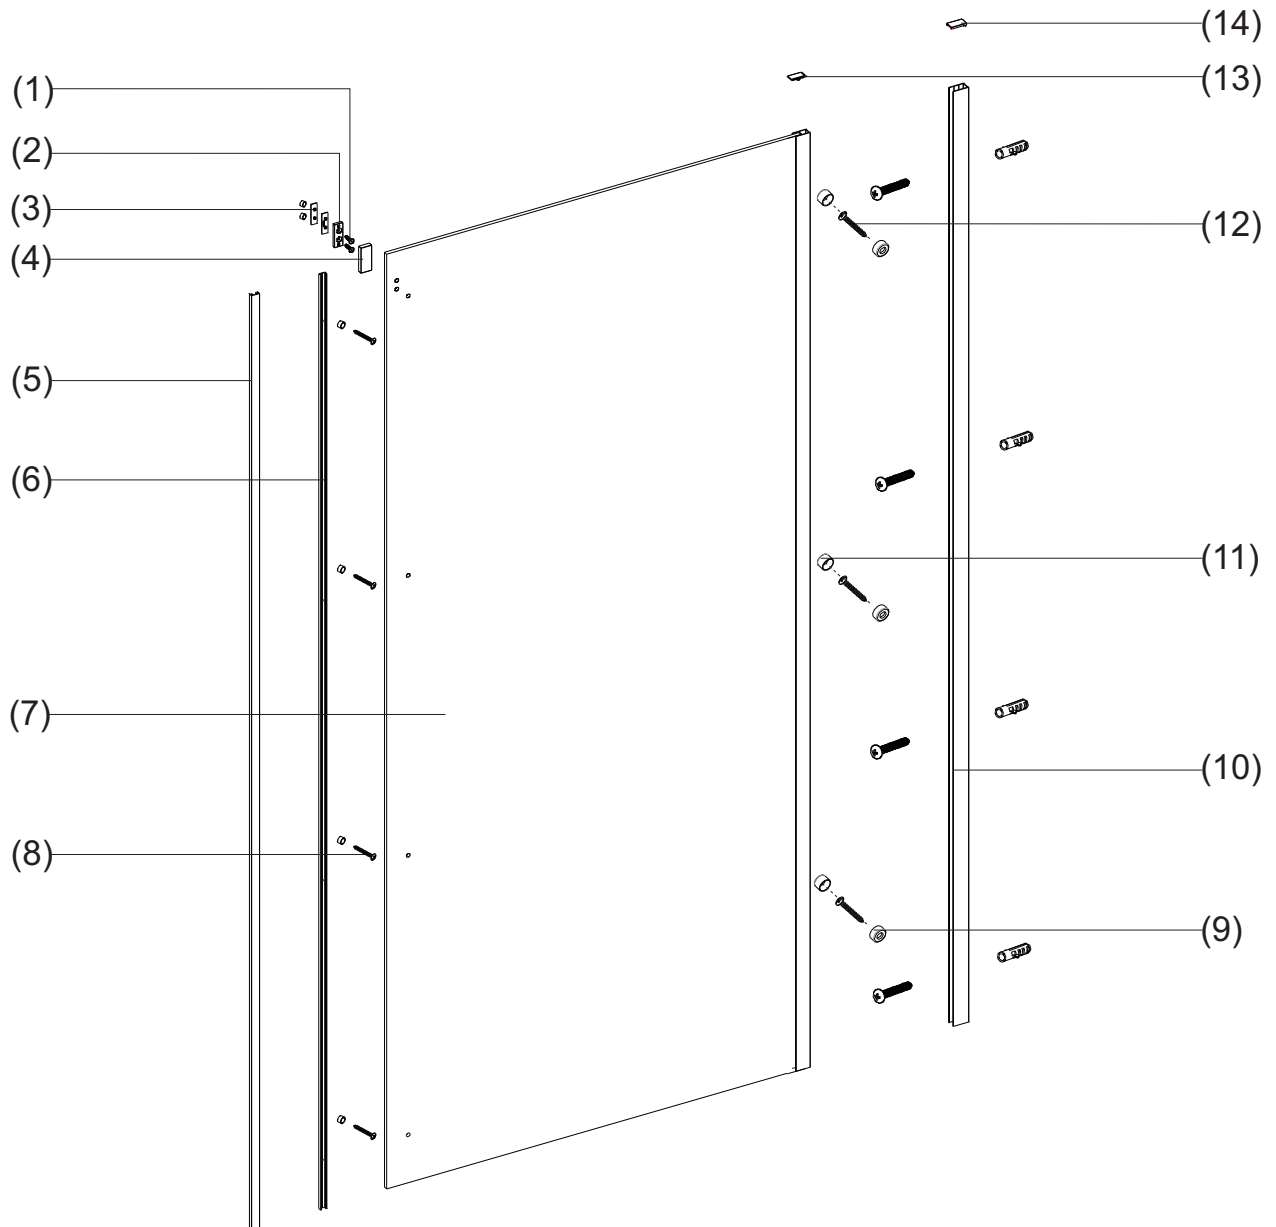

(1) 2x Screws M5x20

(2) 1x Outer Washer

(3) 2x Inner Washers

(4) 1x Cover Cap (Guide Rail)

(5) 1x Seal A

(6) 1x Seal B

(7) 1x Fixed Panel

(8) 4x Screws 4x16

(9) 3x Screw Cover Clips


(10) 1x Wall Profile

(11) 3x Screw Cover Caps

(12) 3x Screws 4x12

(13) 1x Vertical Profile Cover Cap

(14) 1x Wall Profile Cover Cap

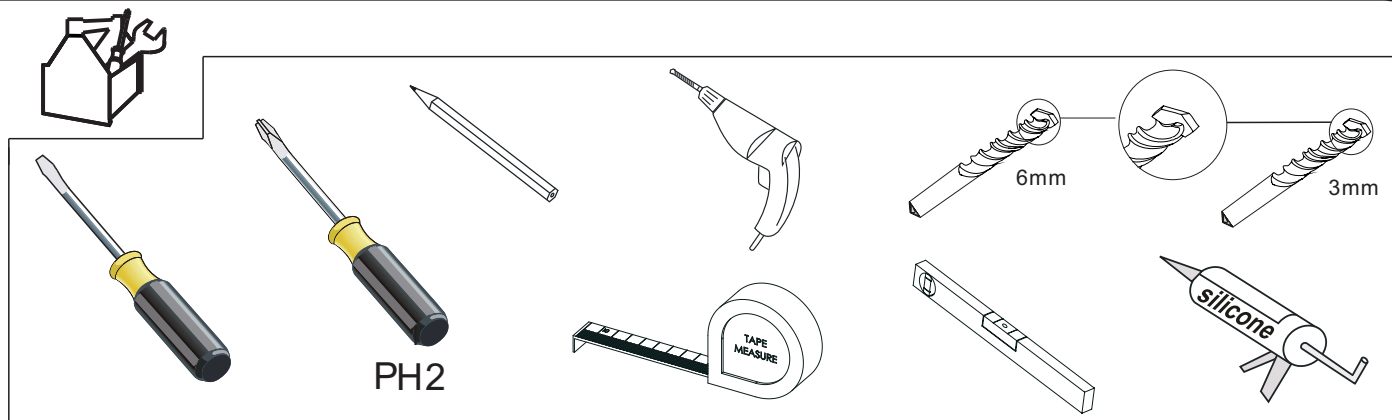

ASSEMBLY INSTRUCTIONS






If you require help, we advise you firstly contact a competent plumber
Installation Steps

Step 1


MAKE SURE THE TRAY IS LEVEL, USING A SPIRIT LEVEL, BEFORE INSTALLING.

THIS SHOWER PANEL / DOOR.


CODE	A	B
SS20-1150	1150-1160	N/A
SS20-1200	1200-1210	N/A
SS20-SF850	N/A	850-860
SS20-SF900	N/A	900-910

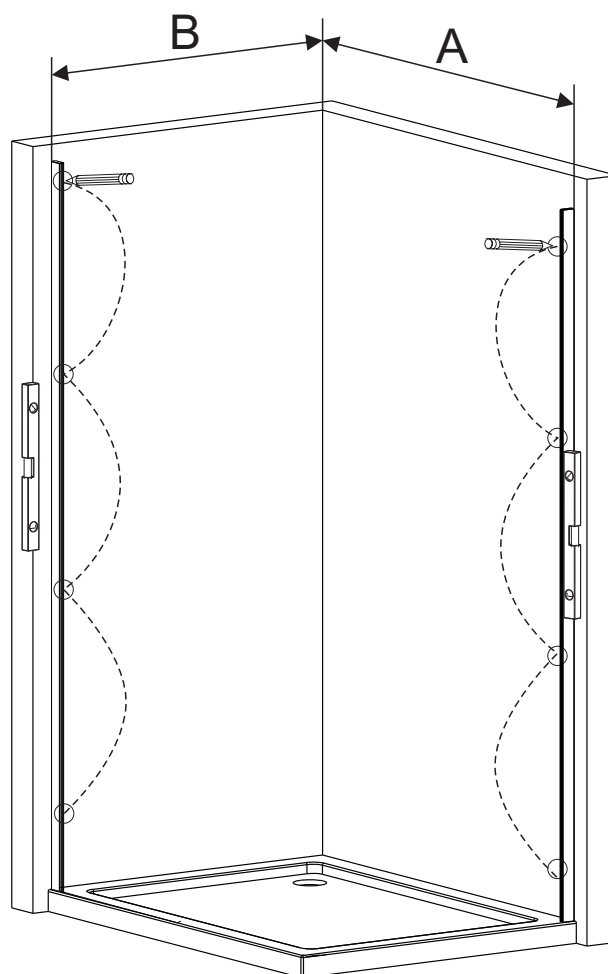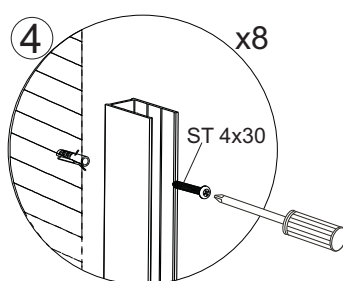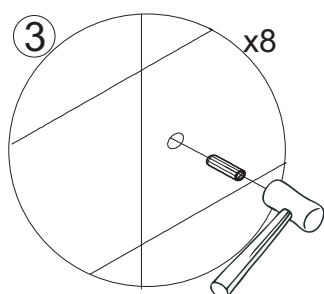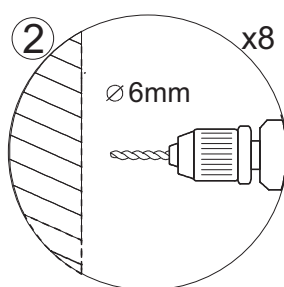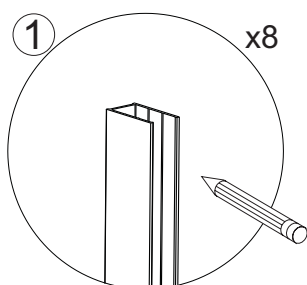


Step 2

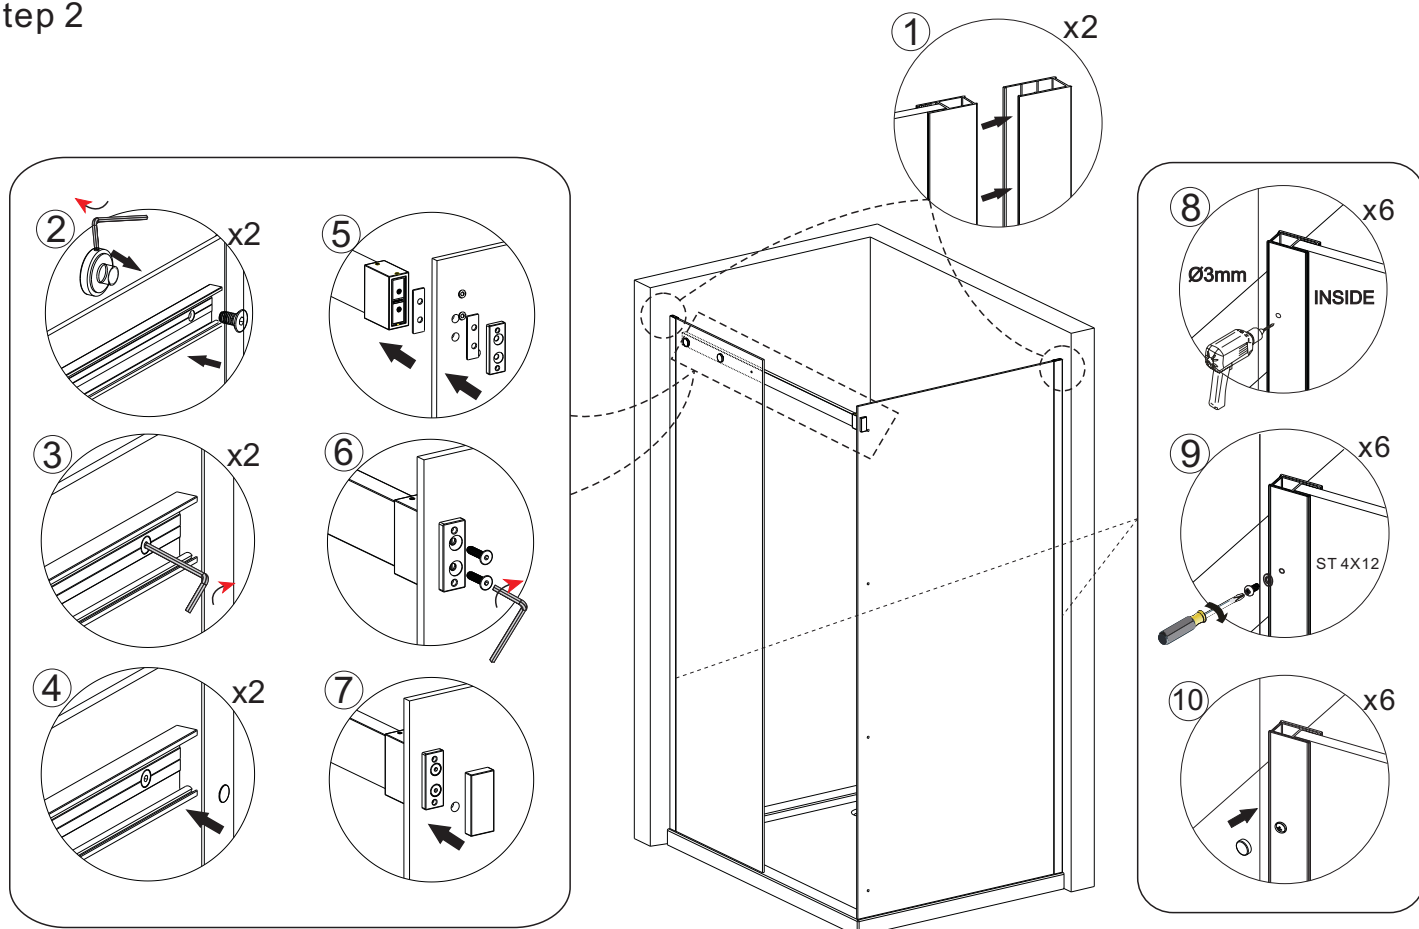


Step 3

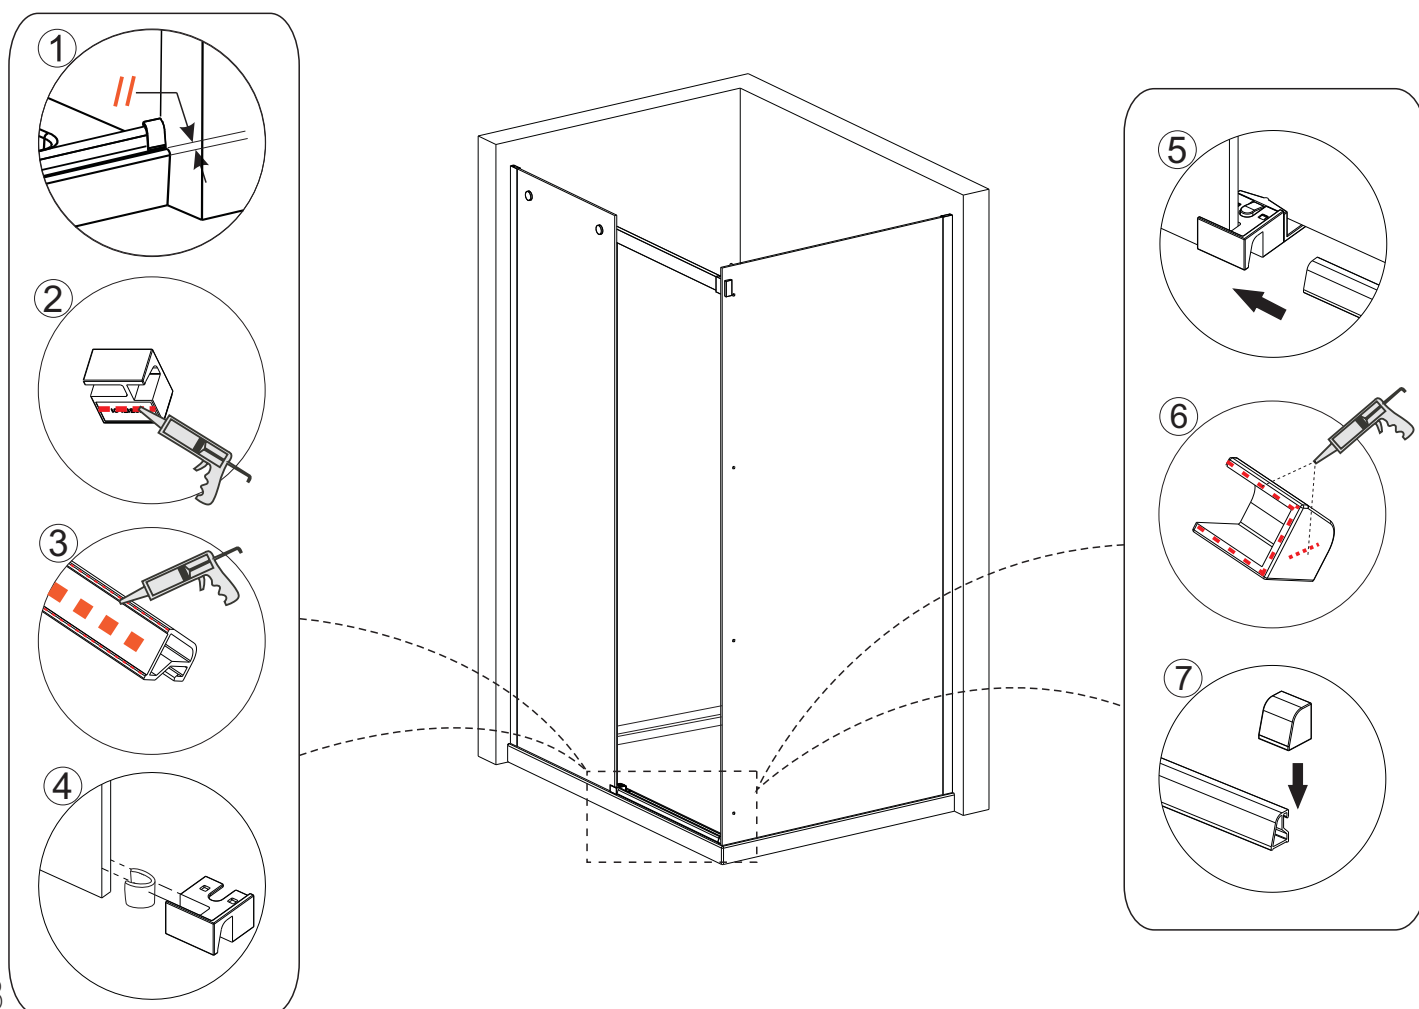


Step 4

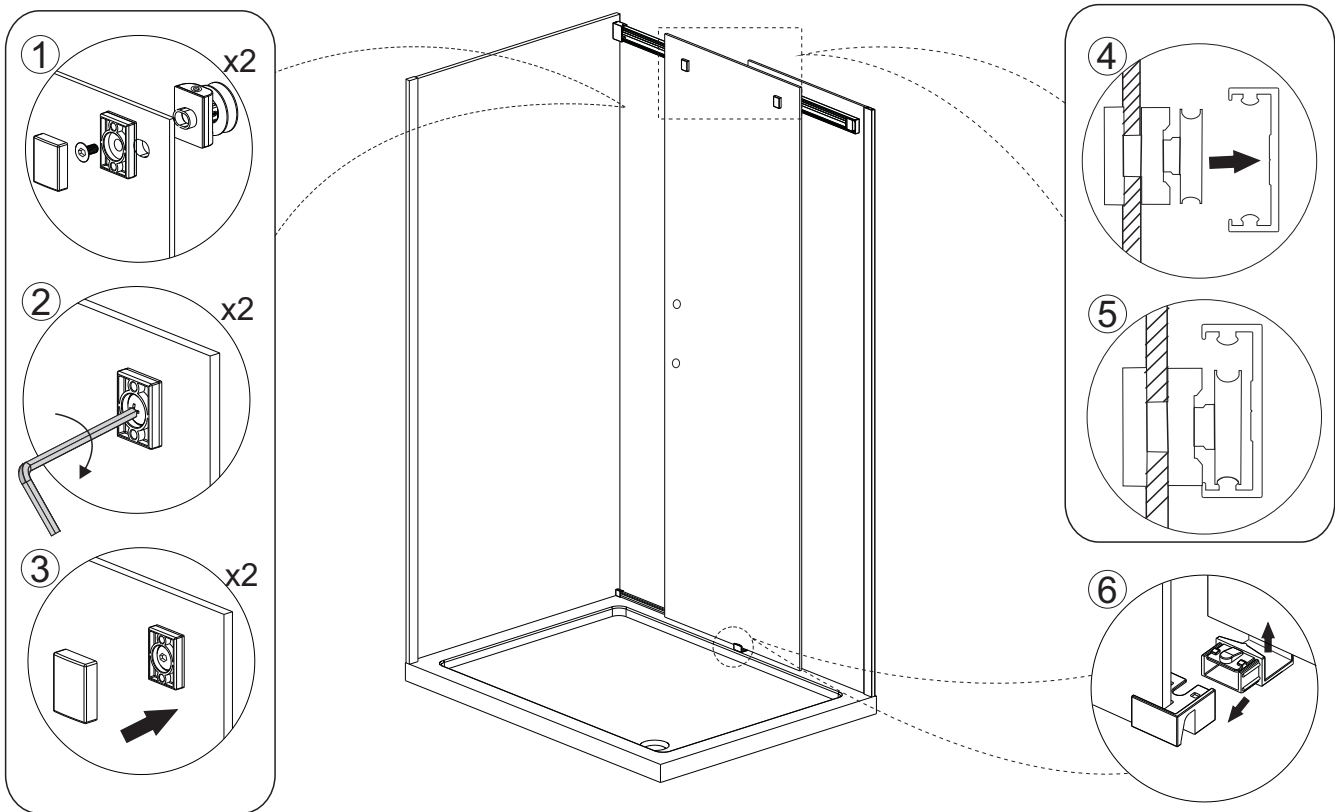


Step 5

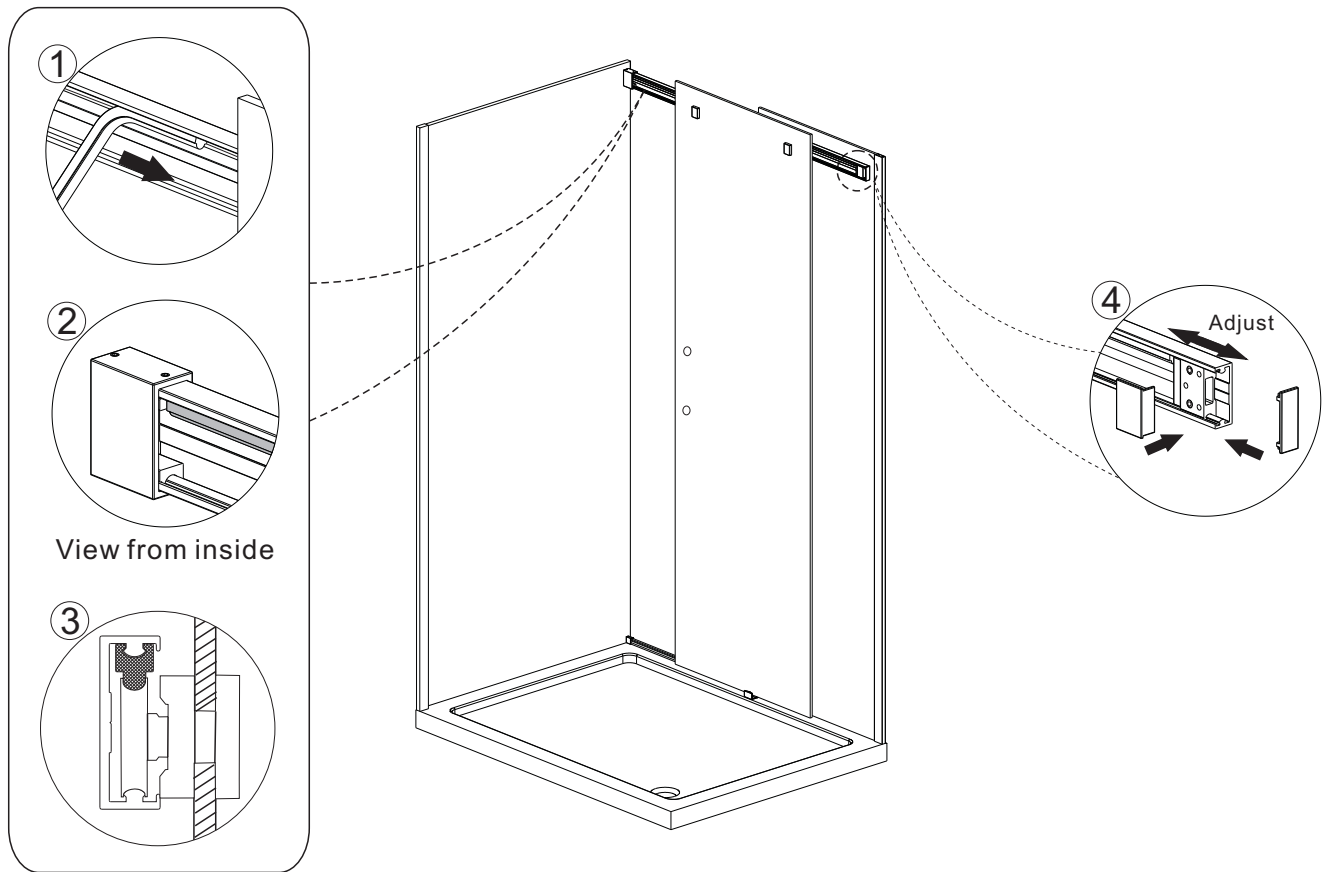


Step 6

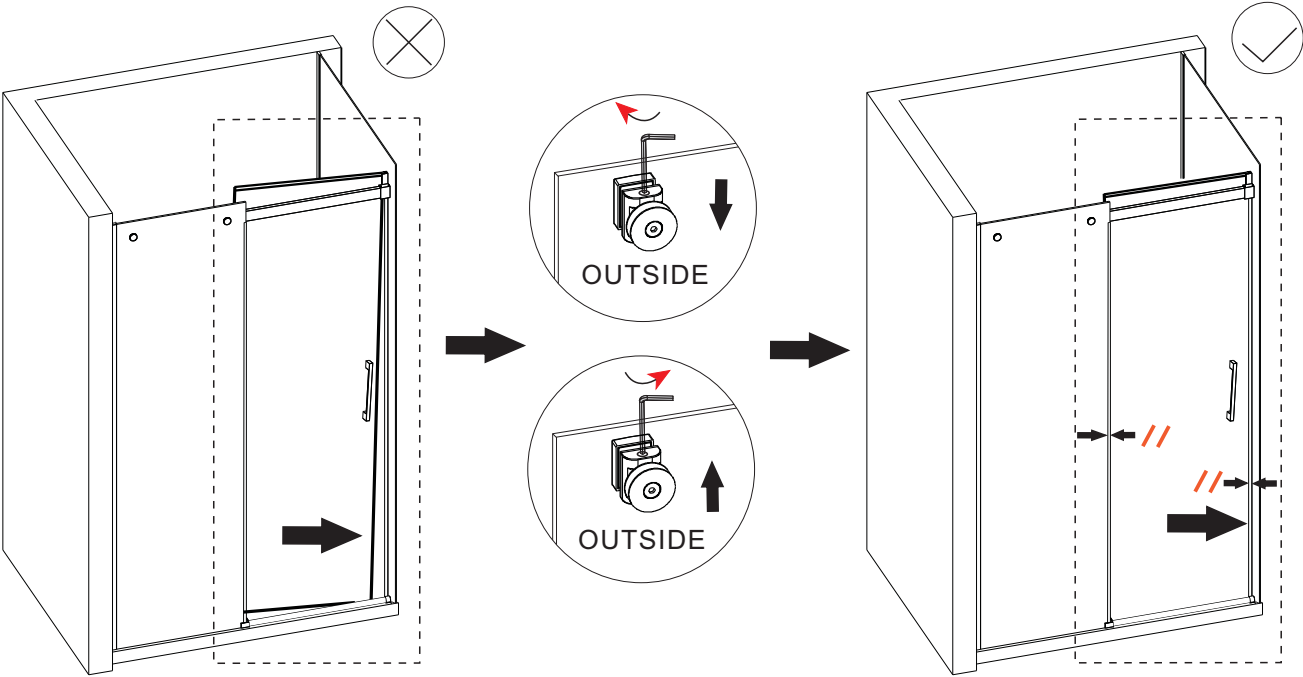

Step 7

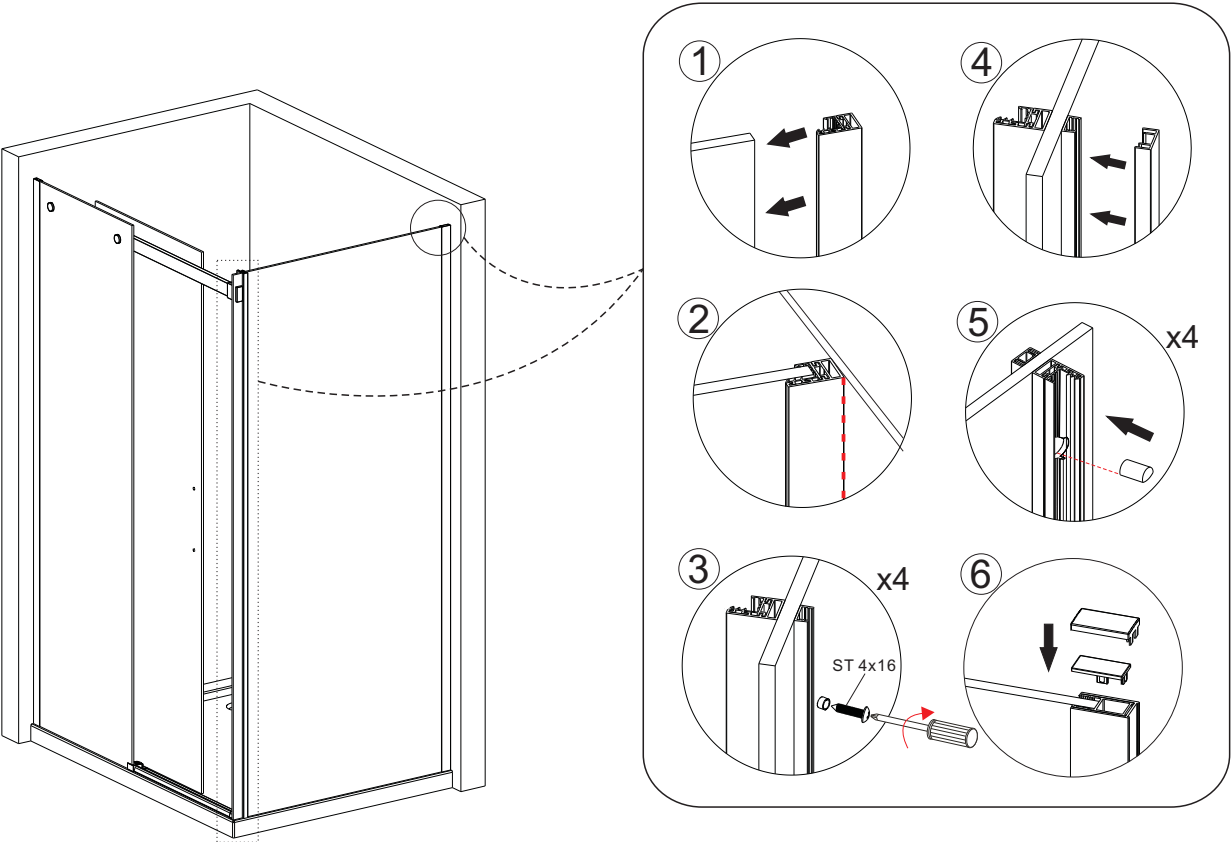

Step 8

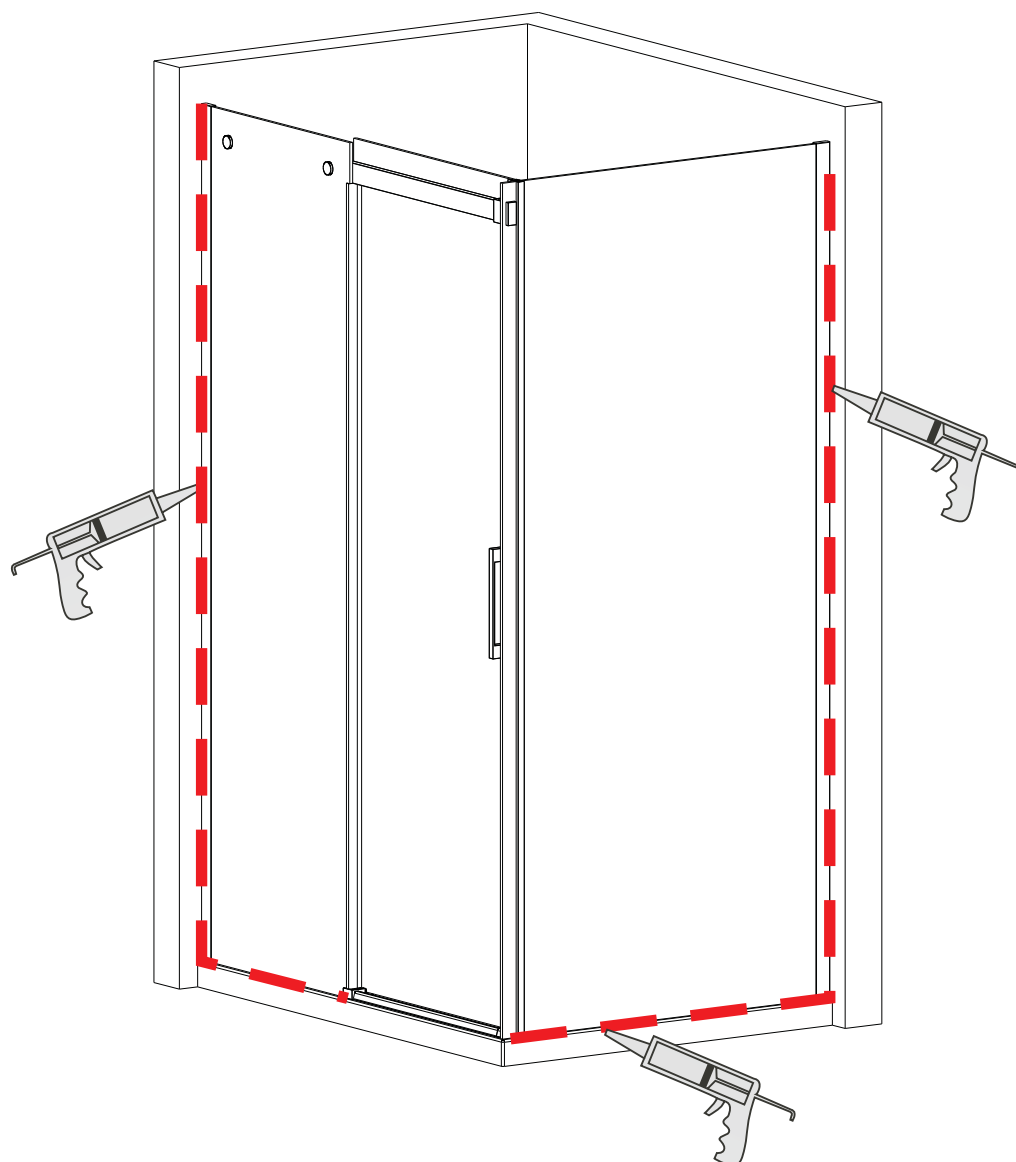

Silicone (inside edge only) where the vertical profiles meet the wall, and the horizontal profile meets the tray