



Quadrant Enclosure

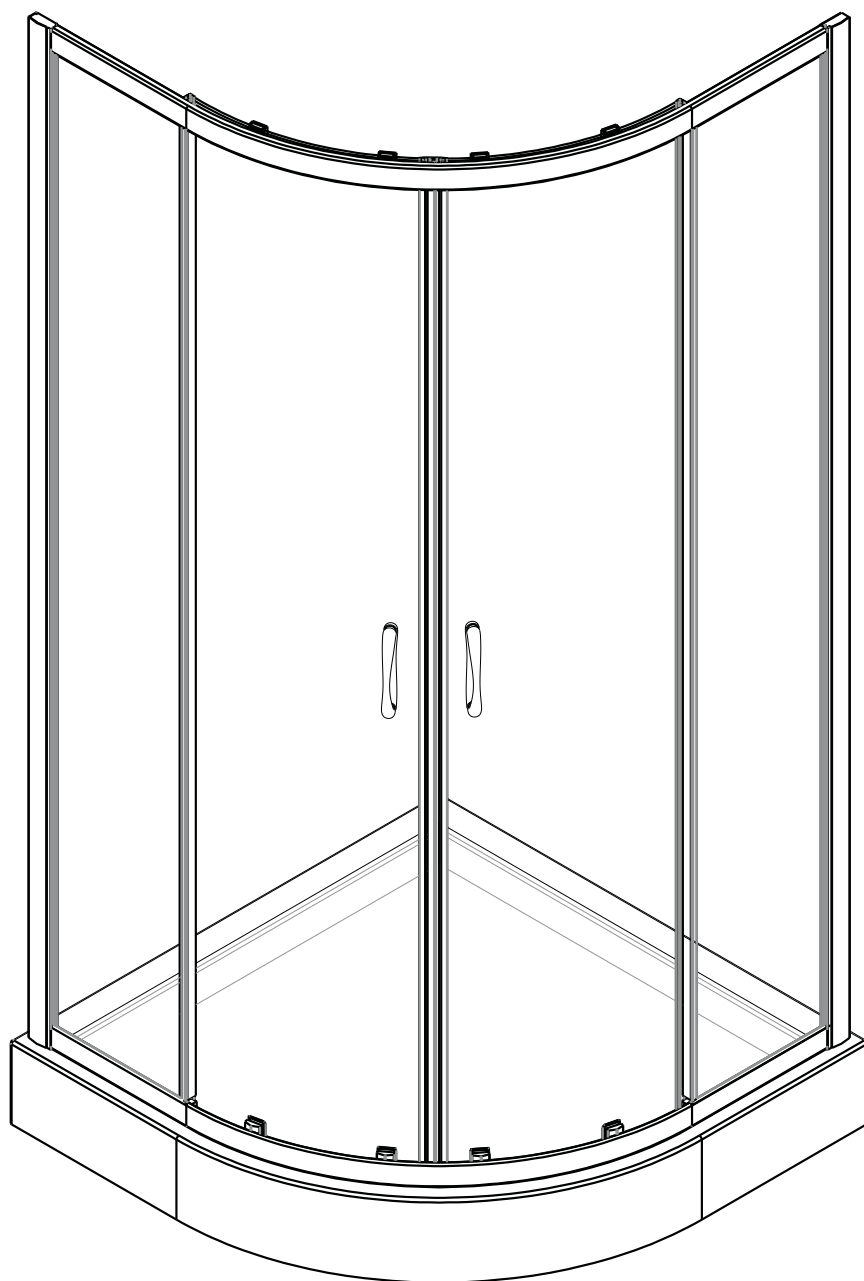


ASSEMBLY INSTRUCTIONS-DRAWING

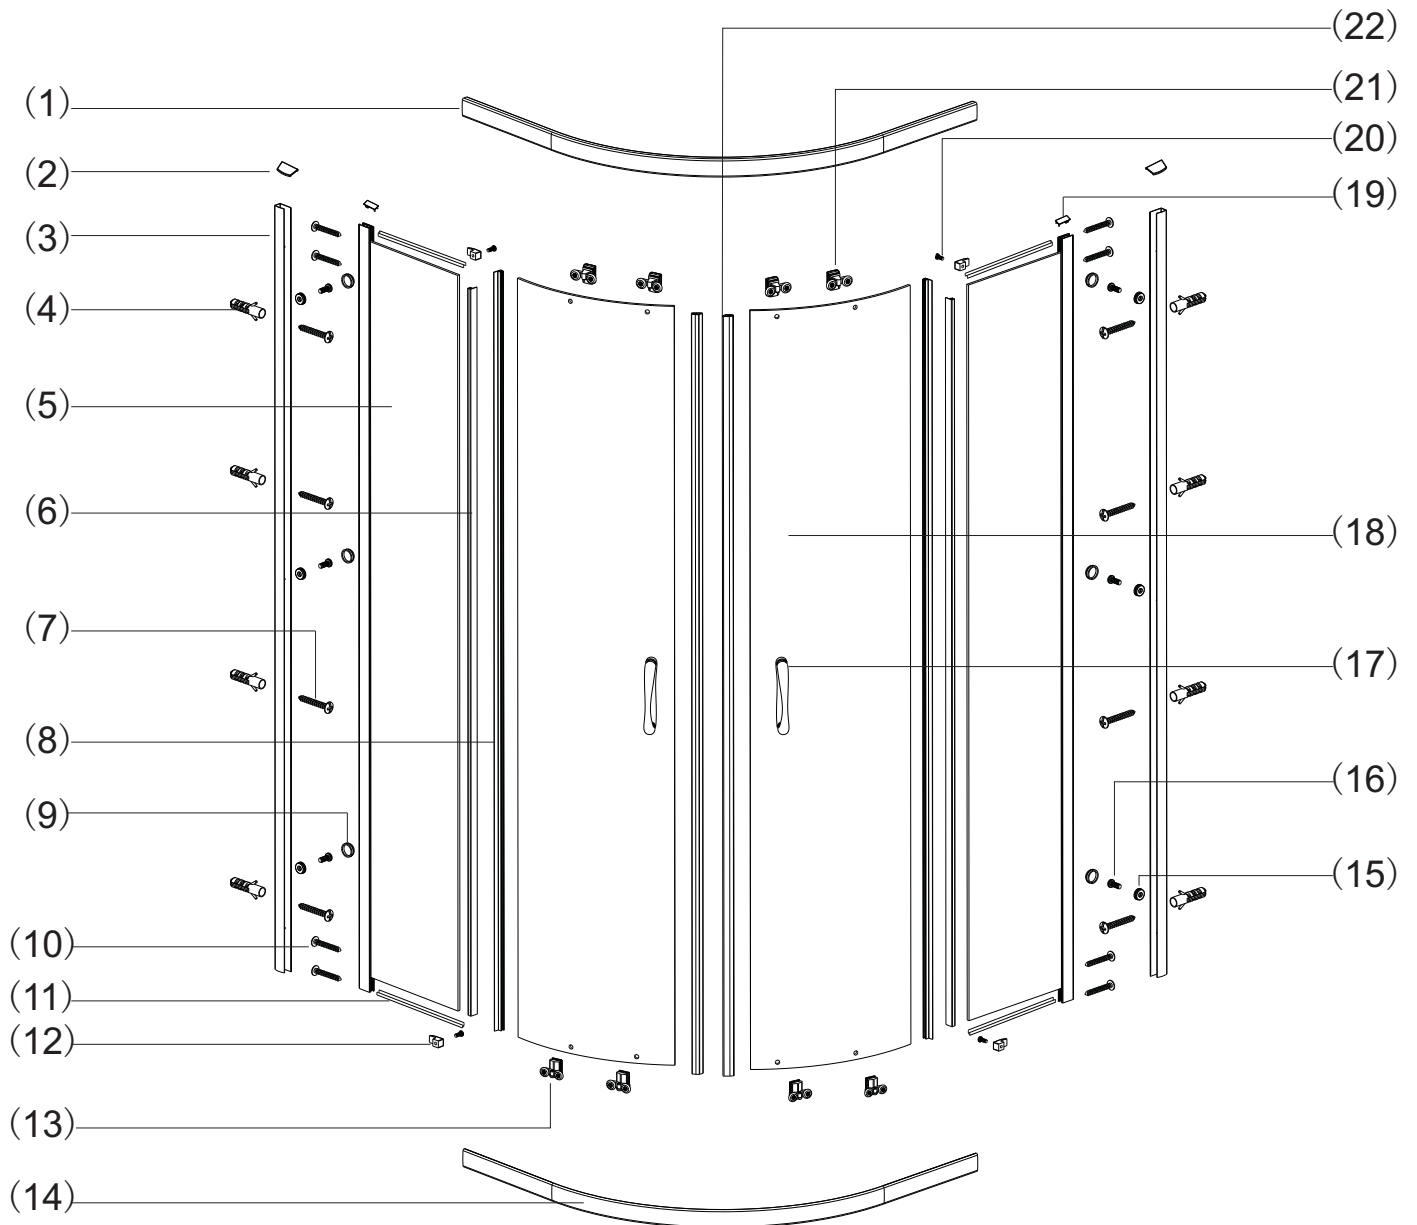

- (1) 1xTop Horizontal Rail
- (2) 2xWall Profile Cover Caps
- (3) 2xWall Profiles
- (4) 8xWall Plugs
- (5) 2xFixed Panels
- (6) 2xPlastic Water Deflectors (Fixed panel)
- (7) 8xScrews 4x30
- (8) 2xPlastic Water Deflectors (Moving panel)
- (9) 6xScrew Cover Caps
- (10) 8xScrews 3.5x30
- (11) 4xBottom Seals

- (12) 4xGlass Clamps
- (13) 4xBottom Rollers
- (14) 1xBottom Horizontal Rail
- (15) 6xCover Cap Clips
- (16) 6xScrews 4x12
- (17) 2xHandles
- (18) 2xMoving Panels
- (19) 2xUpright Profile Cover Caps
- (20) 4xFixed Glass Clip Screws (4x12)
- (21) 4xTop Double Rollers
- (22) 2 xMagnet Seals


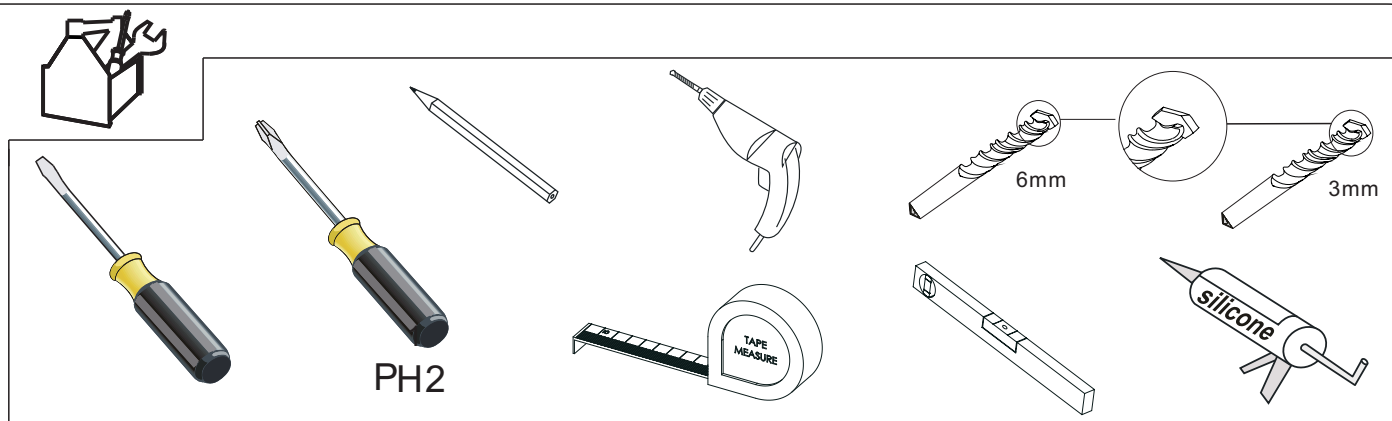


ASSEMBLY INSTRUCTIONS



If you require help, we advise you firstly contact a competent plumber
Installation Steps

Step 1


MAKE SURE THE TRAY IS LEVEL, USING A SPIRIT LEVEL, BEFORE INSTALLING
THIS SHOWER PANEL / DOOR.

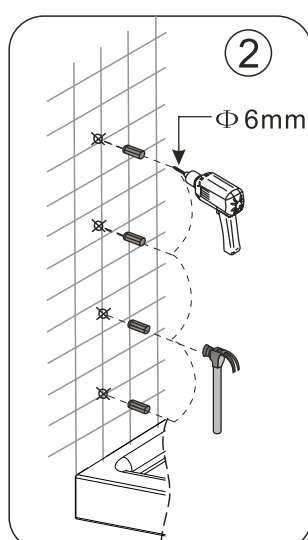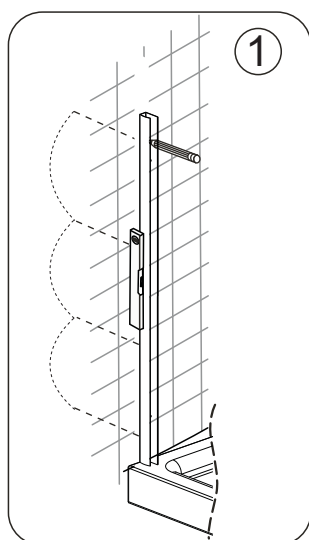


Take Care Not To
Damage Wall Surface

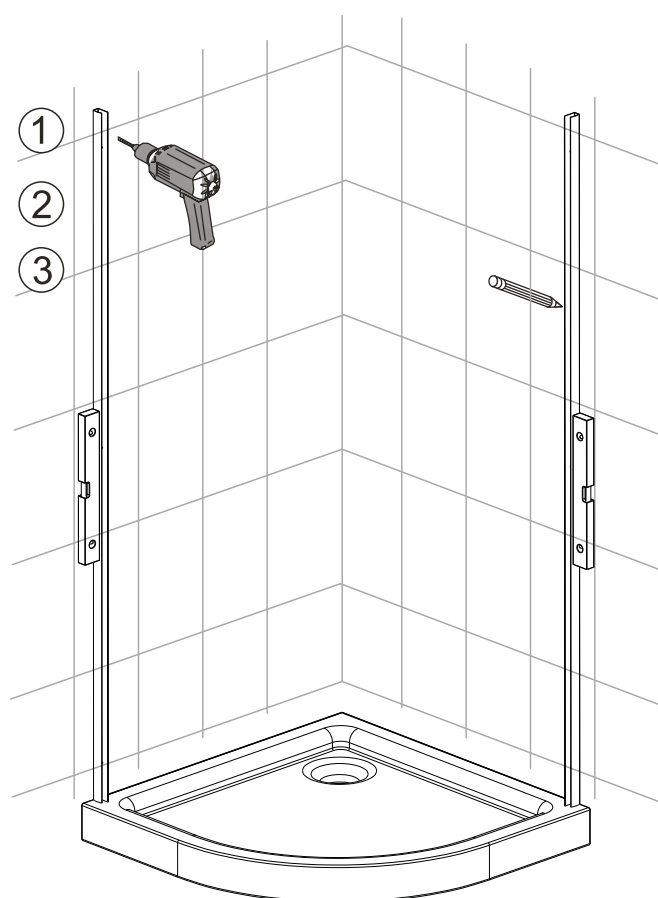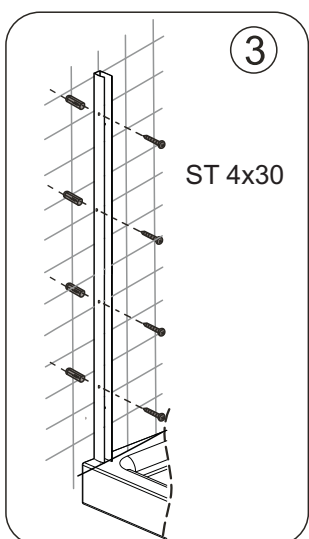


Step 2

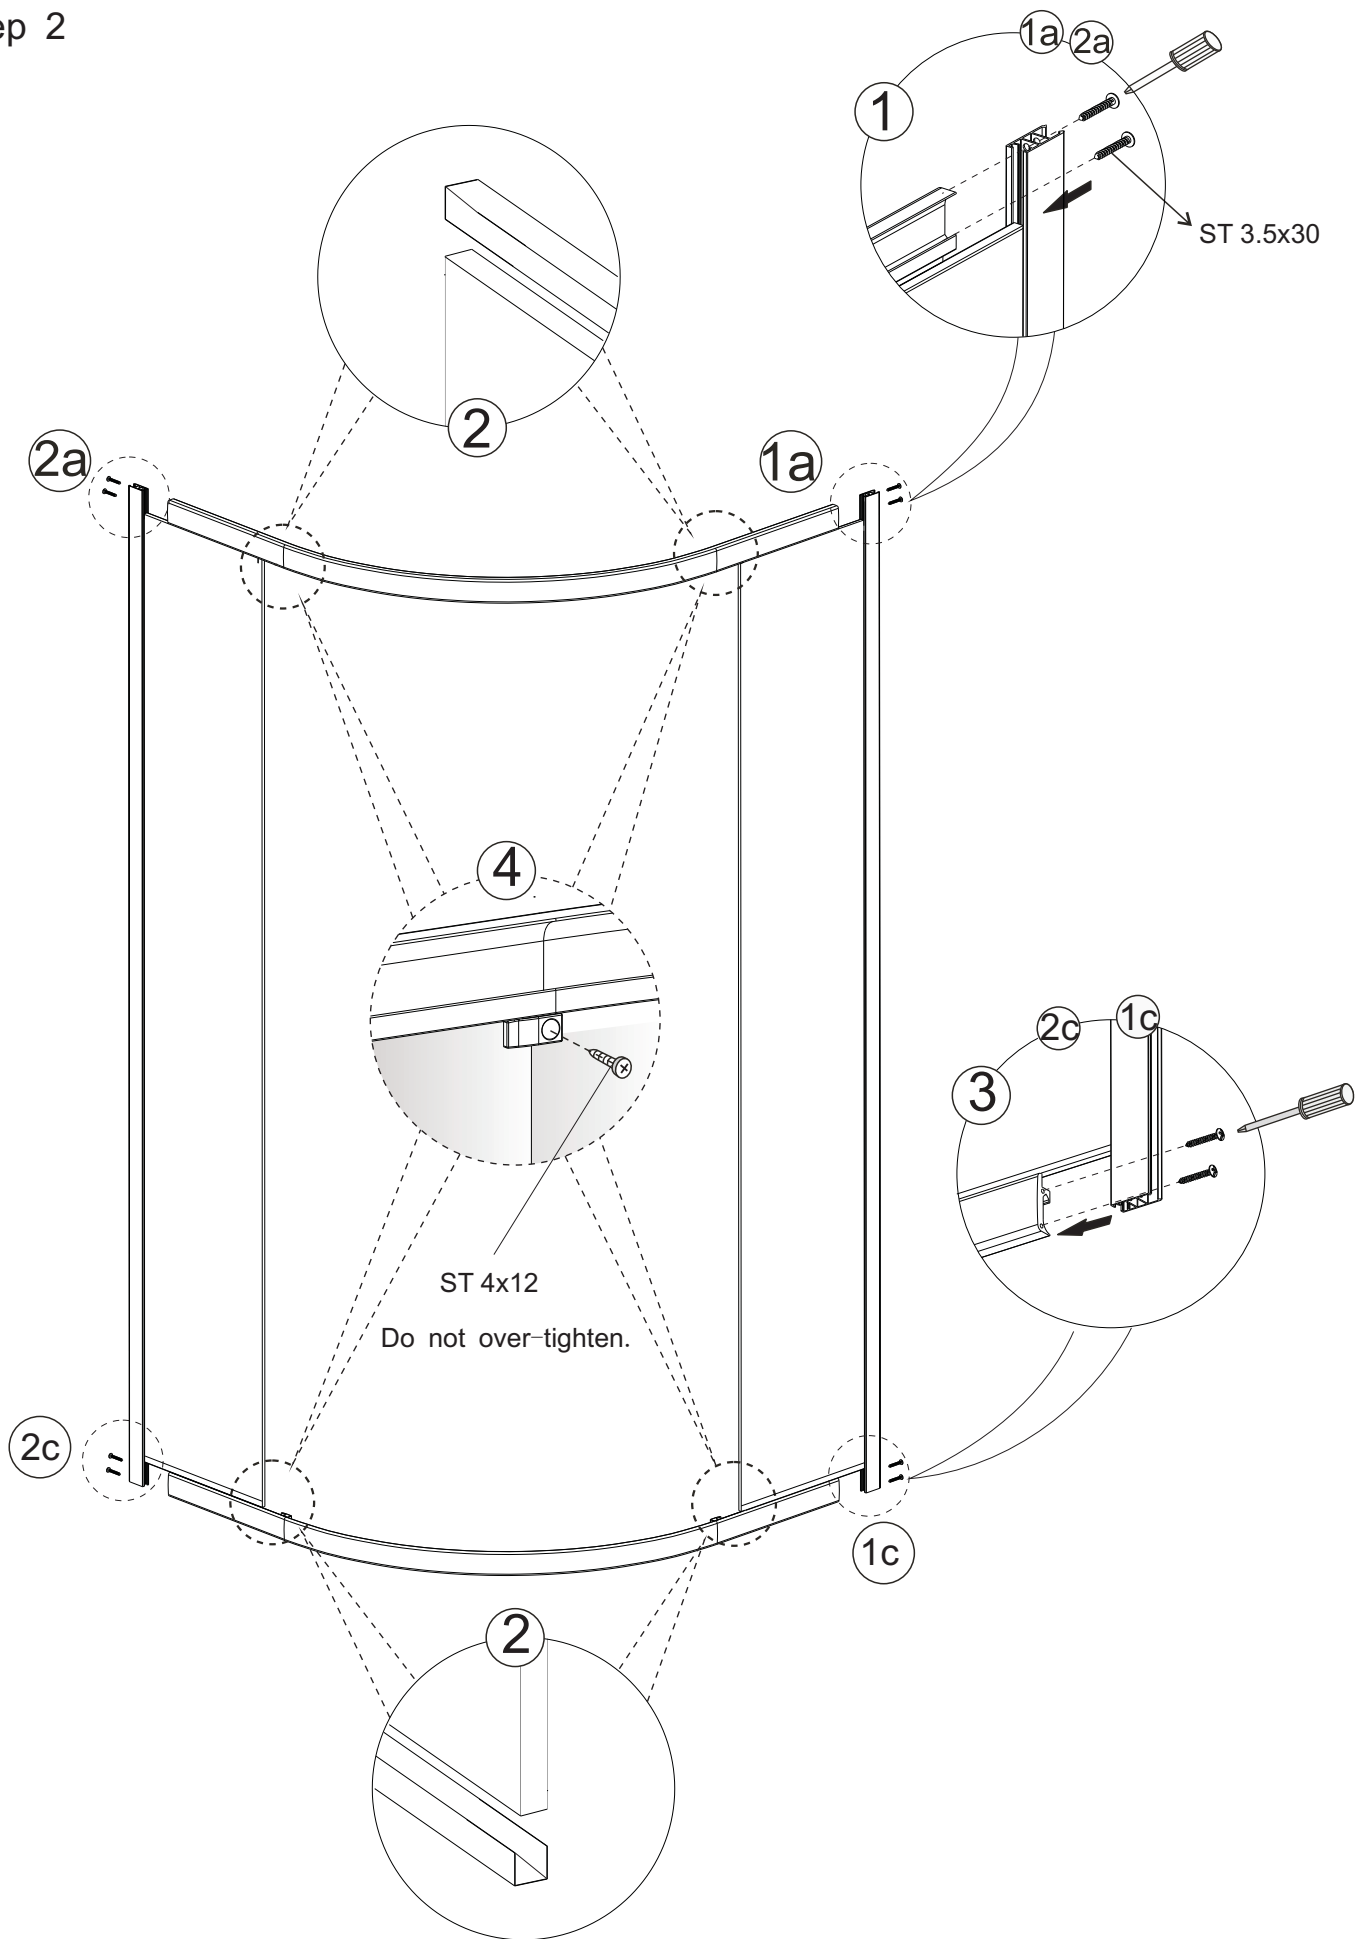


Step 3

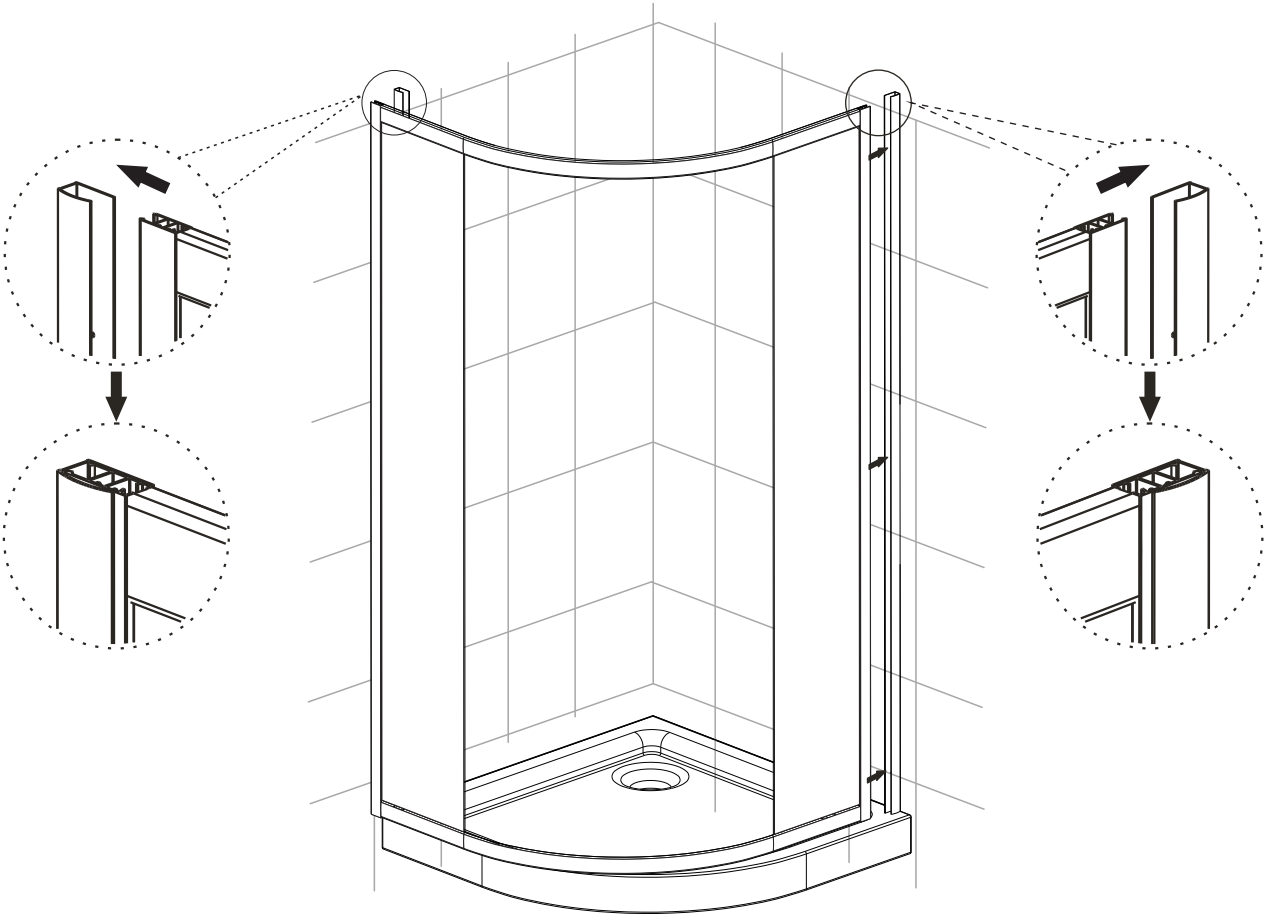


Step 4

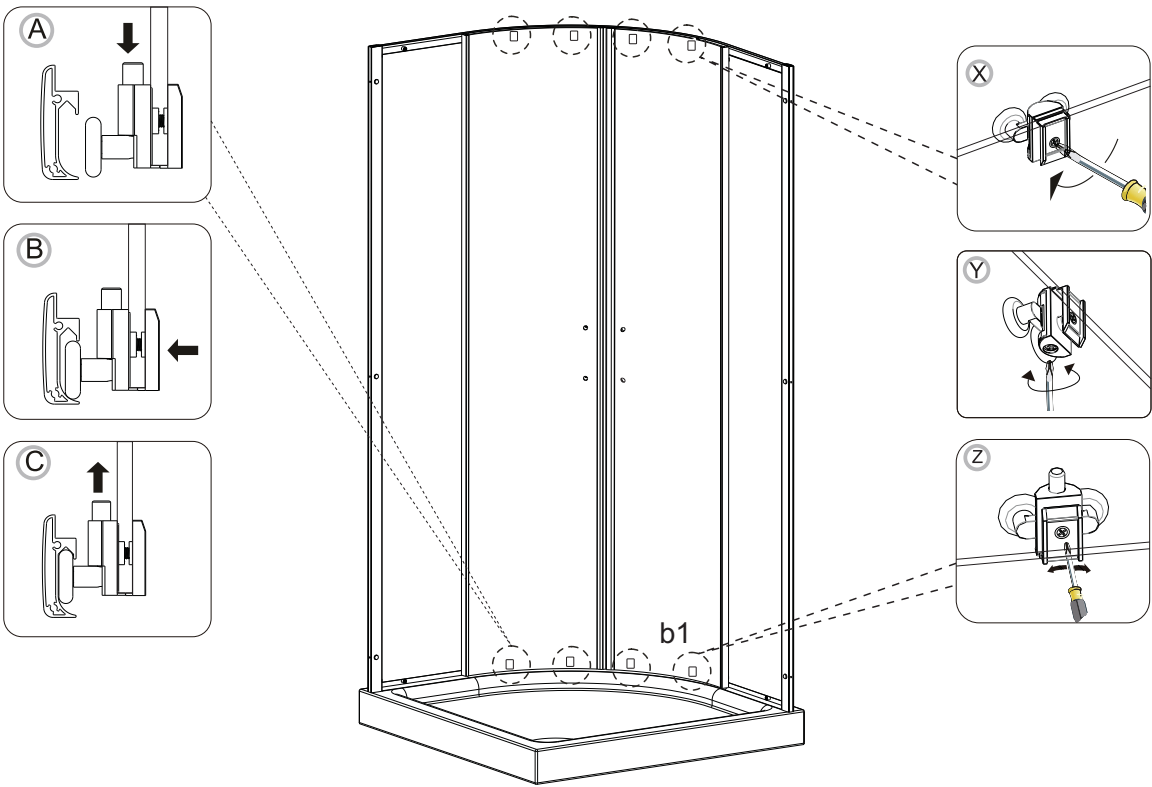

Step 5

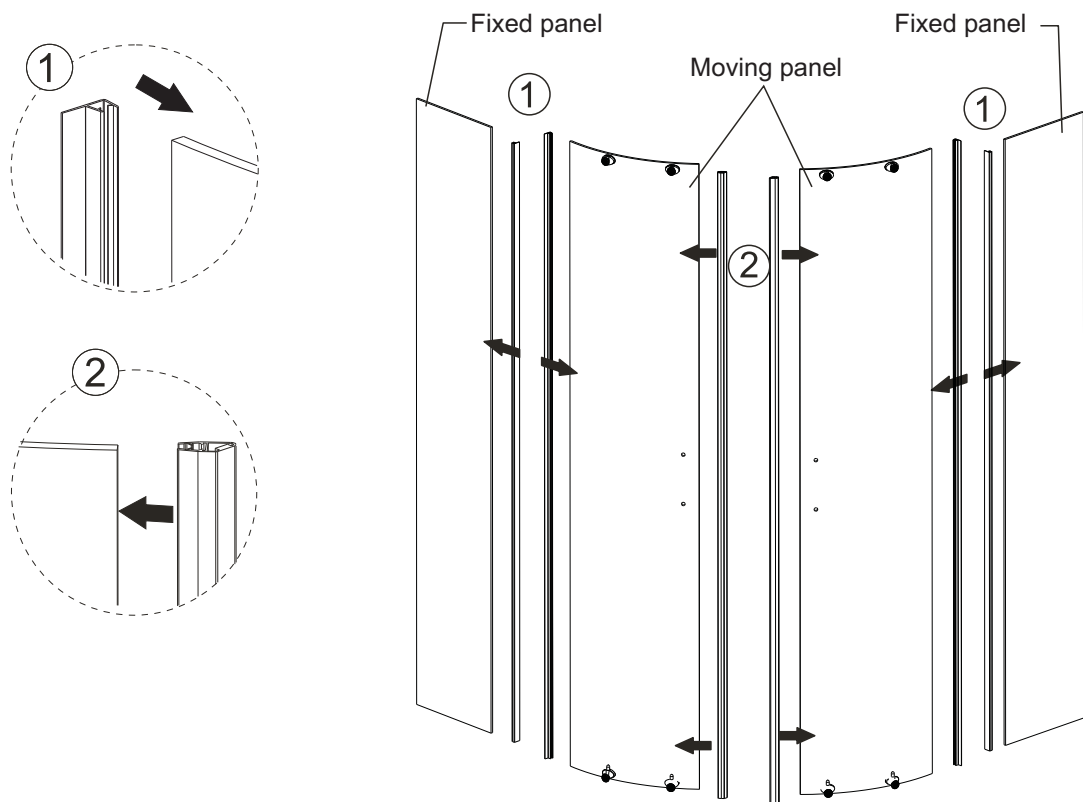


Step 6

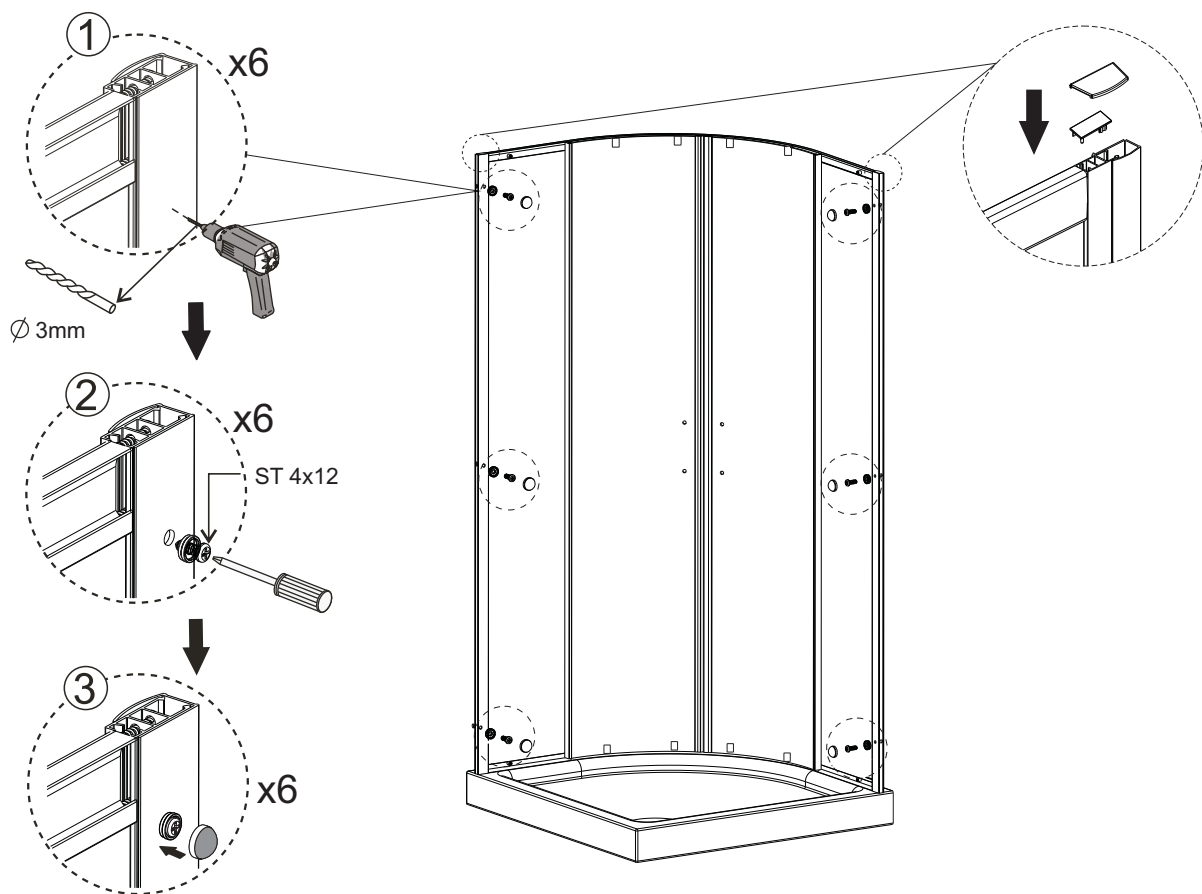

⚠ Take care not to drill into the glass

Step 7

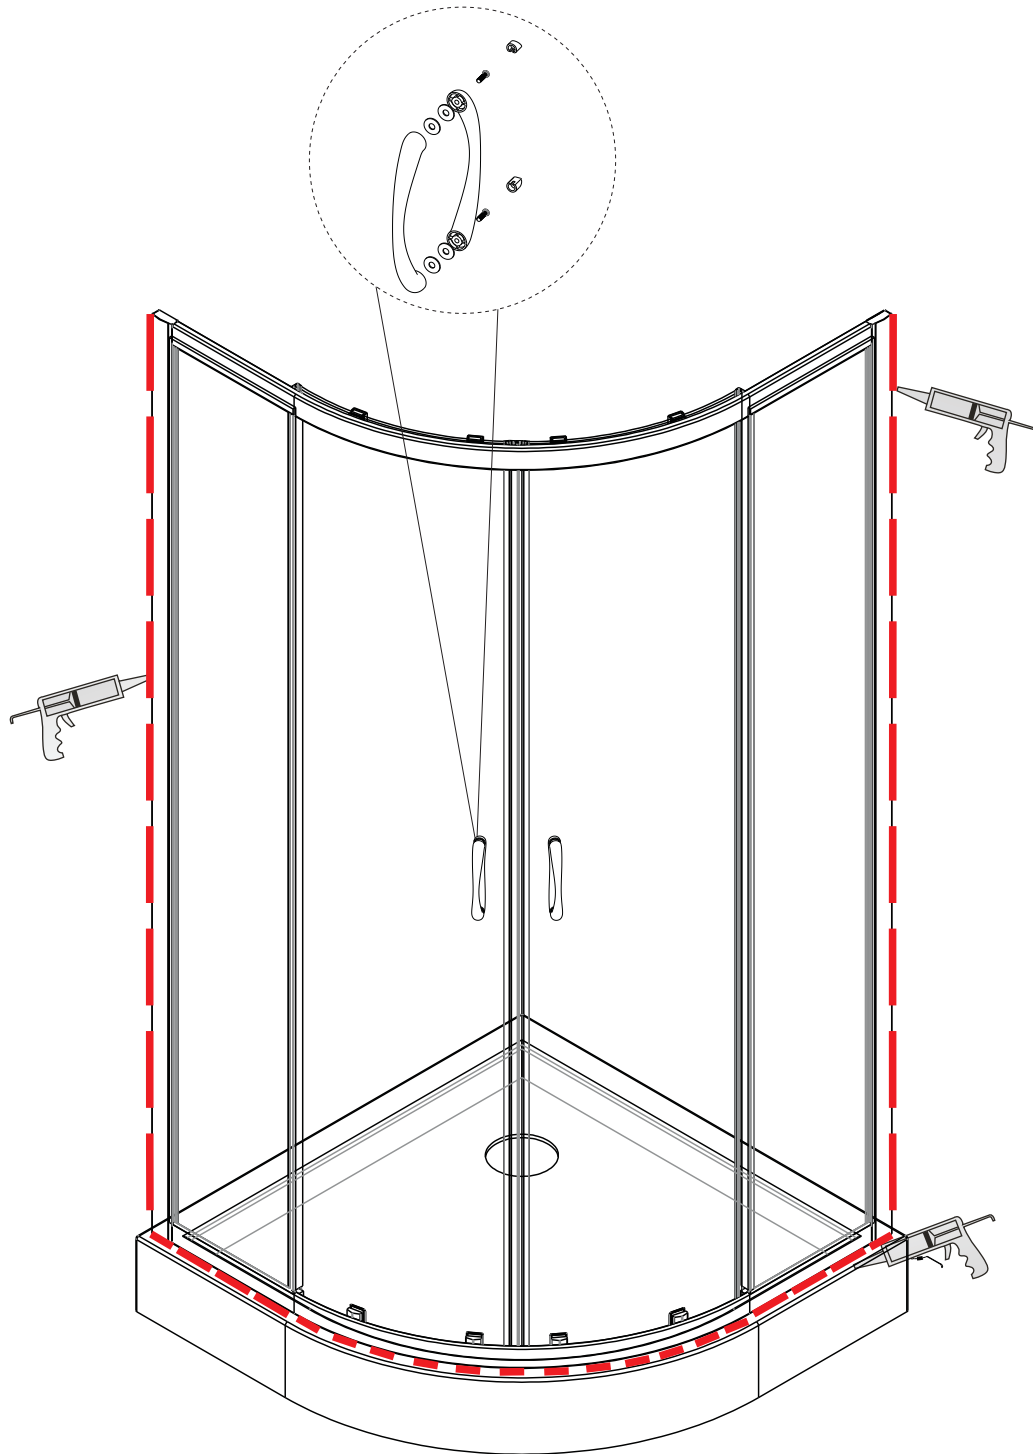

Silicone (inside edge only) where the vertical profiles meet the wall, and the horizontal profile meets the tray