



Frameless Hinged Door And Side Panel

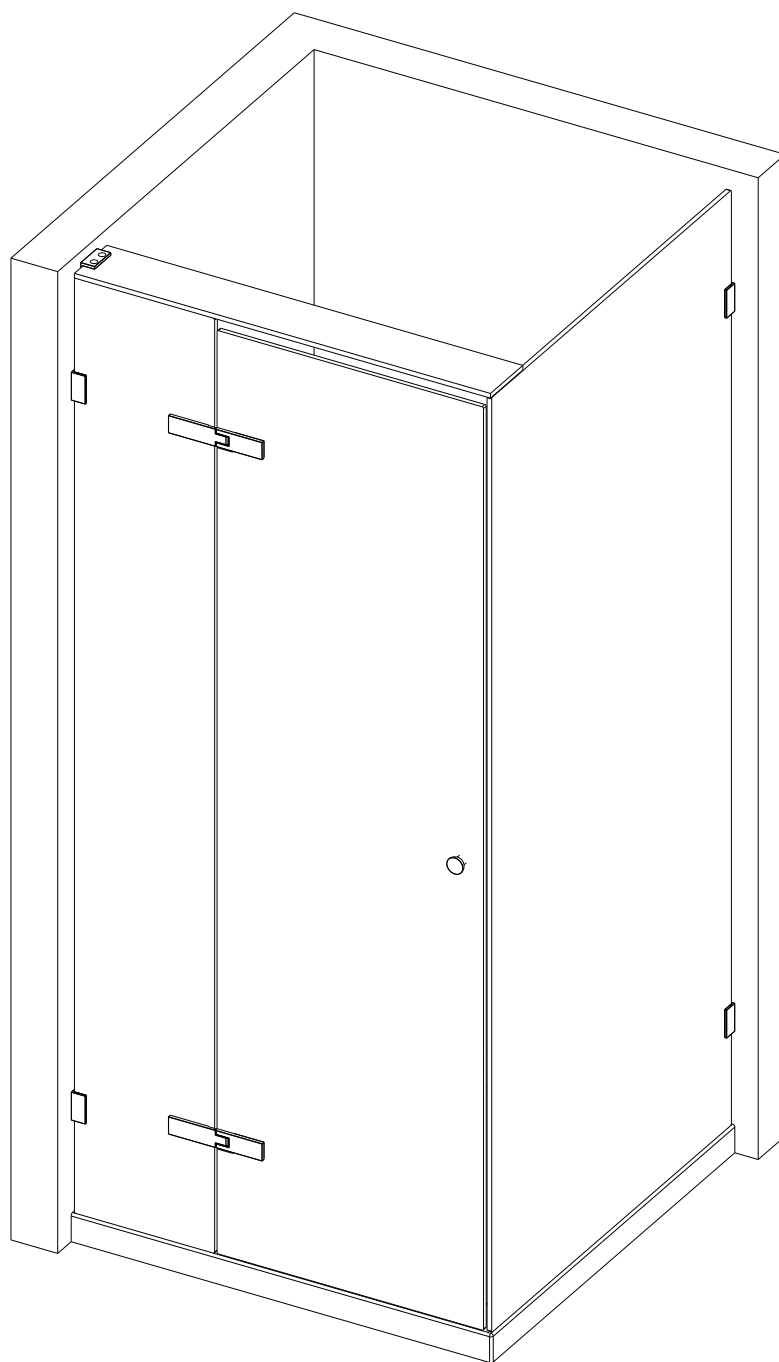

ASSEMBLY INSTRUCTIONS-DRAWING

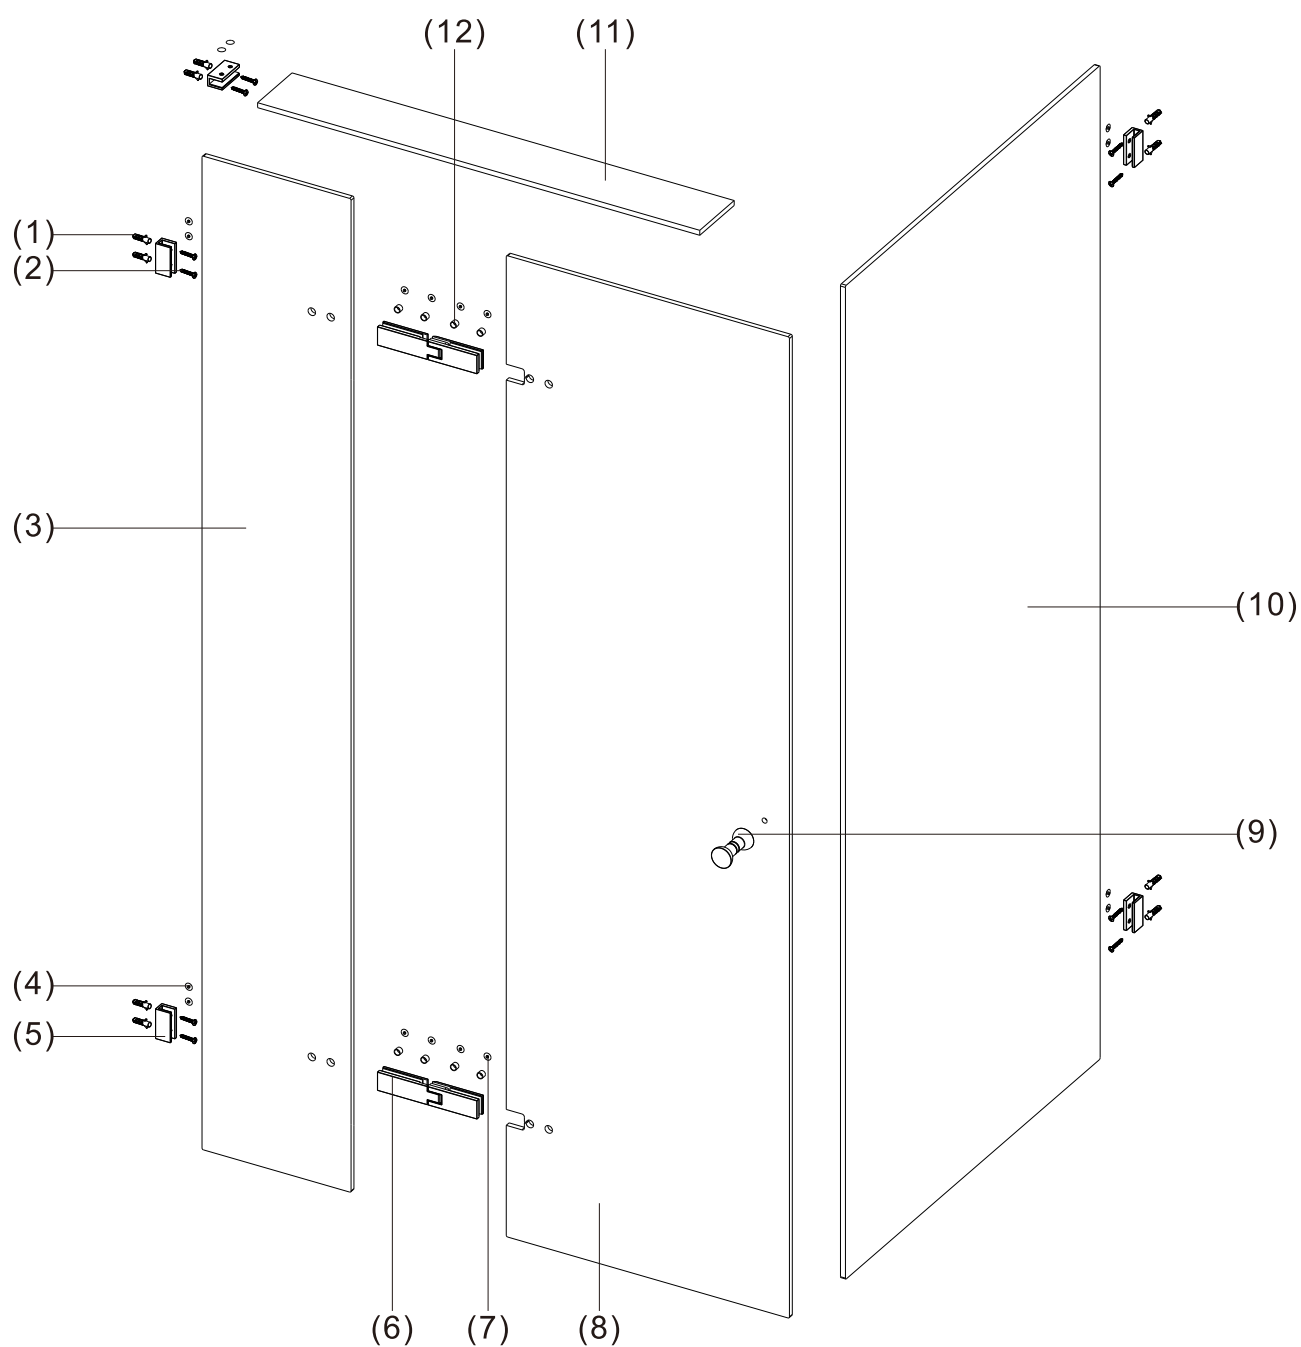

(1) 10x Wall Plugs

(2) 10x Screws ST4x30

(3) 1x Fixed Panel A

(4) 10x Wall Bracket Cover Caps

(5) 5x Wall Bracket

(6) 2x Hinges

(7) 8x Hinges Cover Caps


(8) 1x Moving Panel

(9) 1x Handle

(10) 1x Side Panel

(11) 1x Fixed Panel B

(12) 8x Washers

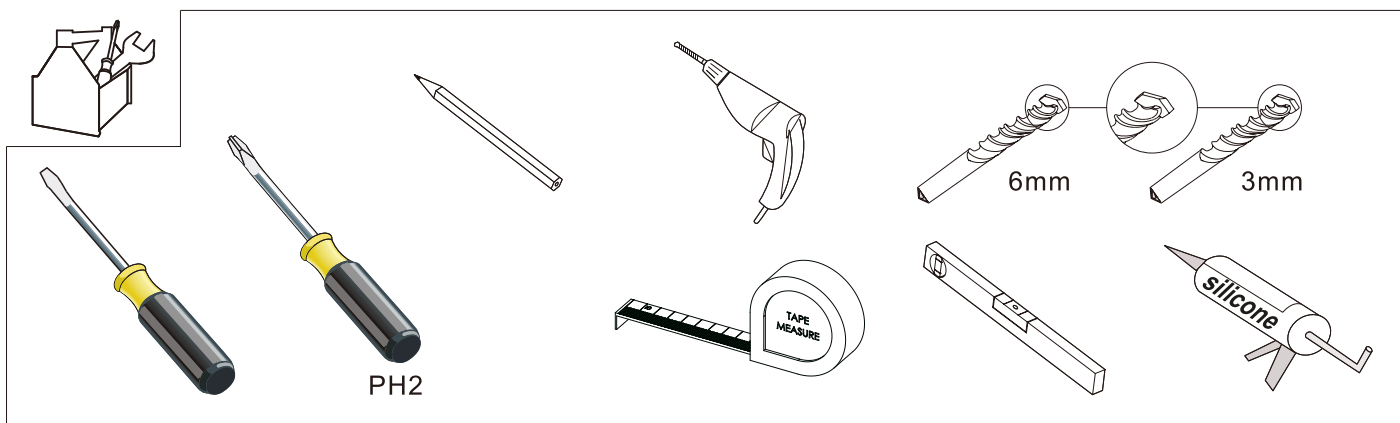

ASSEMBLY INSTRUCTIONS

If you require help, we advise you firstly contact a competent plumber



Installation

Steps





Step 1

MAKE SURE THE TRAY IS LEVEL, USING A SPIRIT LEVEL, BEFORE INSTALLING.





THIS SHOWER PANEL / DOOR.

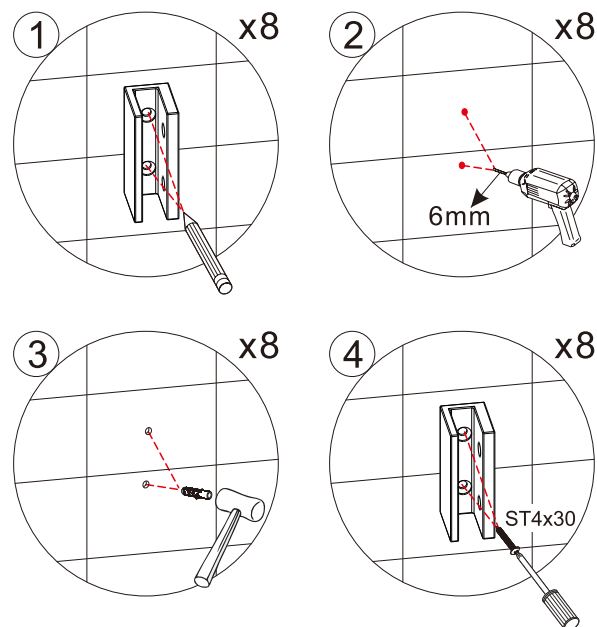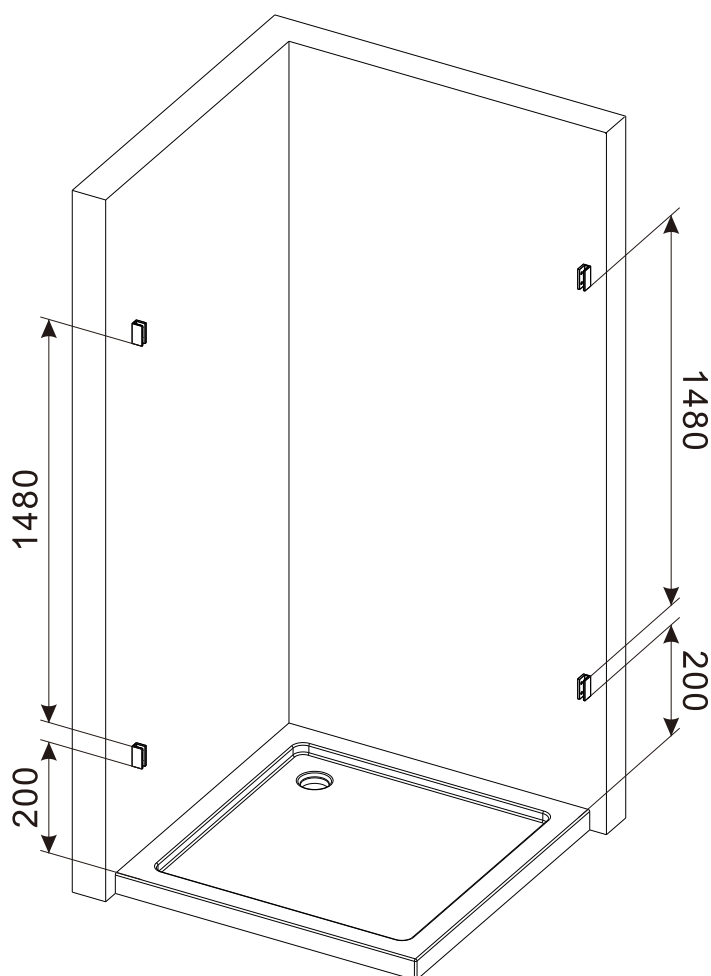



Step 2

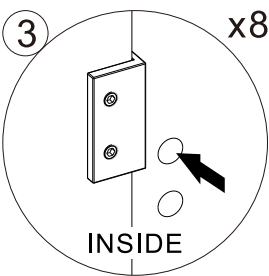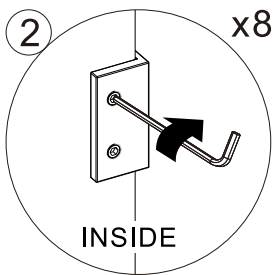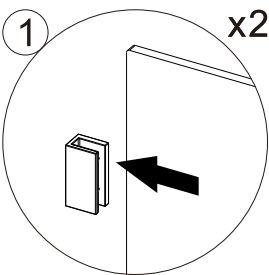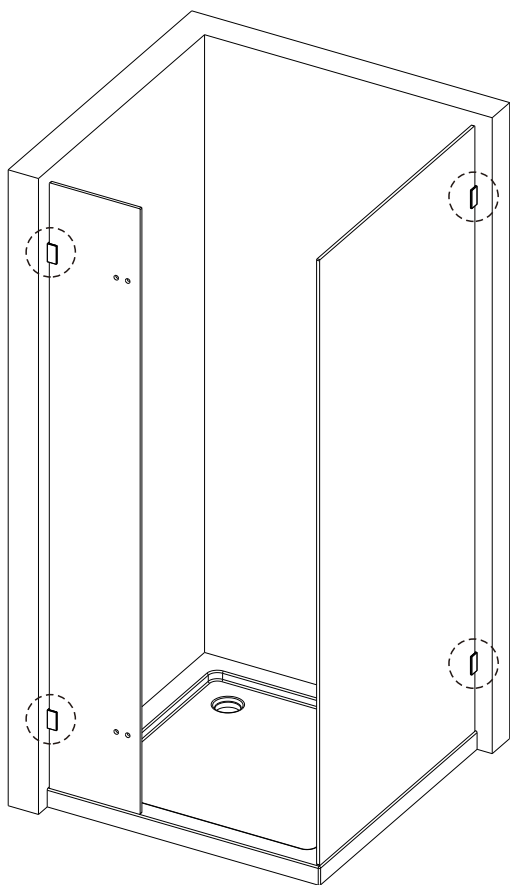



Step 3

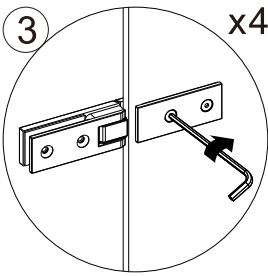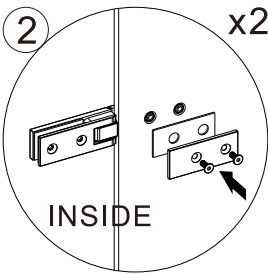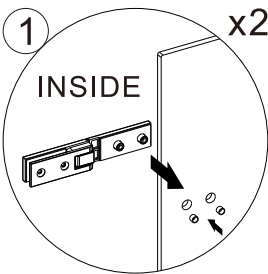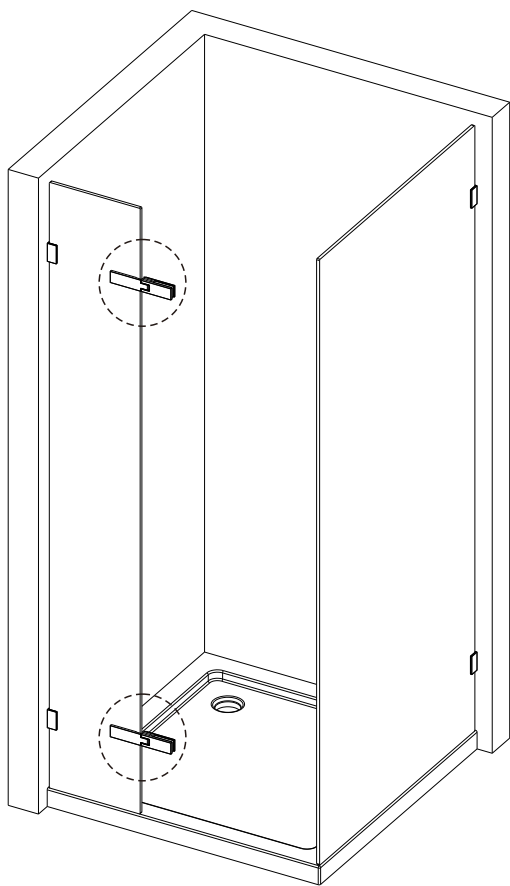


Step 4

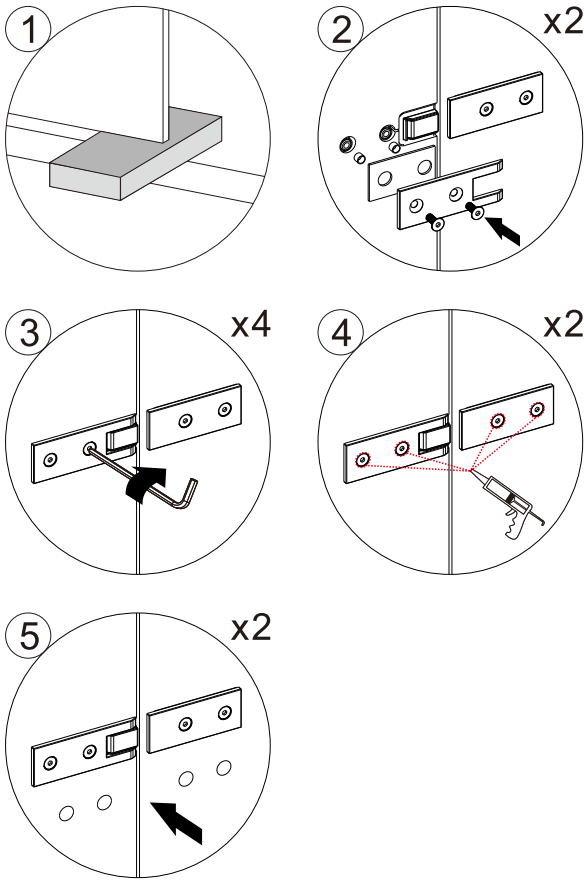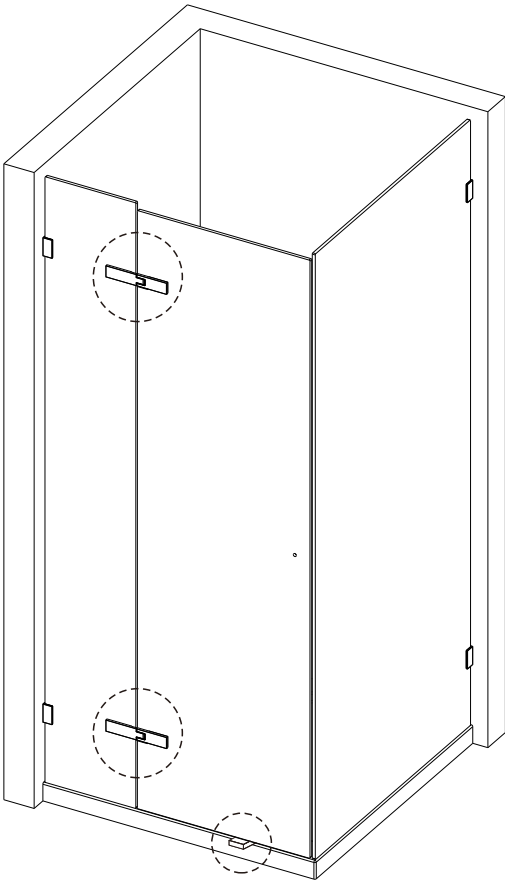

Step 5

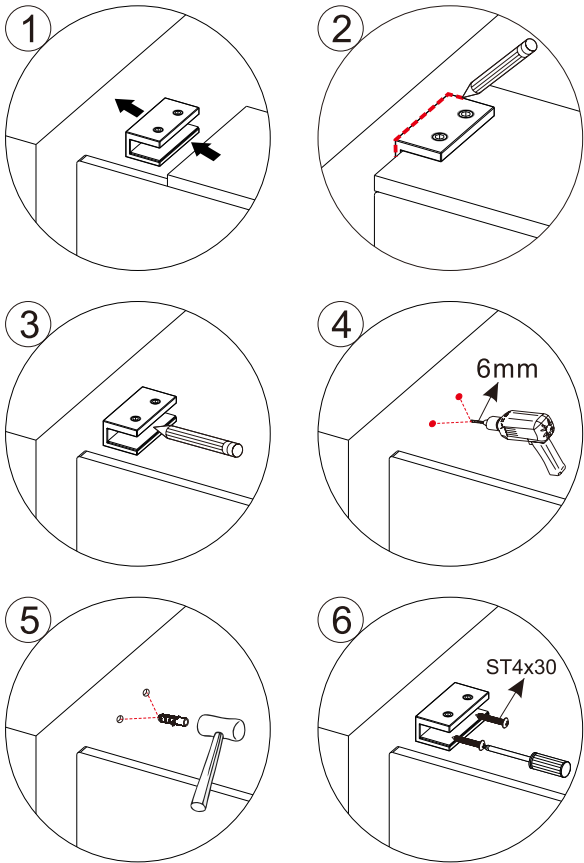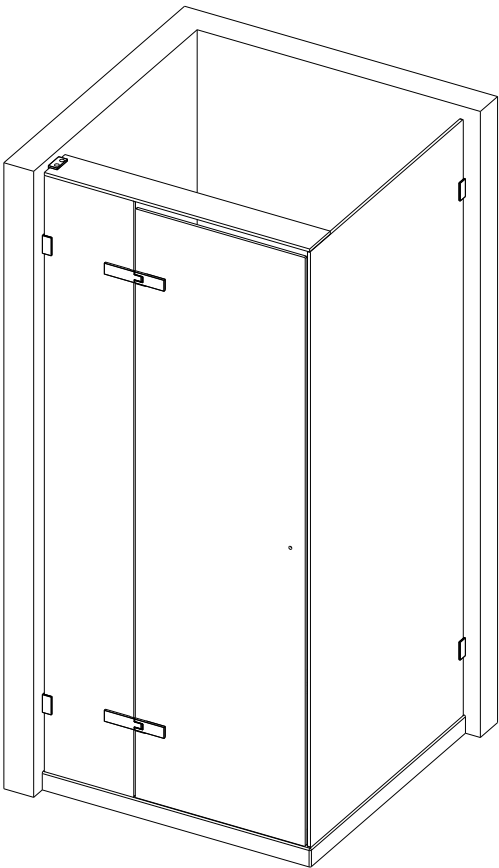

Step 6

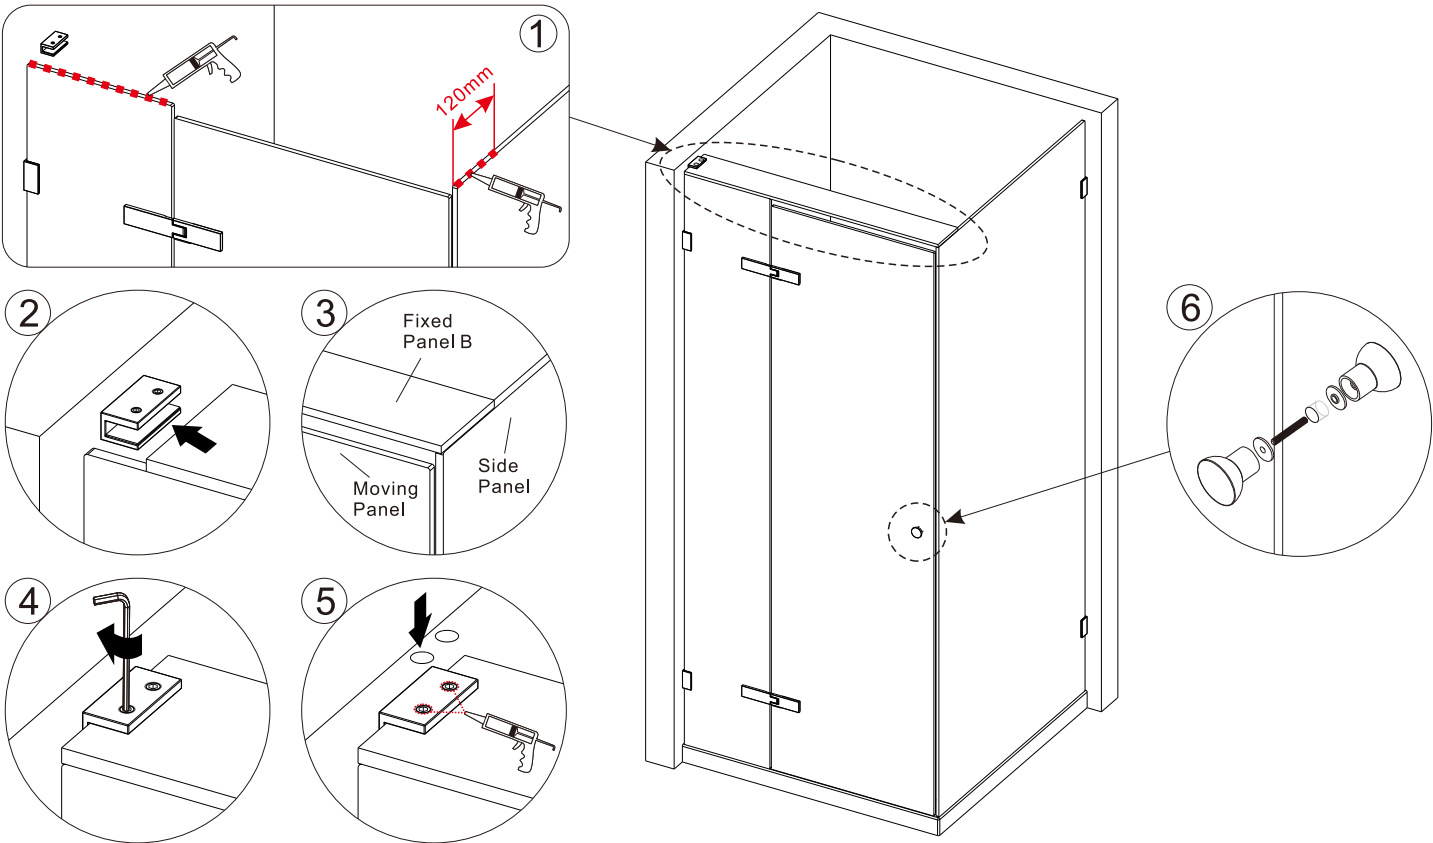

Step 7

