

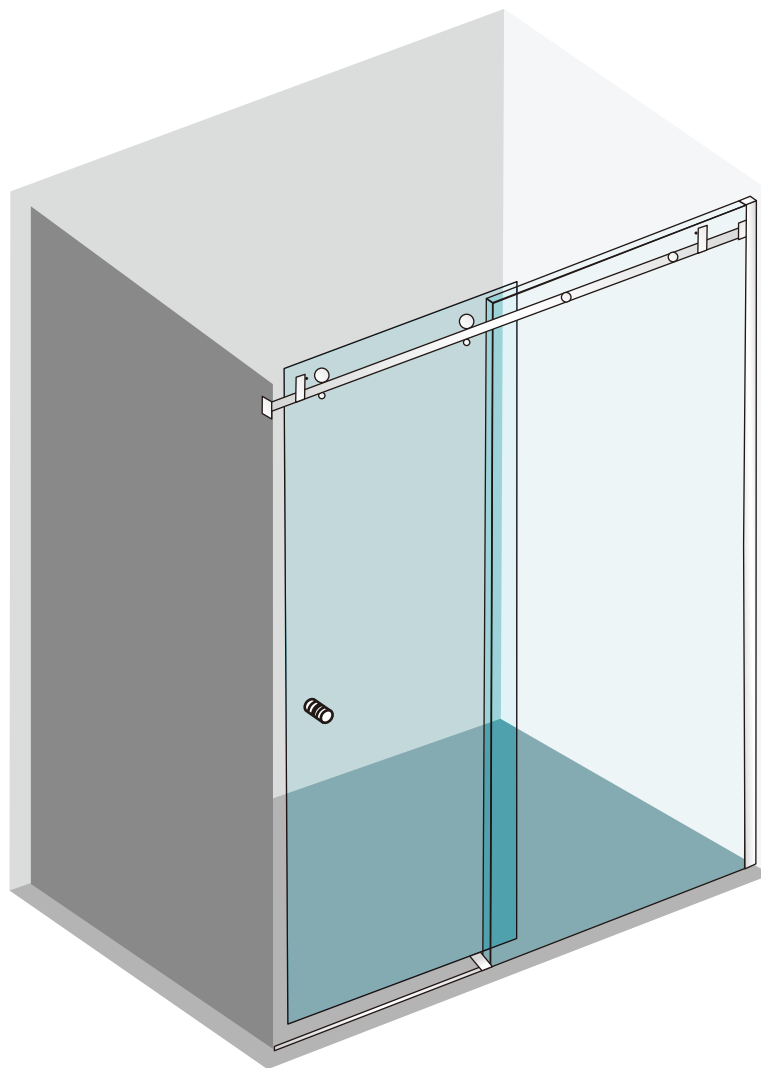


Installation Guide

Code: SS25

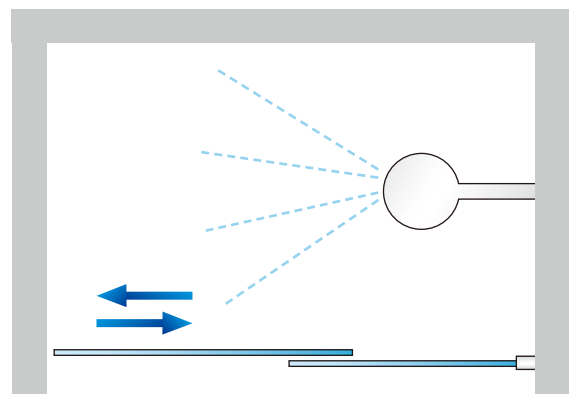

Inline Configuration

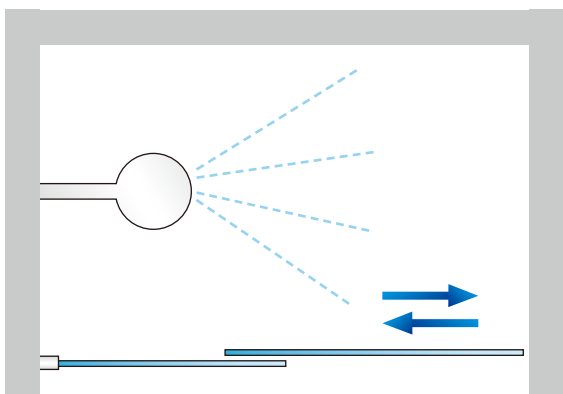

Important Notice for Purchaser/Installers

Check the contents of the pack carefully before installation.

We will not be held responsible for any de-fit/re-fit costs where faulty product has been fitted.

If any fault is found with materials or workmanship, it must be reported immediately to us

Remedial action will be taken, based on information received, on condition that:

1. Full details are supplied to us;
2. The screen has not been modified or malicious/intentional damage or neglect;
3. We are informed of any damage/shortages prior to installation.

We do NOT accept responsibility for any problems that may occur through incorrect installation.

The success of the installation and operation of any shower screen is, of course,

dependant on the squareness, alignment and construction of the walls to which fixing is to be carried out.

Glass Breakage Warning

Our shower glass panels are made from Grade A Toughened Safety Glass that complies with relevant Australian Standards. The glass can be damaged and broken if it is handled incorrectly, even if it is tough and hard to break. Always TWO persons install the panels with care. Toughened Safety Glass can NOT be cut, drilled or grinded like other ordinary glass.

We do NOT accept responsibility for glass breakage after dispatch from our warehouse.

The purchaser/installer acknowledge that it is their responsibility of checking if the glass at the time of handover was undamaged and free from any defects.

Safety Matters

ALWAYS :

- Check there is no electrical wires or hoses before you drill or mount anything.
- Wear safety glasses and gloves when handling chemicals, silicone or such.
- Work in a safe manner & comply with OHS requirements.
- Enter the shower slowly with care to avoid slipping, open & close the shower door gently to avoid any potential damage or injury.


DO NOT:

- Stand on the shower screen package or any other objects or fixings. It could cause injury or physical harm.
- Rest or place the glass panels on hard surfaces like tiles, concrete, other glass panels or metal surfaces.
- Cushion the edges with cardboard, soft timber or rubber mat.
- Impact or scratch the glass panels with any sharp metallic objects or tools.
- Allow children to use the shower alone or to play in the shower to prevent any injury.
- Use shower within 24 hours before the silicone fully dry.

Cleaning & Maintenance



Many household cleaners contain abrasive and chemical substances and should not be used for cleaning painted, plated or plastic fittings. These finished should be cleaned with a mild washing up detergent and wiped dry using a soft cloth. Regular cleansing with a biodegradable cleanser prevents stubborn stains and ensures a clean and hygienic surface for many years. Do NOT use scouring or caustic cleansers under any circumstances. These can damage the surface finish of this product.

Tools & Equipments Required

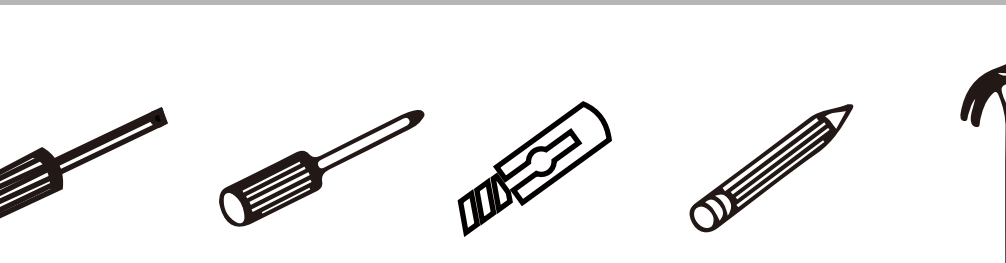


The image displays a collection of tools and equipment arranged in two rows. The top row includes two screwdrivers with different handle designs, a pencil, and a claw hammer. The bottom row features a power drill, a spirit level, a staple gun, a square, and a tape measure. All items are rendered in a simple, black-and-white line-art style.


Parts list

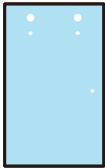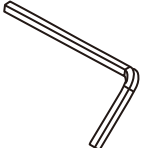1  x1 Door Panel	2  x1 Fixed Panel	3  x1 Wall Channel	4  x1 Plastic Wedge
5  x1 Pre-Drilled Rail	6  x2 Door Roller	7  x2 Fixed Panel-Rail Connector	8  x2 Door Stabiliser Guide
9  x2 Wall-Rail Bracket	10  x2 Stopper	11  x1 Floor Guide	12  x1 Round Knob
13  x3 Allen Key	14  x1 Water Bar	15  x1 Panel Water Seal	16  x2 Door Bumper Stopper
17  x5 ST4 x 30 Screws	18  x5 Wall plugs		


1

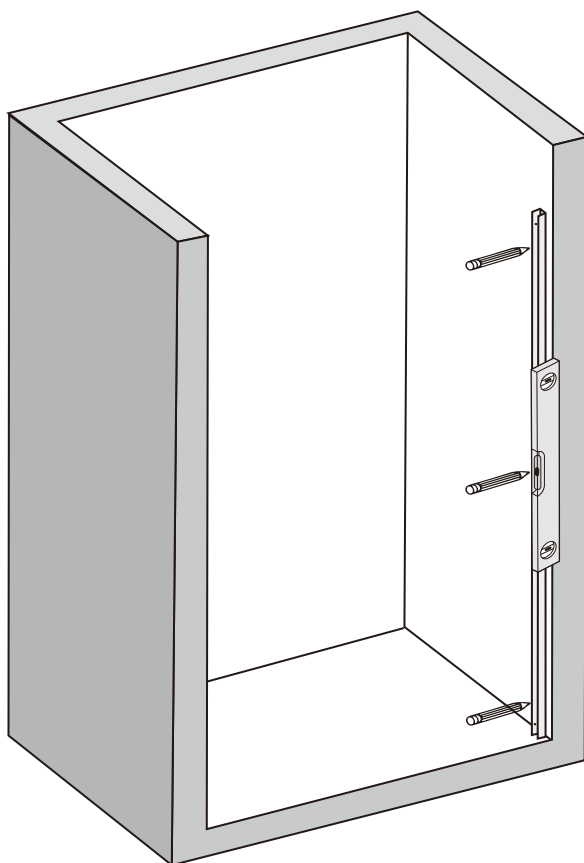


- Wall profile of this screen can be channel or bracket.
- The wall profile in this guide is wall channel as example.

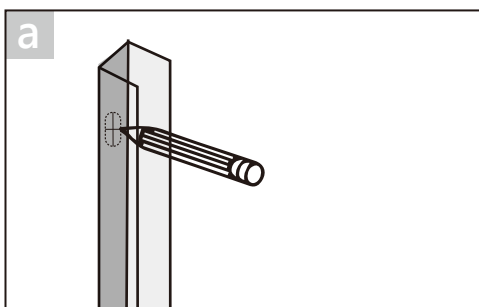


a Position and level the wall channels. Mark the fastening holes.

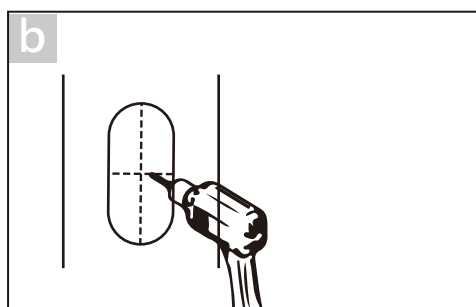

b Drill the wall covering.

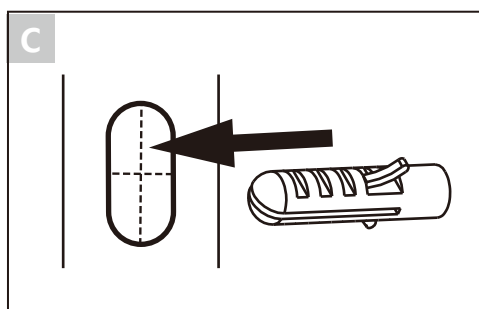


c If no studs are behind the wall covering, use wall plugs when fastening the wall channels.

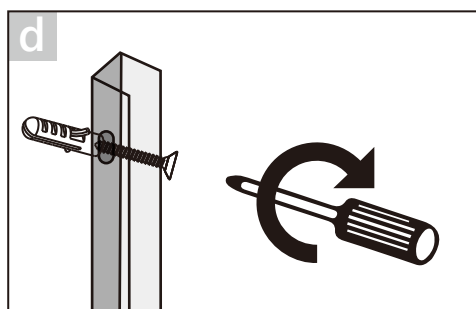


d Fasten the wall channel with ST4*30 screws.

2


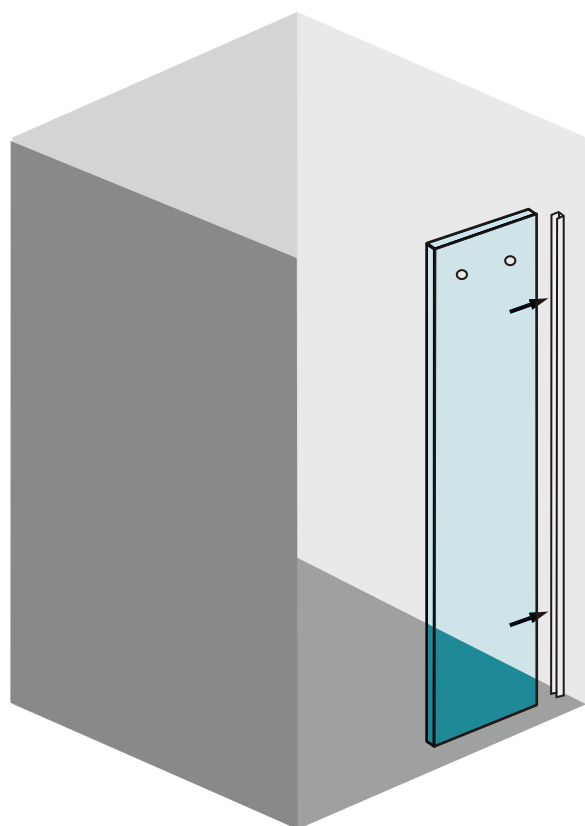


view from outside

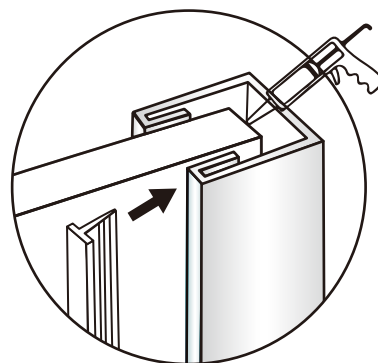

Insert the plastic wedge
between fixed panel &
wall channel.
Recommend apply silicone
inside the channel.

3

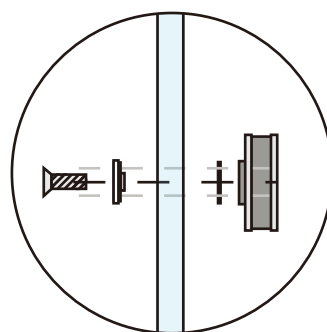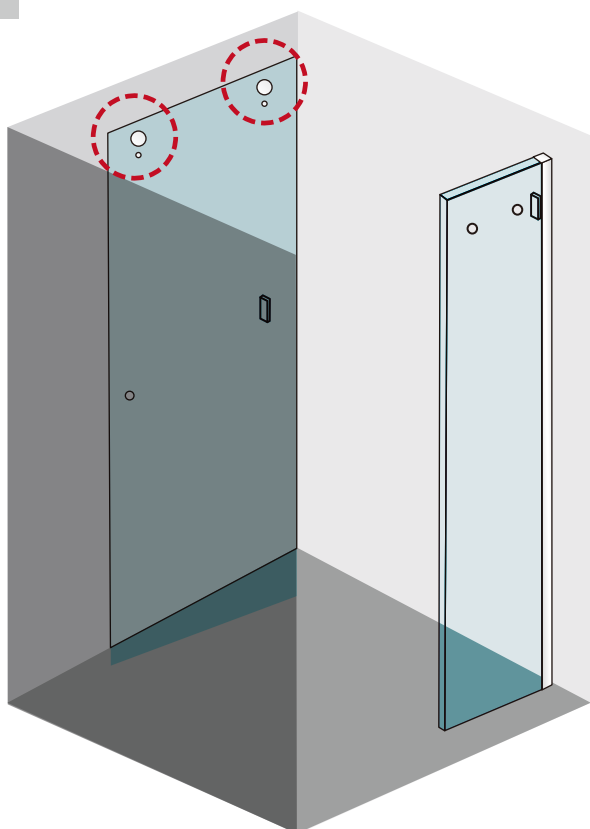


Fit door rollers on the door panel.



Tips

Place door panel inside the shower
safely before connecting rail.

4

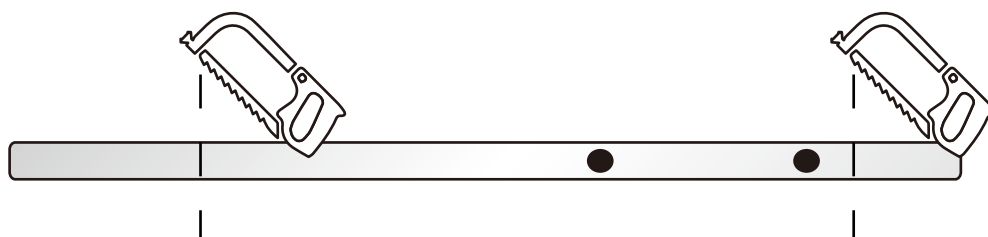


- Take measurement between the wall and the center of the first hole on fixed panel
- Take measurement between the wall and the wall
- Cut rail to suit width between bracket blocks.





Slide 2x stoppers and 2x wall bracket sleeves onto the rail before fitting to the blocks.

5

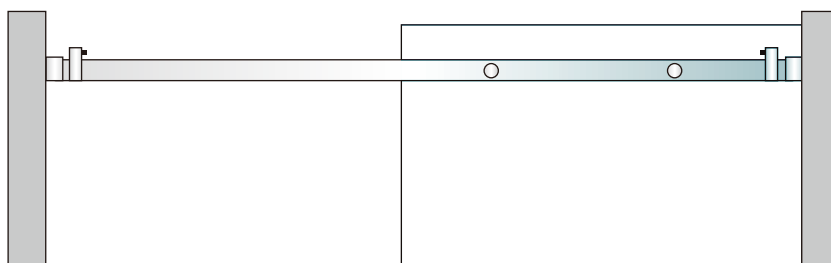


Attach rail to wall brackets by sliding wall bracket outer sleeves over the wall blocks and secure with grub screws.

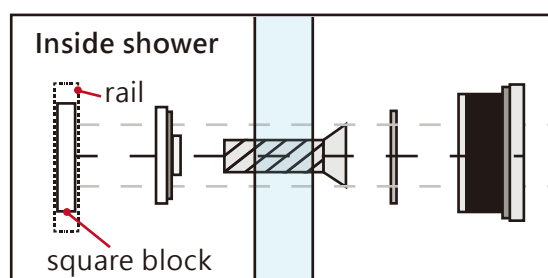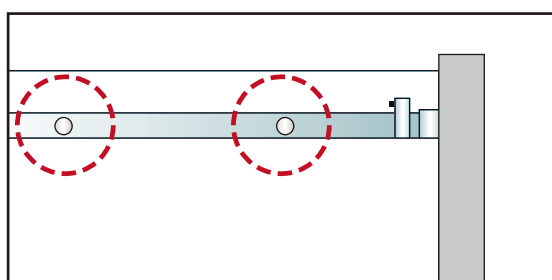

Attach Fixed Panel-Rail Connector to connect rail to fixed panel.

6

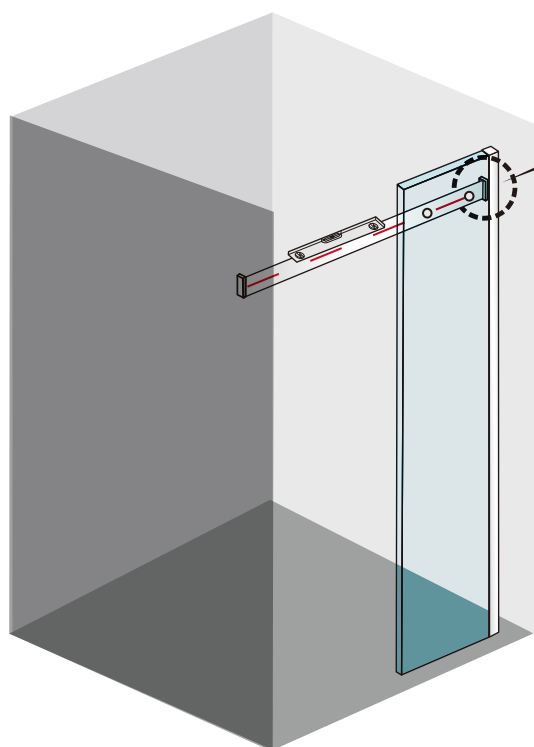

Side view
Facing the wall



Inside shower

Wall rail
bracket block




Make the wall bracket when the rail is 100% plumbed, remove the rail and fixed the internal blocks, reattached the rail to the fixed panel


7

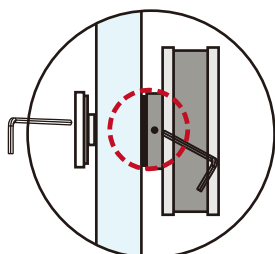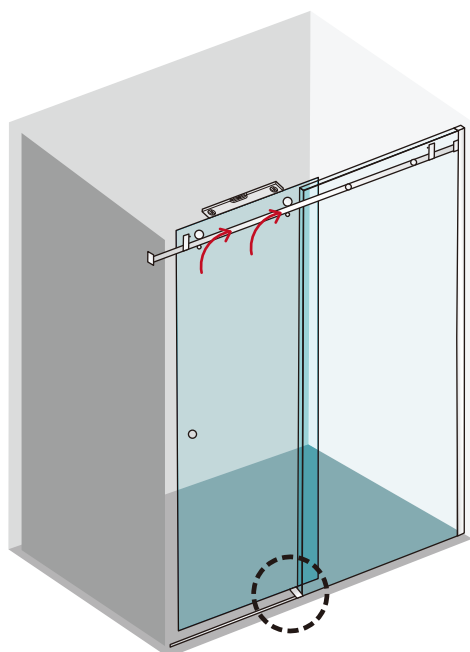

To level door panel,
use allen key to
adjust roller.

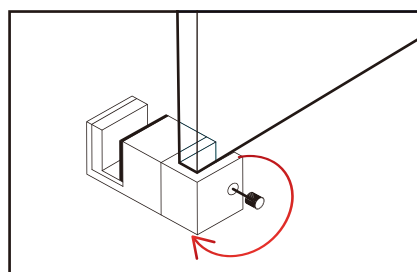


Ensure the floor guide is set to suit your desired composition (left or right). Then Proceed to use the grub screw to secure the guide to the bottom leading corner of the fixed panel.

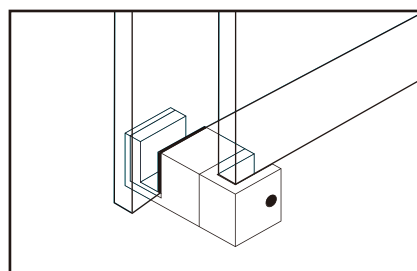


Hang door on the rail while fitting bottom edge into the floor guide and adjust wheel cam until level.

8



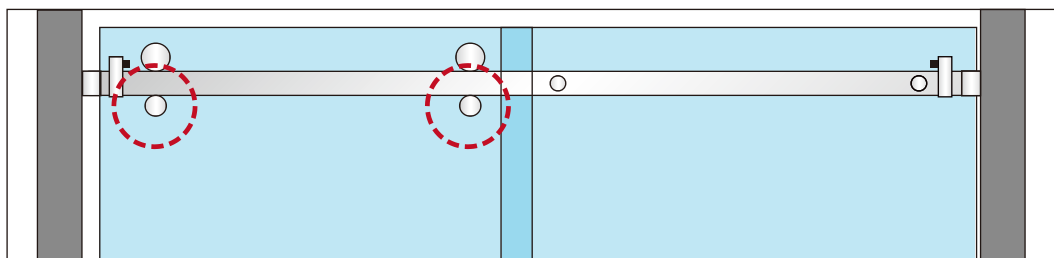


Fit door stabiliser guides to door and adjust to prevent door from lifting.



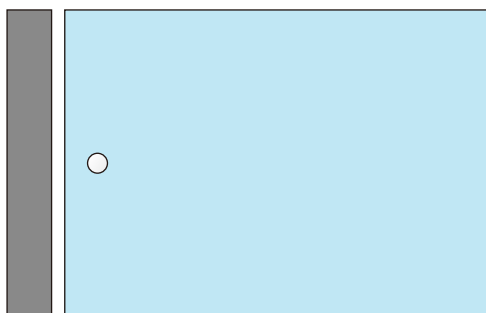


Fit knob to the door


9

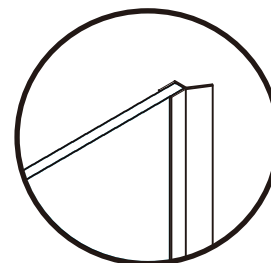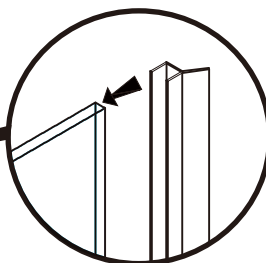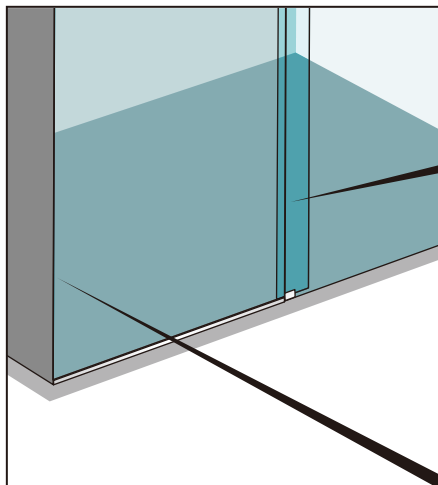

Fit side water seal on fixed panel.

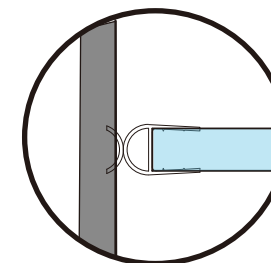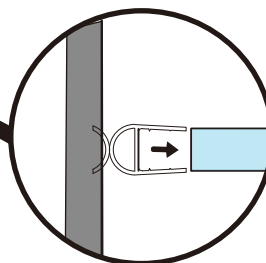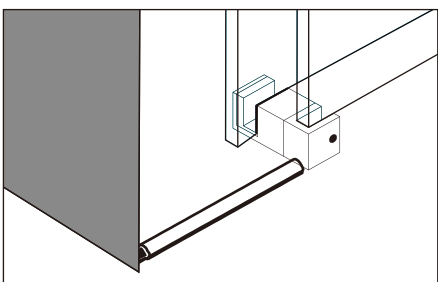


Fit door bumper seals on the both sides of door panel.


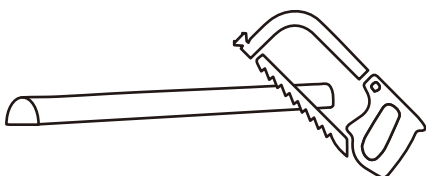


Measure and cut water bar to fit under the door panel. Silicone around the water bar.

10

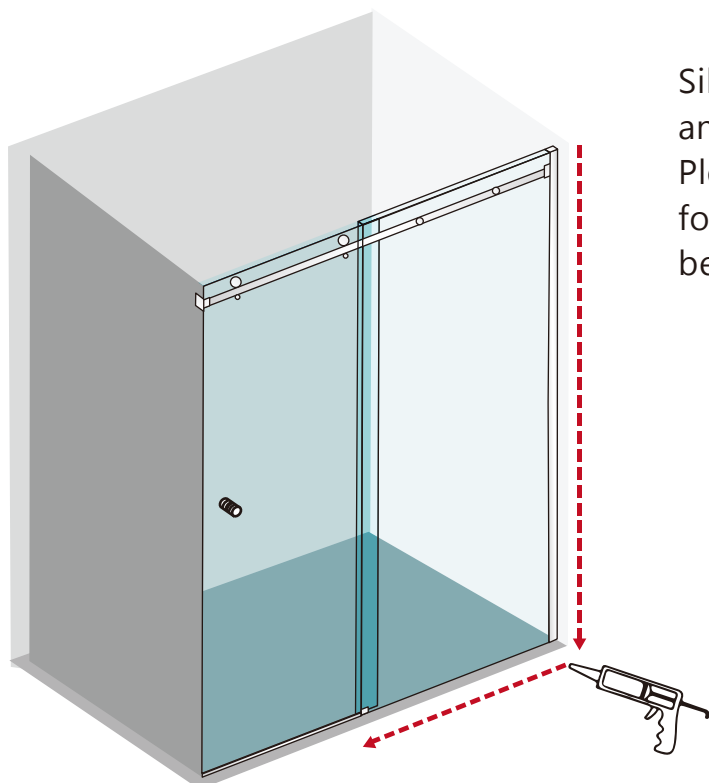

Silicone along wall channel and bottom of the fixed panel. Please allow at least 24 hours for the silicone to fully cure before using the shower.

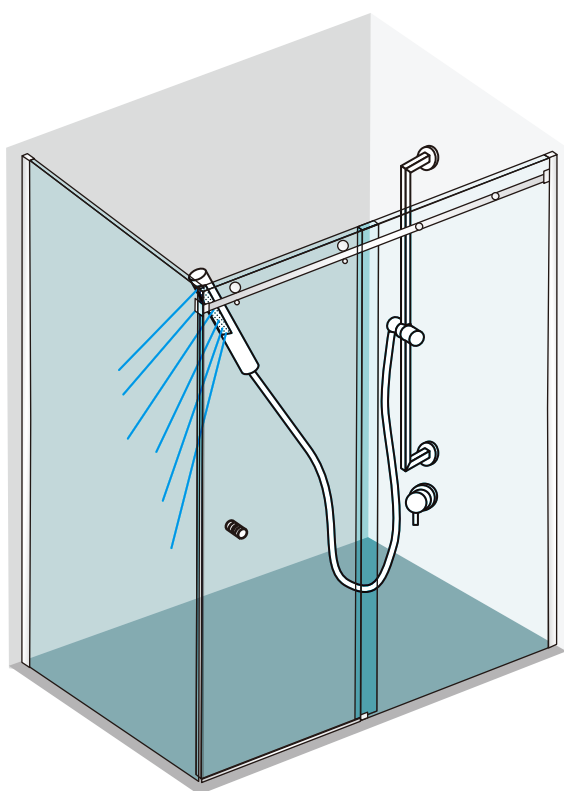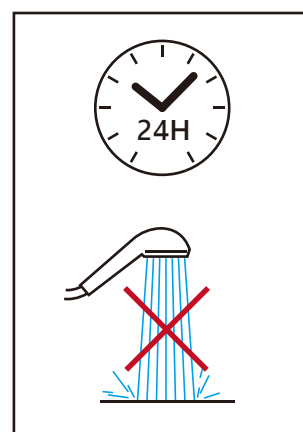

This shower system is projected to offer maximum aesthetics united to optimum functionality, assuring water tightness during showering, and quick rinsing operations. Only correct installation assures adequate water tightness.

