

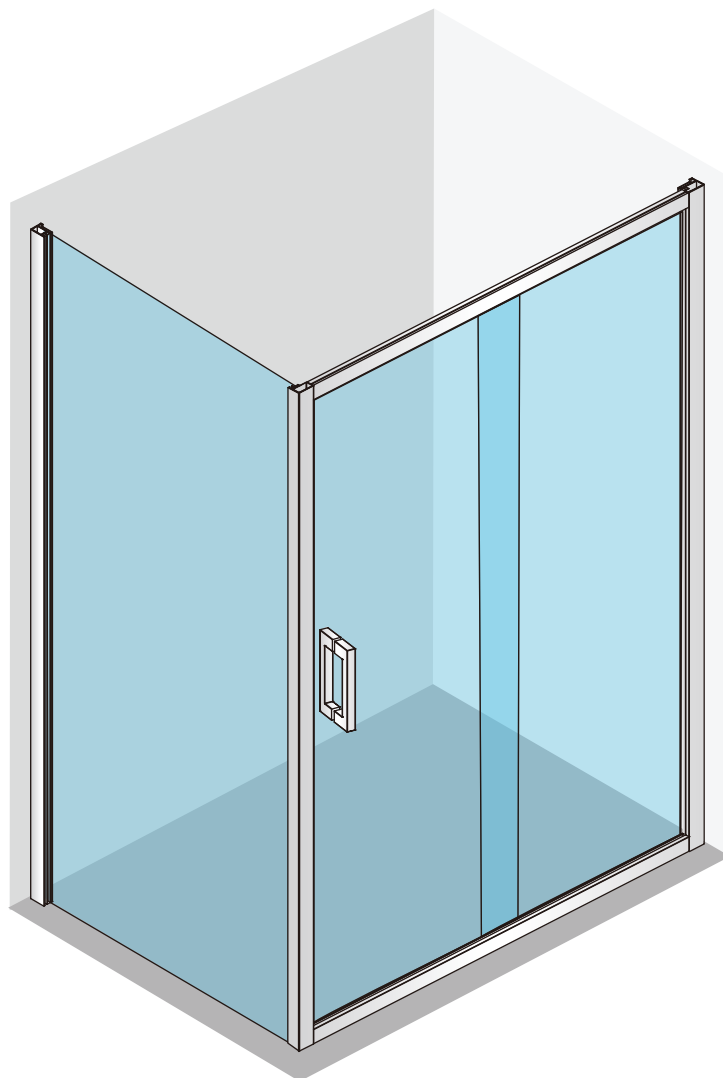


Installation Guide

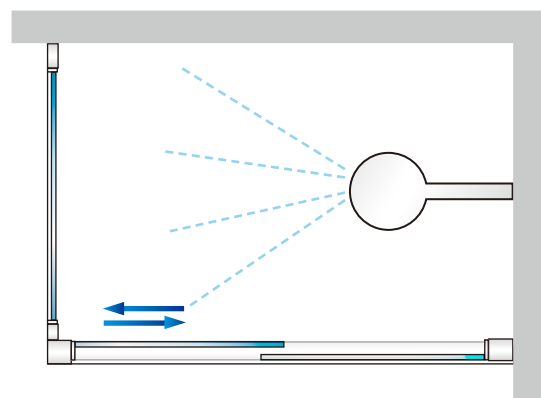

L Shape Configuration

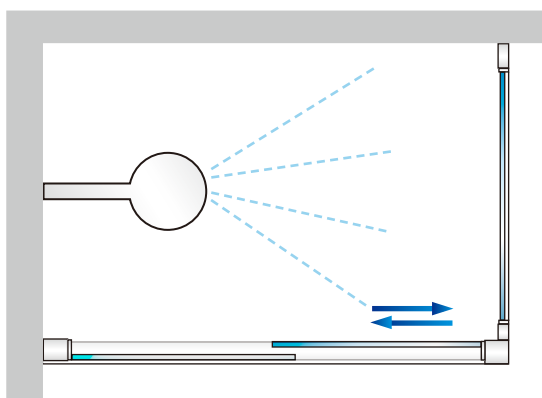

Important Notice for Purchaser/Installers

Check the contents of the pack carefully before installation.

MBS will not be held responsible for any de-fit/re-fit costs where faulty product has been fitted.

If any fault is found with materials or workmanship, it must be reported immediately to the MBS.

Remedial action will be taken, based on information received, on condition that:

1. Full details are supplied to the MBS;
2. The screen has not been modified or malicious/intentional damage or neglect;
3. The MBS is informed of any damage/shortages prior to installation.

We do NOT accept responsibility for any problems that may occur through incorrect installation.

The success of the installation and operation of any shower screen is, of course, dependant on the squareness, alignment and construction of the walls to which fixing is to be carried out.

Glass Breakage Warning

MBS's shower glass panels are made from Grade A Toughened Safety Glass that complies with relevant Australian Standards. The glass can be damaged and broken if it is handled incorrectly, even if it is tough and hard to break. Always TWO persons install the panels with care. Toughened Safety Glass can NOT be cut, drilled or grinded like other ordinary glass.

We do NOT accept responsibility for glass breakage after dispatch from MBS.

The purchaser/installer acknowledge that it is their responsibility of checking if the glass at the time of handover was undamaged and free from any defects.

Safety Matters

ALWAYS :


- Check there is no electrical wires or hoses before you drill or mount anything.
- Wear safety glasses and gloves when handling chemicals, silicone or such.
- Work in a safe manner & comply with OHS requirements.
- Enter the shower slowly with care to avoid slipping, open & close the shower door gently to avoid any potential damage or injury.

DO NOT:


- Stand on the shower screen package or any other objects or fixings. It could cause injury or physical harm.
- Rest or place the glass panels on hard surfaces like tiles, concrete, other glass panels or metal surfaces.
- Cushion the edges with cardboard, soft timber or rubber mat.
- Impact or scratch the glass panels with any sharp metallic objects or tools.
- Allow children to use the shower alone or to play in the shower to prevent any injury.
- Use shower within 24 hours before the silicone fully dry.

Cleaning & Maintenance








Many household cleaners contain abrasive and chemical substances and should not be used for cleaning painted, plated or plastic fittings. These finished should be cleaned with a mild washing up detergent and wiped dry using a soft cloth. Regular cleansing with a biodegradable cleanser prevents stubborn stains and ensures a clean and hygienic surface for many years. Do NOT use scouring or caustic cleansers under any circumstances. These can damage the surface finish of this product.

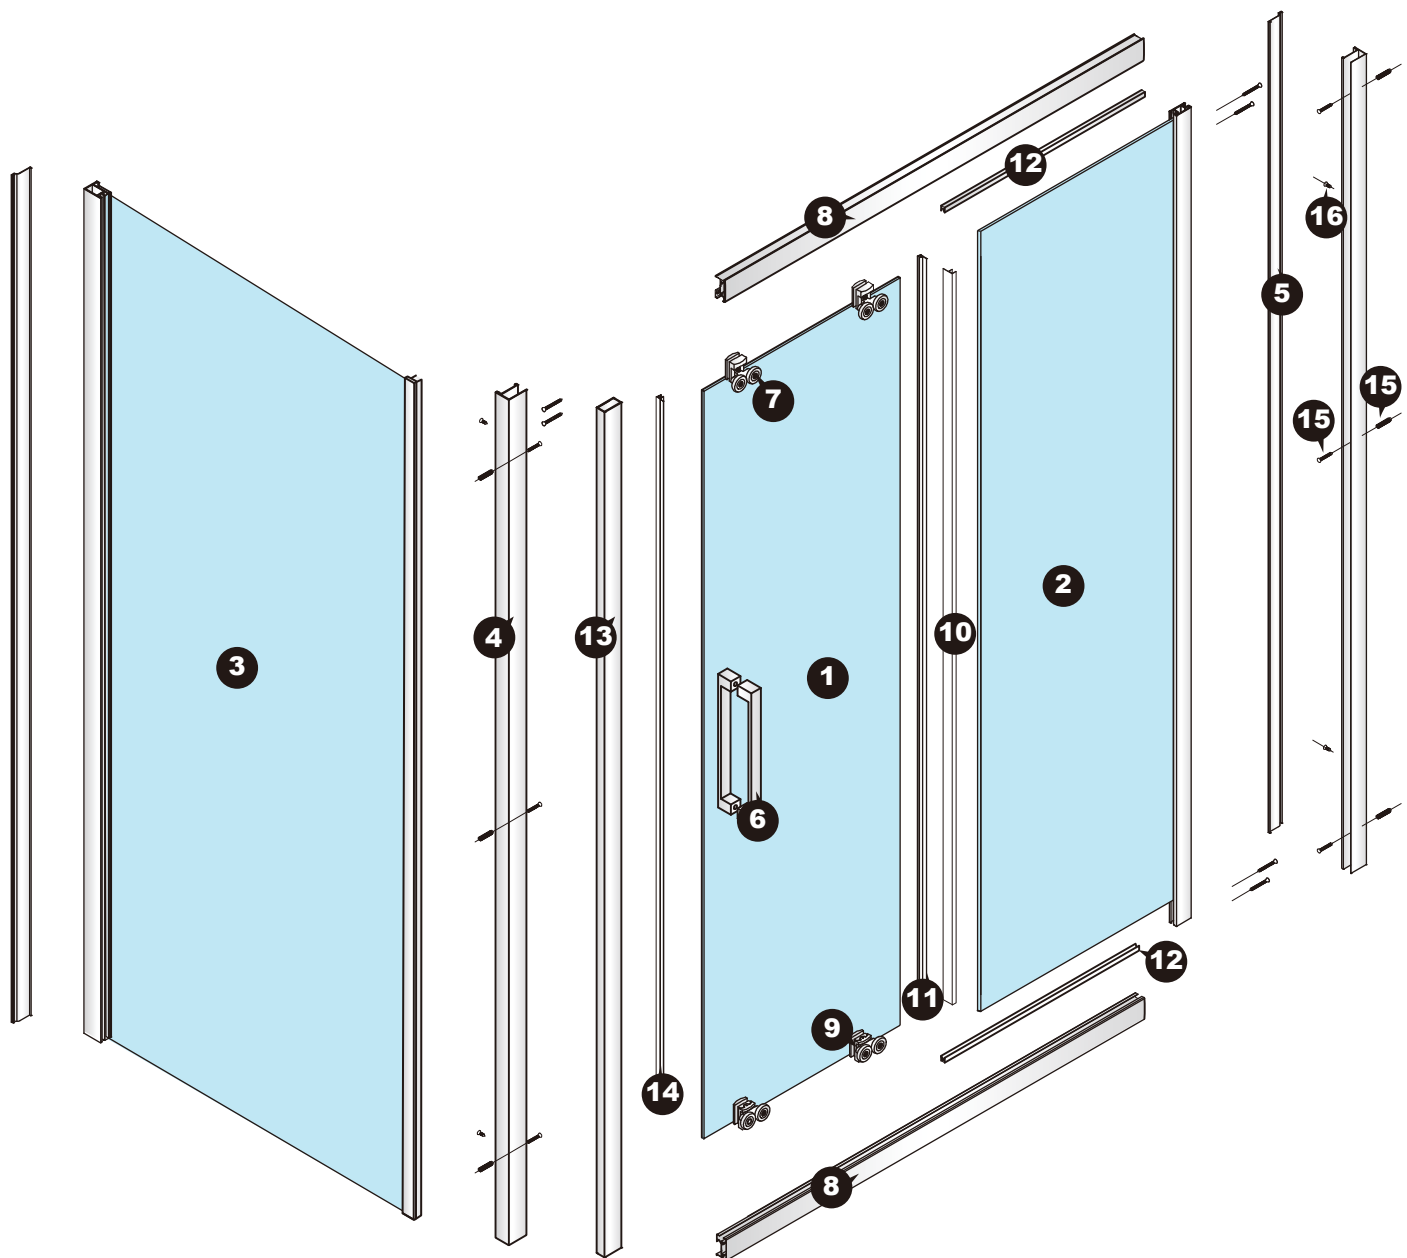



Tools & Equipments Required

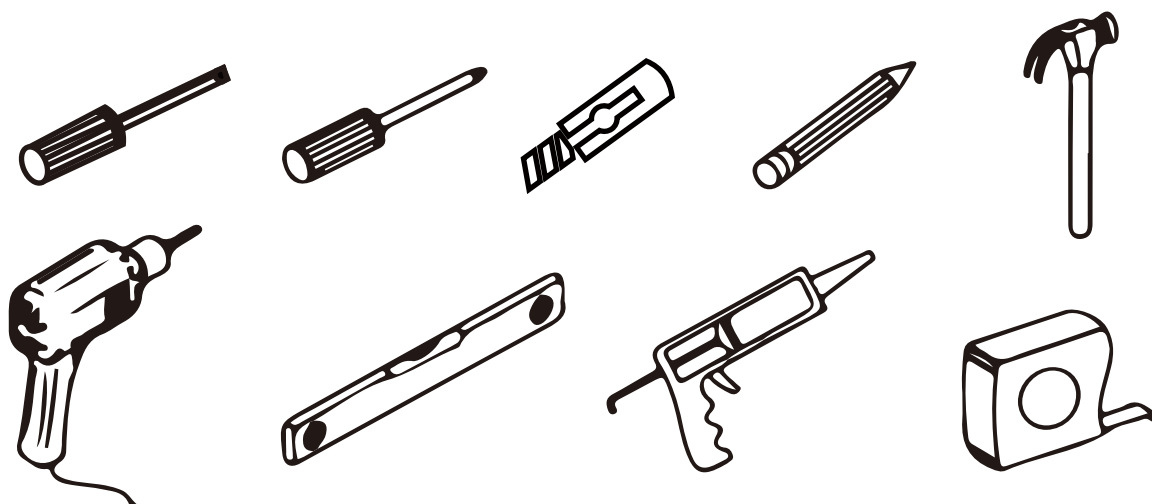


Parts list

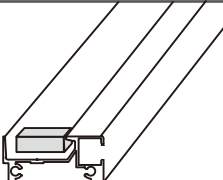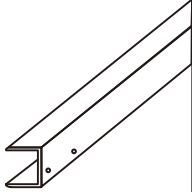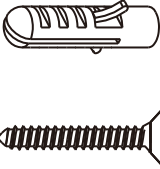1  x1 Door Panel	2  x1 Fixed Panel	3  x1 Return Panel	4  x2 Wall Channel
5  x2 Wall Channel Side cover	6  x1 Door handle	7  x2 Top roller	8  x2 Rail
9  x2 Bottom roller	10  x1 F shape water seal	11  x2 Door side water seal	12  x2 U-type sealant strip
13  x1 Upright profile	14  x1 Return panel connector cover	15  x7 x14 Screws & Plugs	16  x6 ST4 x 10 screws


1

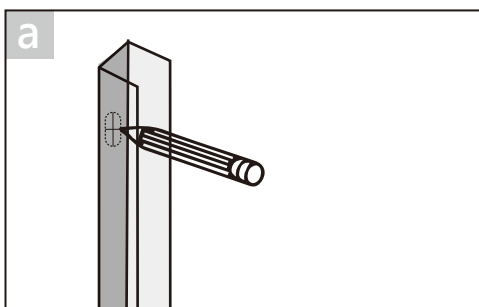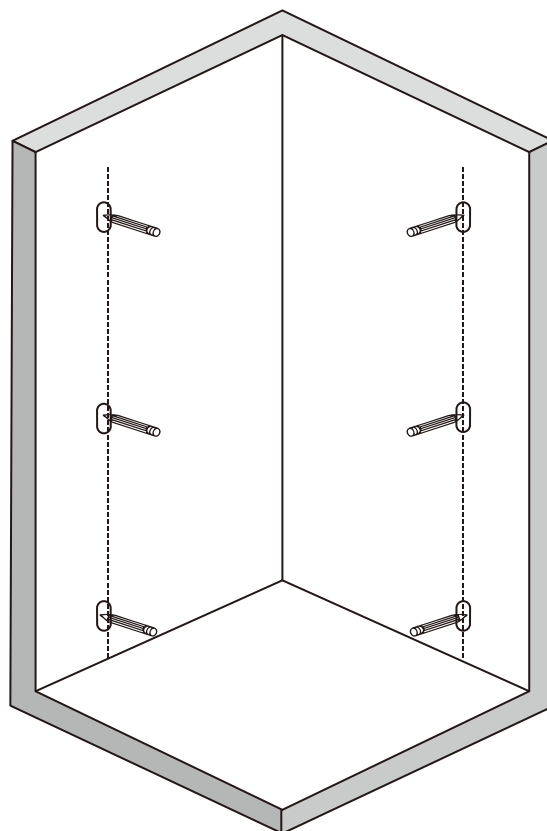


a Position and level the wall channels. Mark the fastening holes.

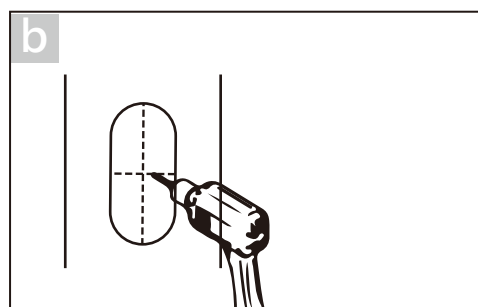

b Drill the wall covering.

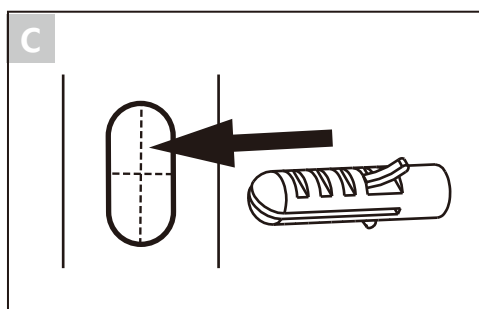


c If no studs are behind the wall covering, use wall plugs when fastening the wall channels.

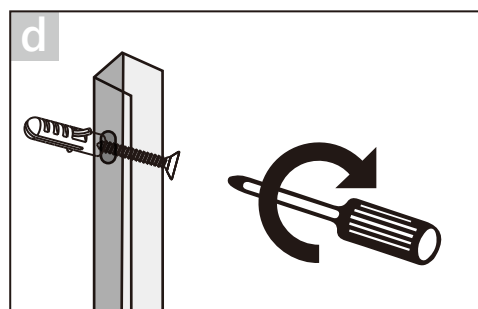


d Fasten the wall channel with ST4*30 screws.

2

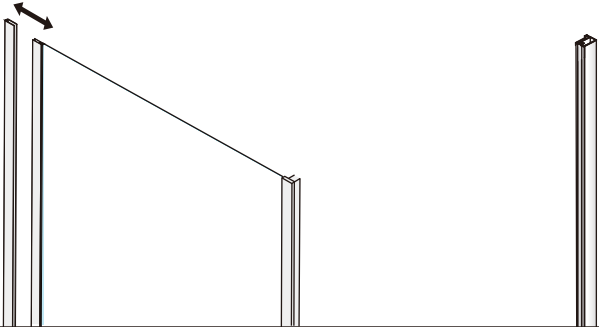

Insert return panel into wall channel.

3

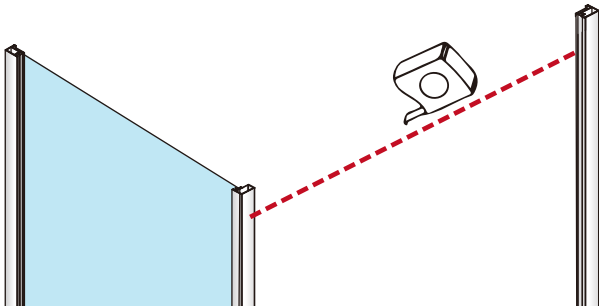


take measurement from wall to return panel.

4


calculate the length of overall size of front frame.

Top view

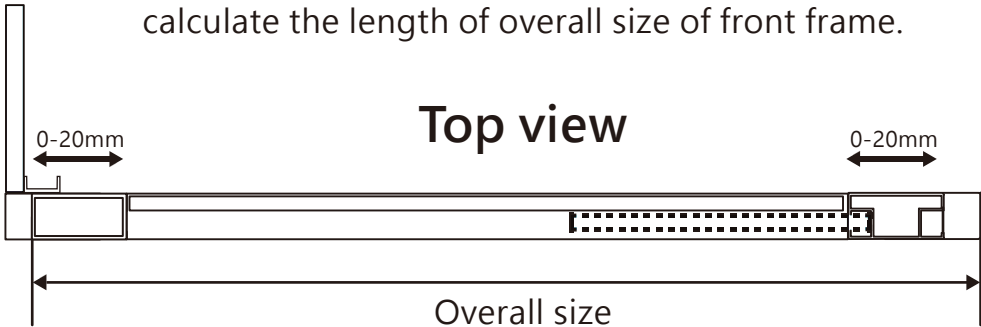

Overall size

5


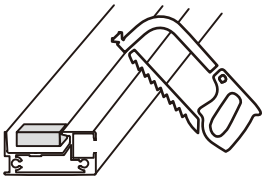


Warning: This screen is not adjustable, desired sizes can be achieved by cutting rails


- If the actual size is more than pre-made size of front frame, the desired sizes can be acheivable by adjusting channels.
- If the actual size is less than pre-made size of front frame, the desired sizes can be acheivable by cutting top & bottom rails.

Size Range (mm)	Pre-made Size (mm)
900-1000	960
1000-1100	1060
1100-1200	1160
1200-1300	1260
1300-1400	1360
1400-1500	1460
1500-1600	1560
1600-1700	1660
1700-1800	1760
1800-1900	1860
1900-2000	1960

6

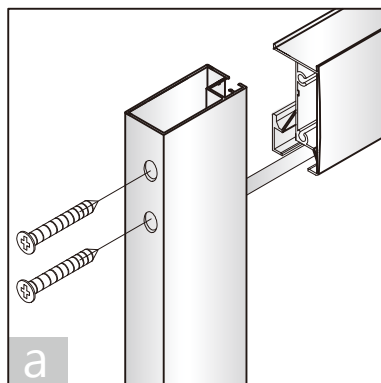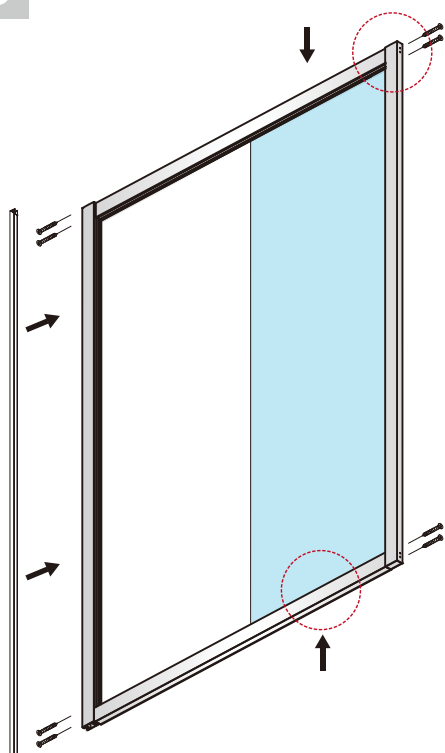


Assemble the top & bottom rails, fixed panel & upright profile together.

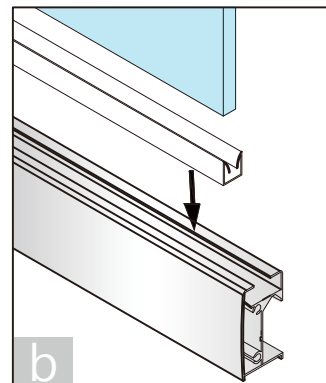


Insert the fixed panel into top & bottom rails with U-type sealant strip.


7

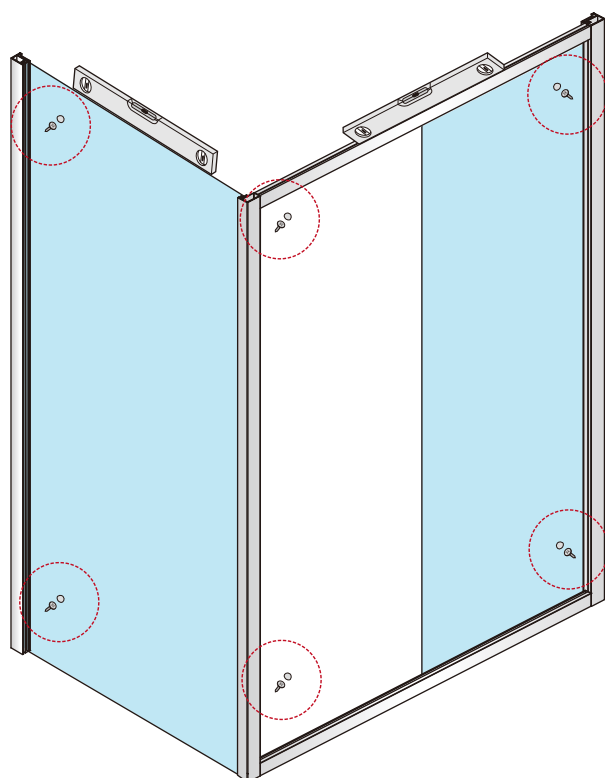


Move the front frame and return panel to proper position to make sure it is level.

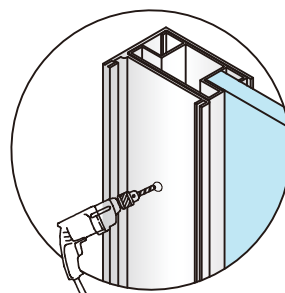


Drill hole on side of wall channel.

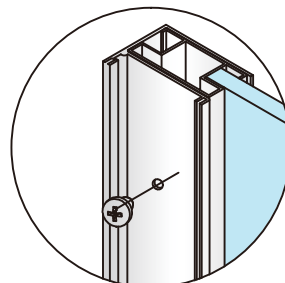



Fasten the wall channels, top and bottom rails with ST4*10 screws.

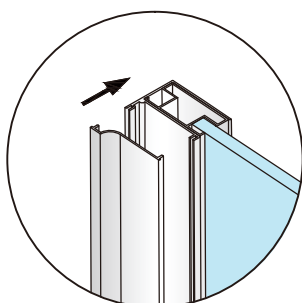


Fit wall channel side over.

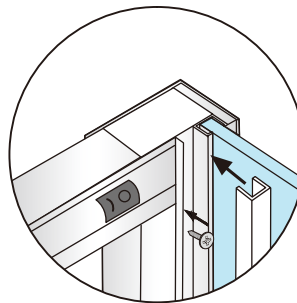


Fit return panel connector cover.

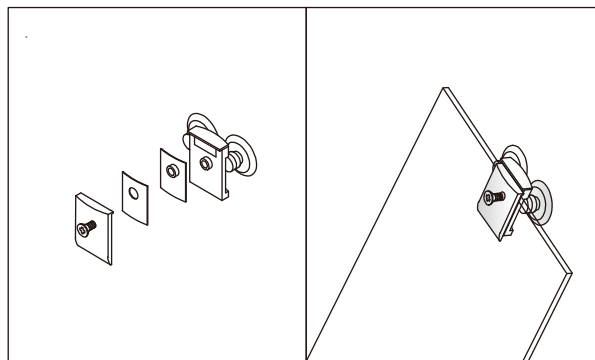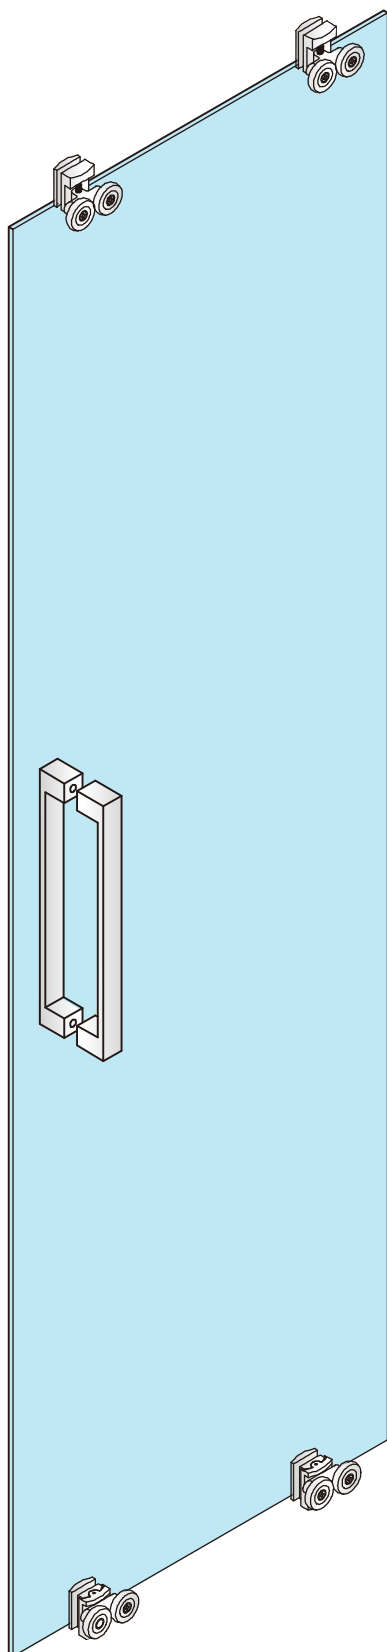


Fit top rollers on the door panel.

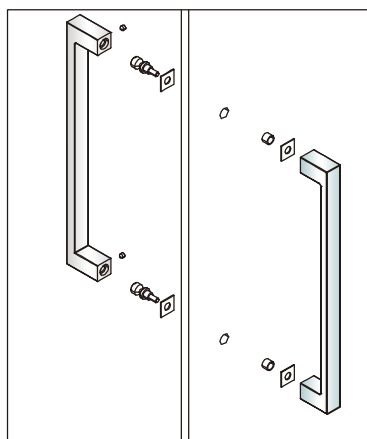


Square handle supply
for overall sizes more
than 1100mm.

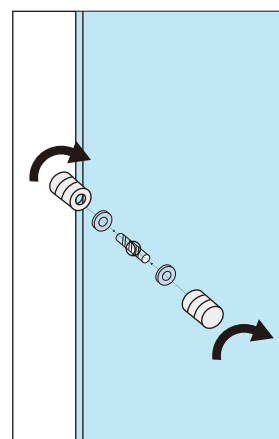

door knob supply
for overall sizes
less than 1100mm.

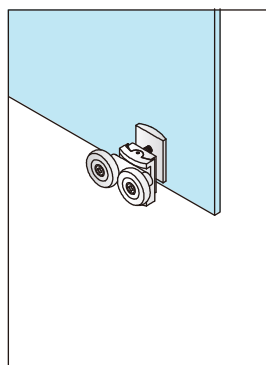


Fit bottom rollers
on the door panel.

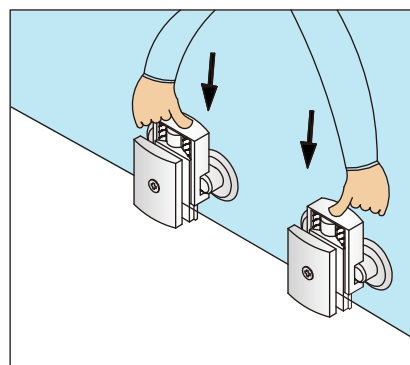


Fit top rollers into the top
rail first click bottom rollers
on bottom rail by pressing
down bottom rollers.

9

Fit side water seal on door panel.

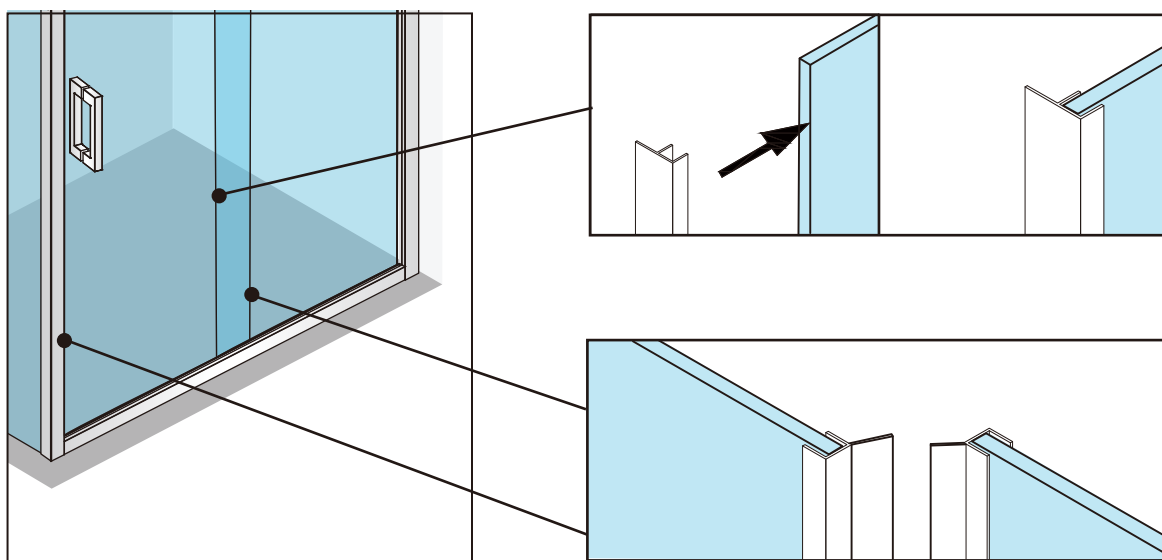


10

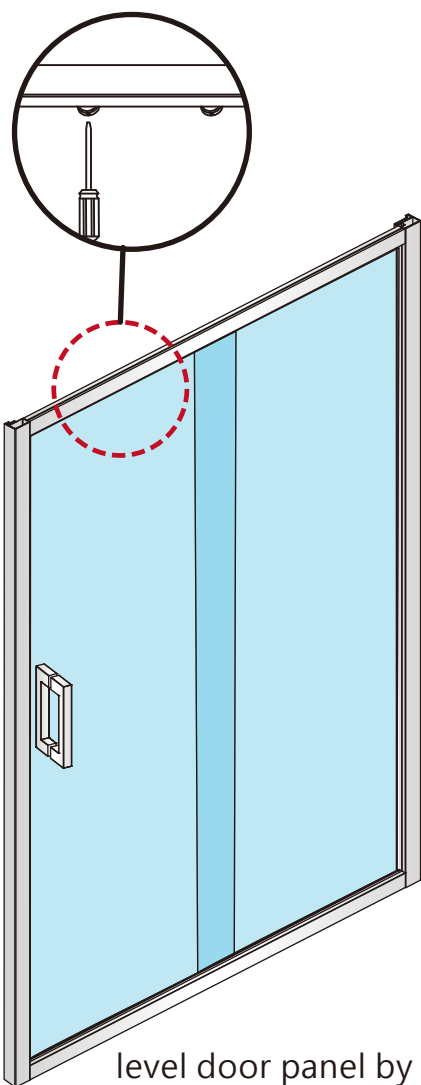

level door panel by
adjusting top roller screw
to make sure door panel
run through smoothly.

11

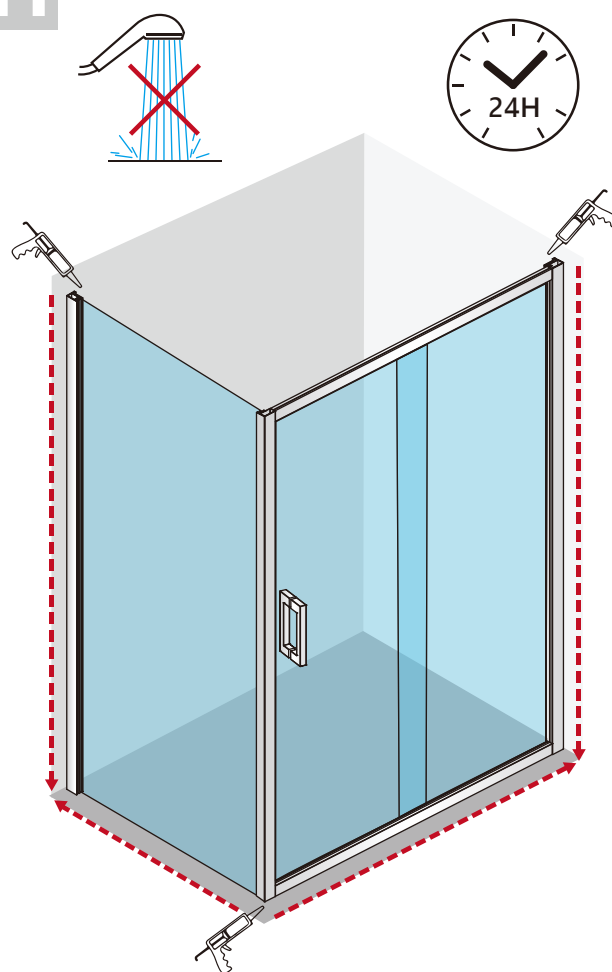

Silicone along wall channel
and bottom of the fixed panel.
Please allow at least 24 hours
for the silicone to fully cure
before using the shower.