




Semi Frameless Hinge Door

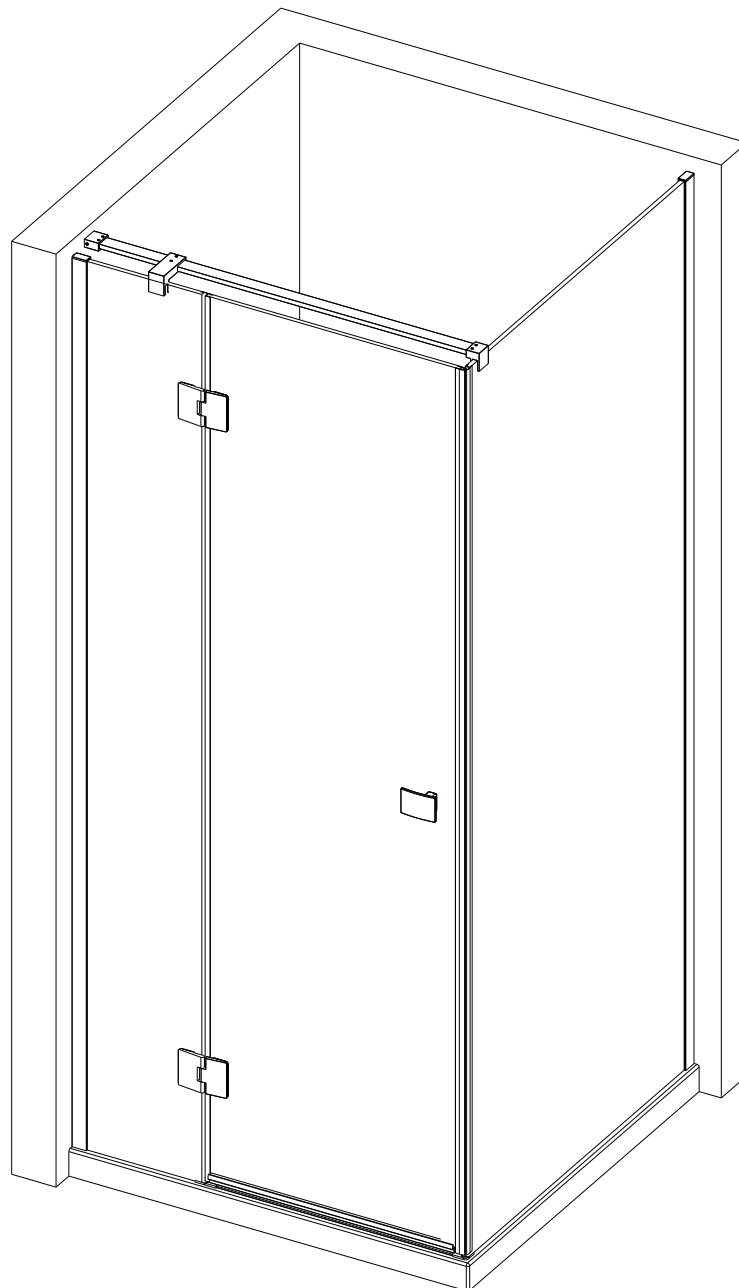

ASSEMBLY INSTRUCTIONS-DRAWING

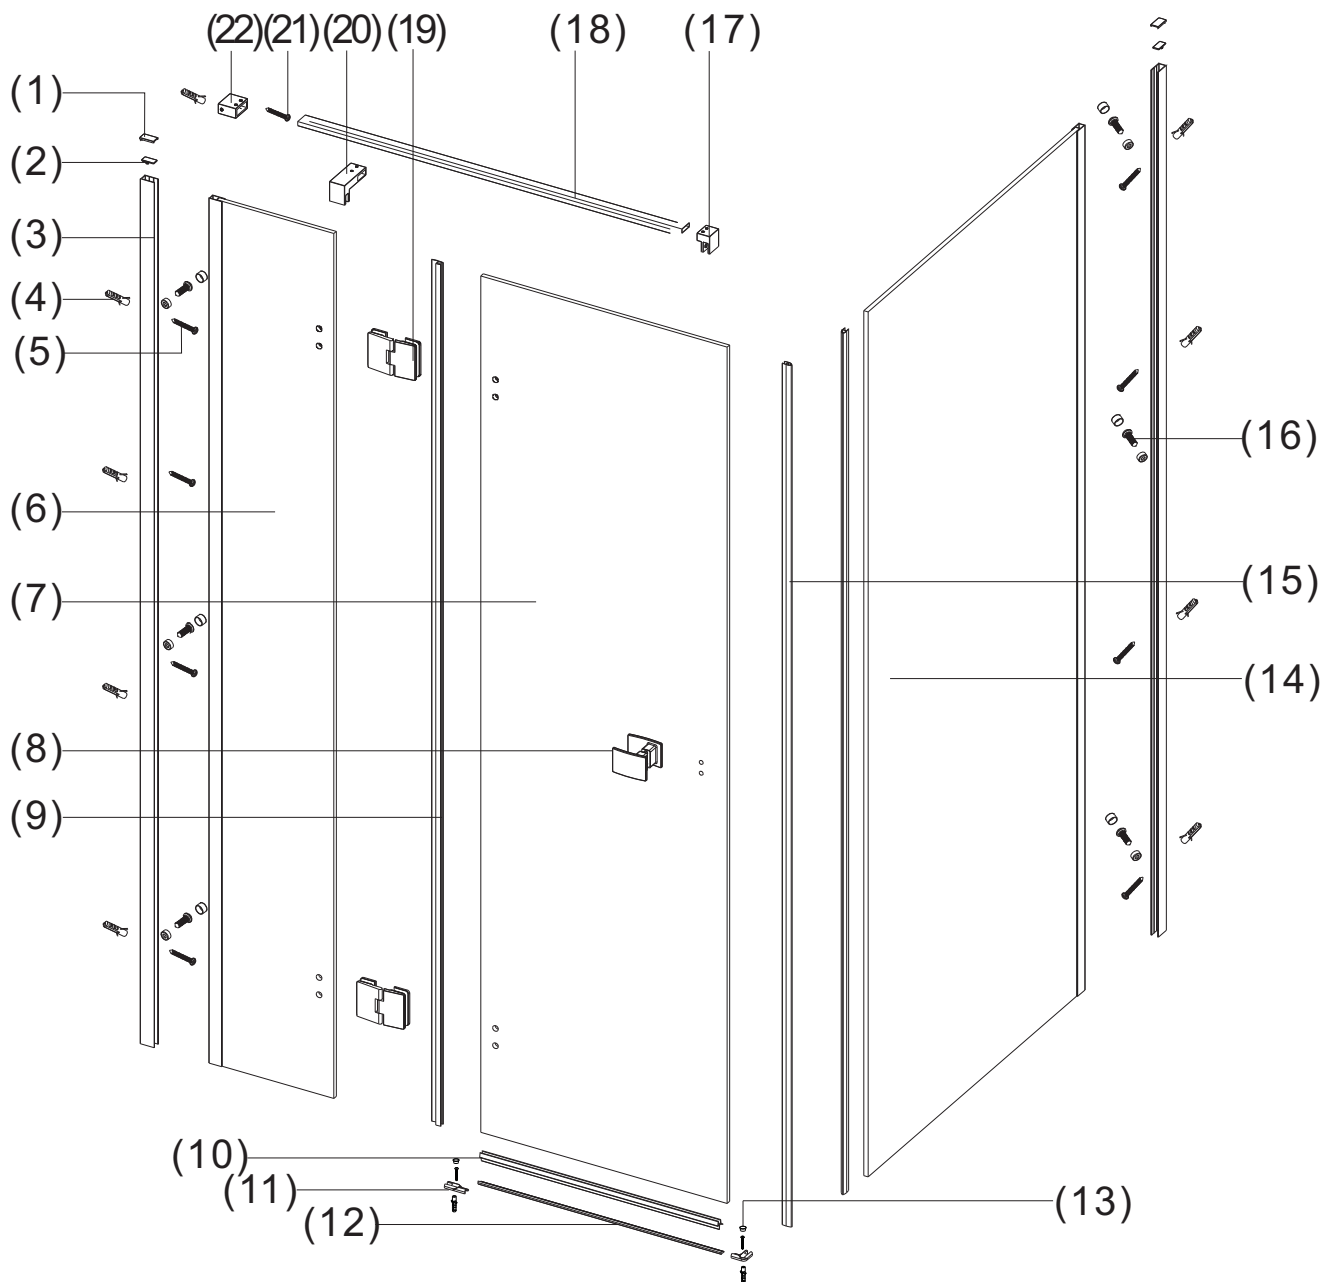

- | | |
|--------------------------------------|----------------------------|
| (1) 2xWall Profile Cover Caps | (12) 1xDrip Strip |
| (2) 2xUpright Profile Cover Caps | (13) 2xScrew Caps |
| (3) 2xWall Profiles | (14) 1xSide Panel |
| (4) 11xWall Plugs | (15) 2xMagnet Seals |
| (5) 10xScrews ST4x30 | (16) 6xScrews ST4x12 |
| (6) 1x Fixed Panel | (17) 1xGlass Clamp |
| (7) 1x Moving Panel | (18) 1xTop Support Bar |
| (8) 1xHandle | (19) 2xHinges |
| (9) 1xMoving Door Upright Water Seal | (20) 1xT Shape Glass Clamp |
| (10) 1xBottom Seal | (21) 1xScrew ST4X40 |
| (11) 2xDrip Strip End Caps (L+R) | (22) 1xWall Bracket |

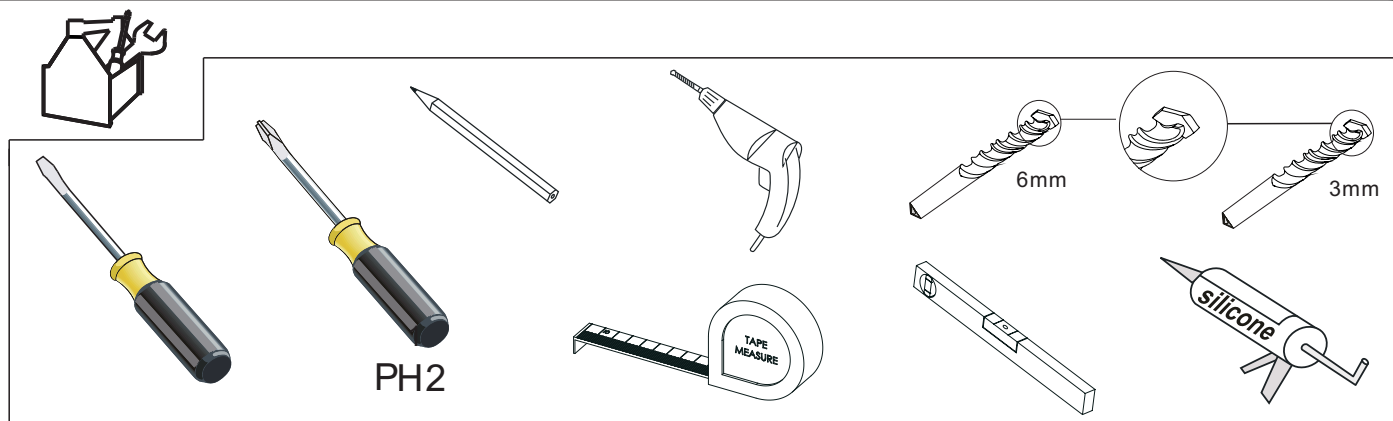

ASSEMBLY INSTRUCTIONS

If you require help, we advise you firstly contact a competent plumber
Installation



Steps

Step 1


MAKE SURE THE TRAY IS LEVEL, USING A SPIRIT LEVEL, BEFORE INSTALLING.

THIS SHOWER PANEL / DOOR.


CODE	A	B	CODE	A	B
SS17-850	840-850	N/A	SS17-SF850	N/A	840-850
SS17-900	890-900	N/A	SS17-SF900	N/A	890-900
SS17-950	940-950	N/A	SS17-SF950	N/A	940-950
SS17-1000	990-1000	N/A	SS17-SF1000	N/A	990-1000

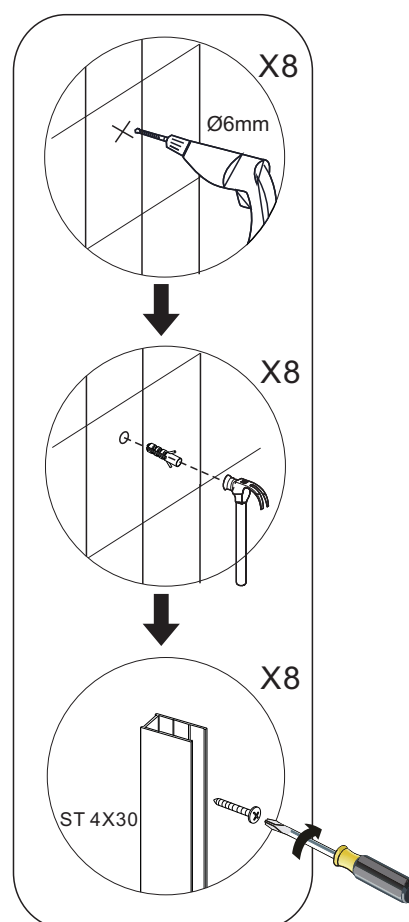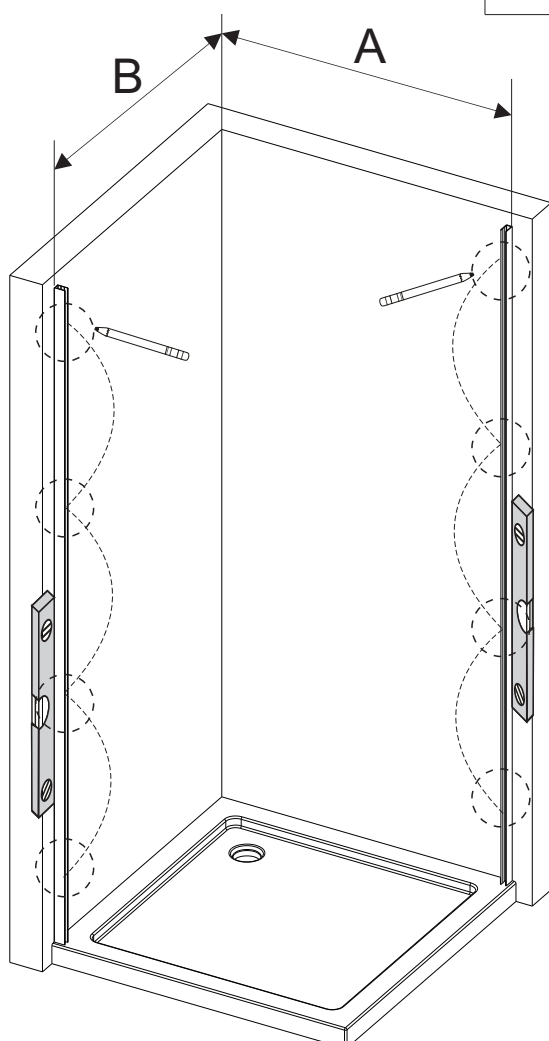


Step 2

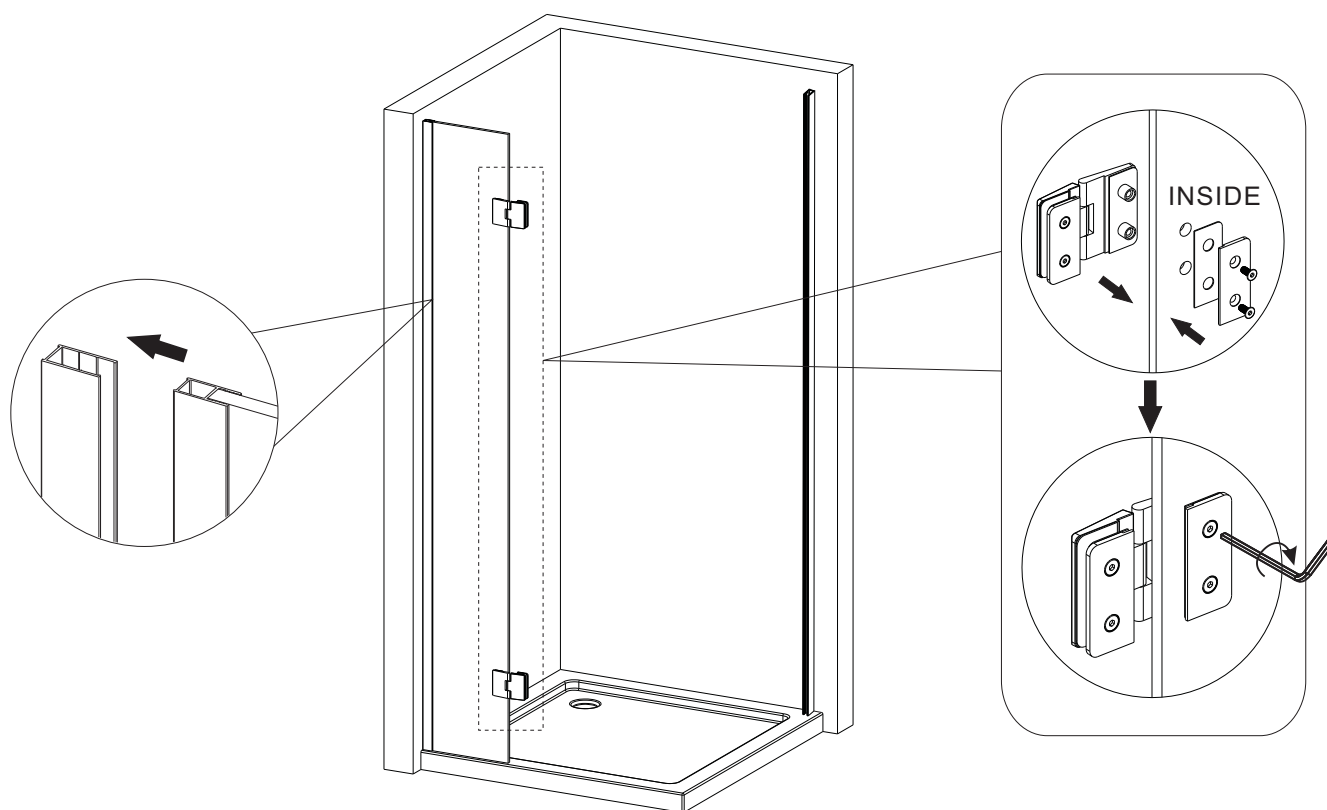


Step 3

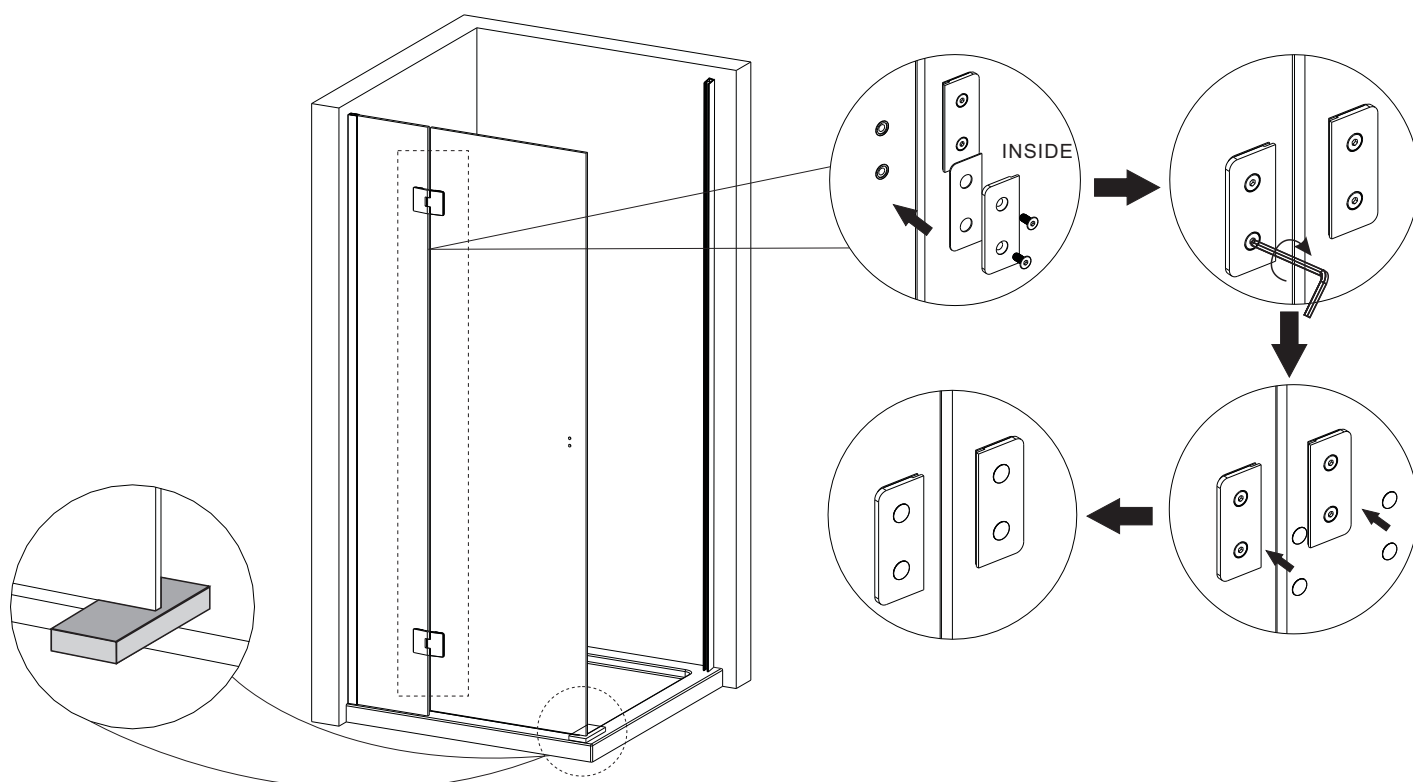


Step 4

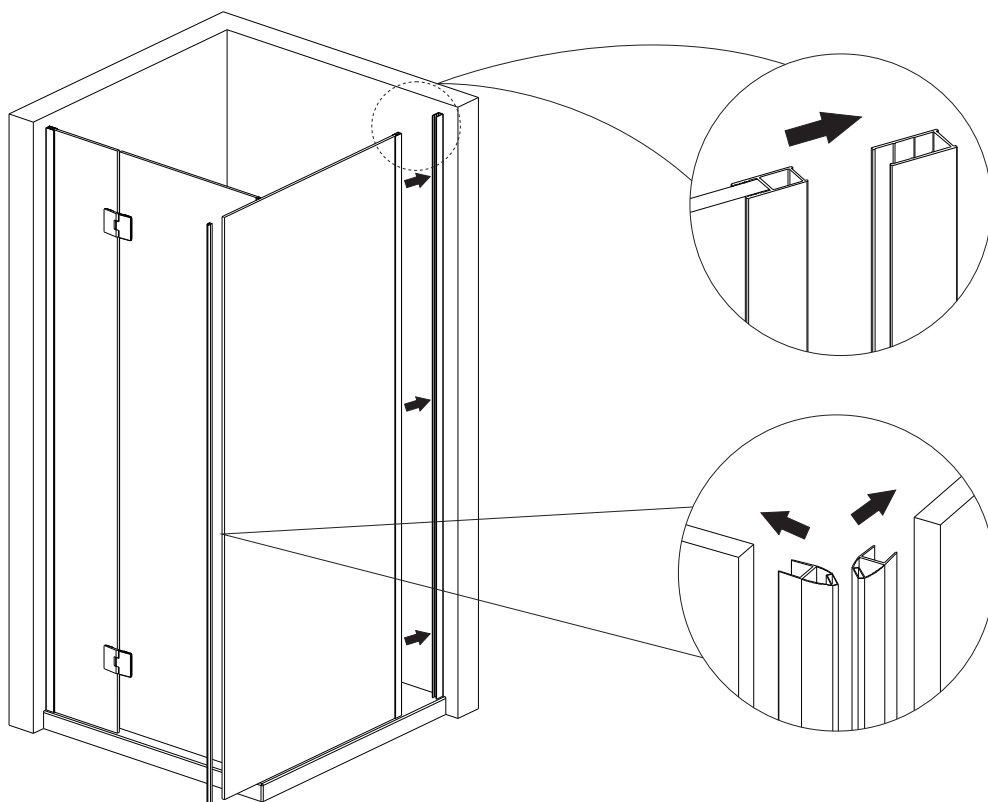


Step 5

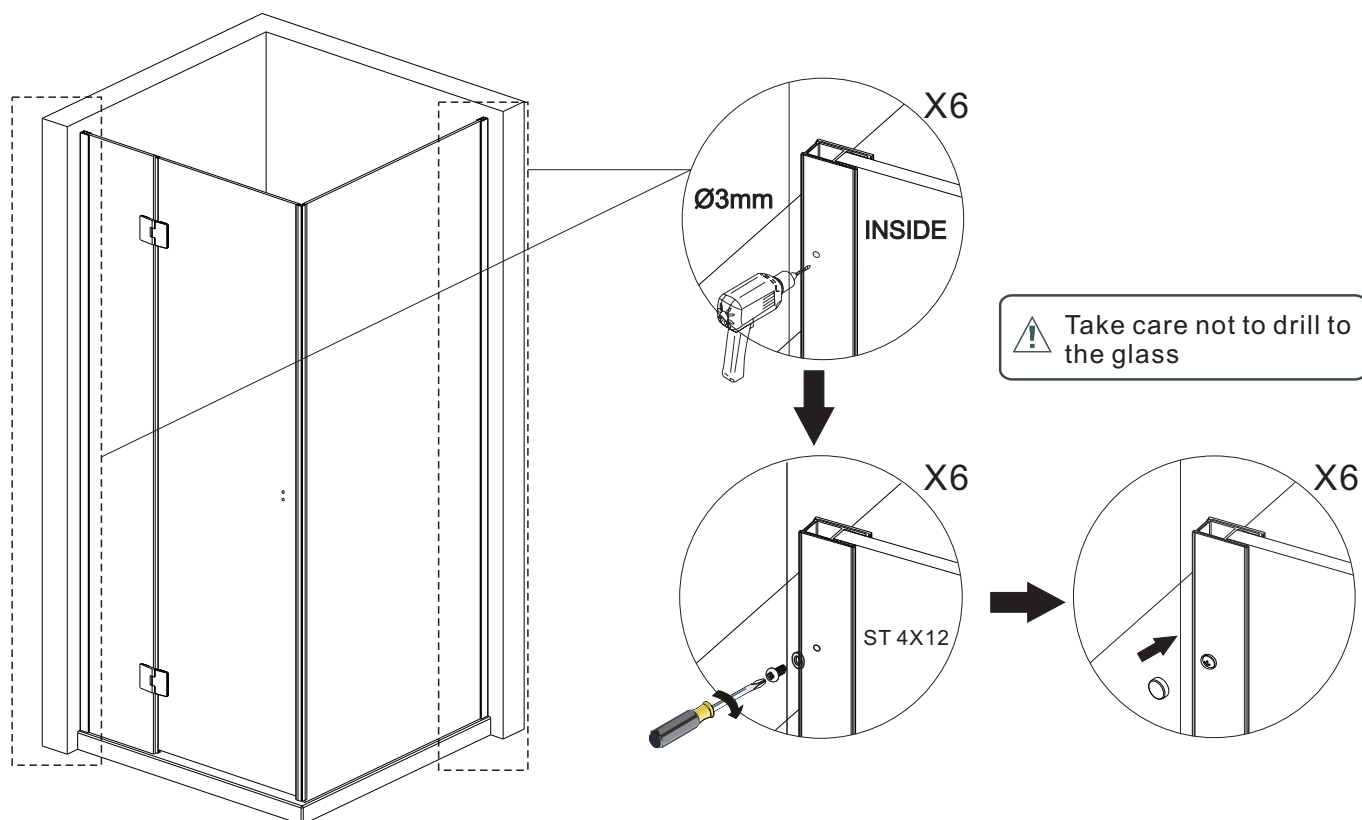


Step 6

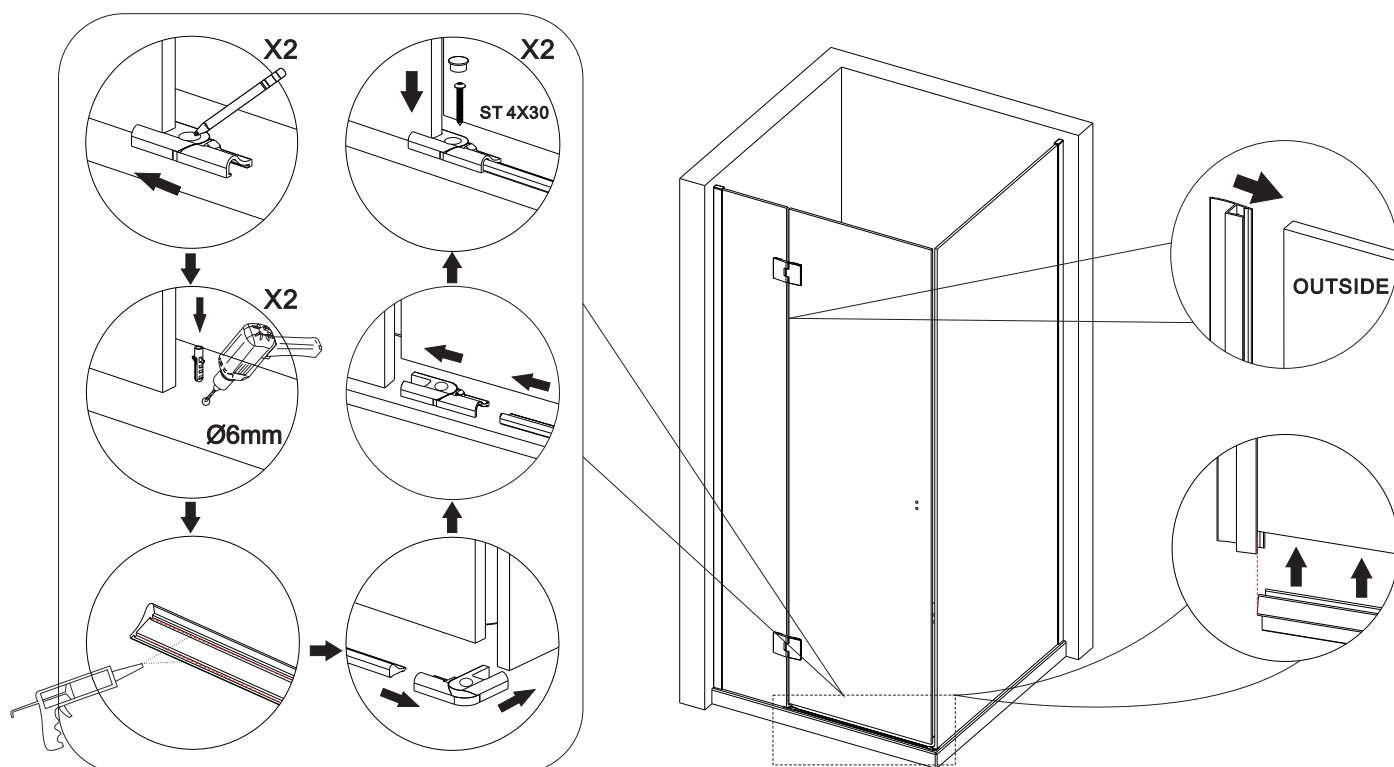

Step 7

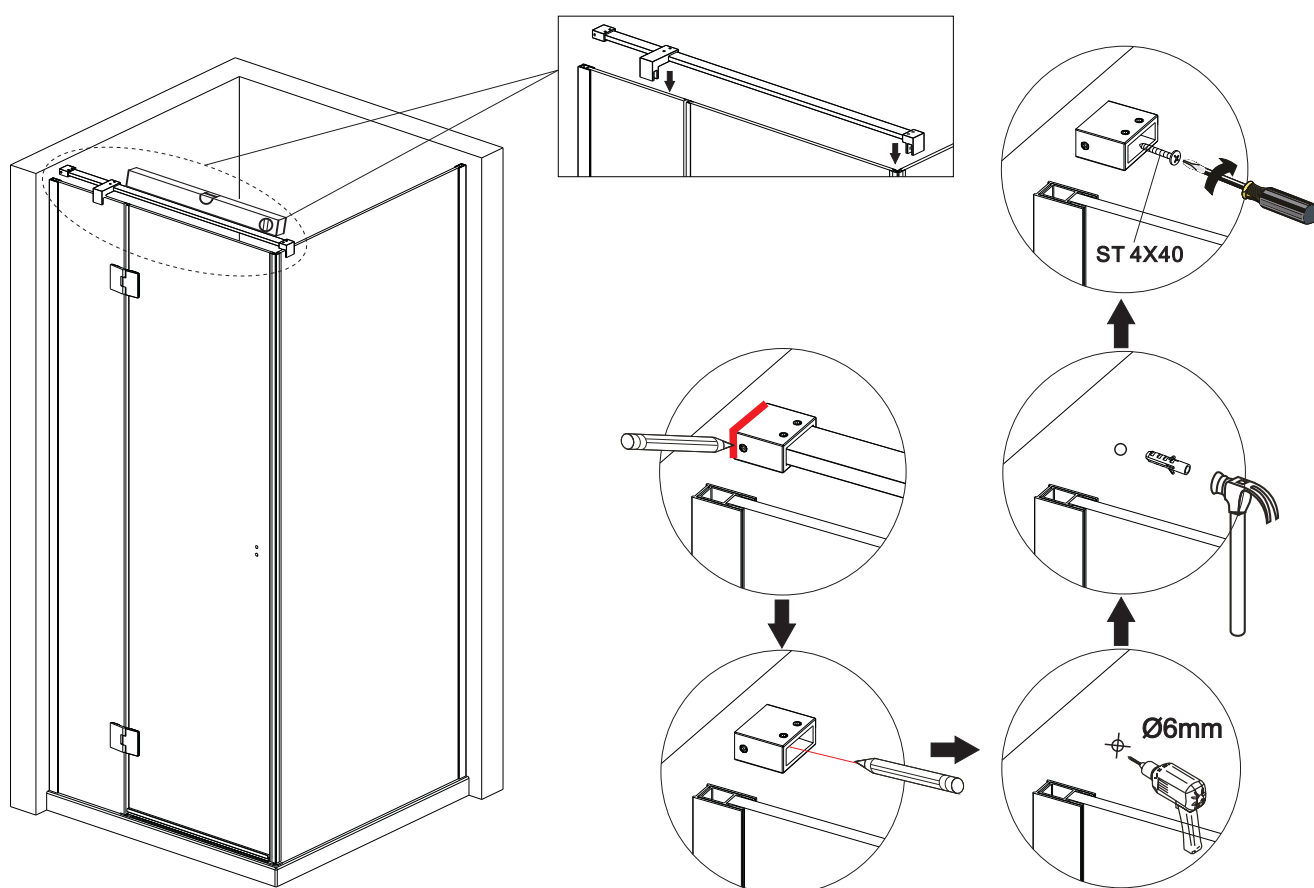

Step 8

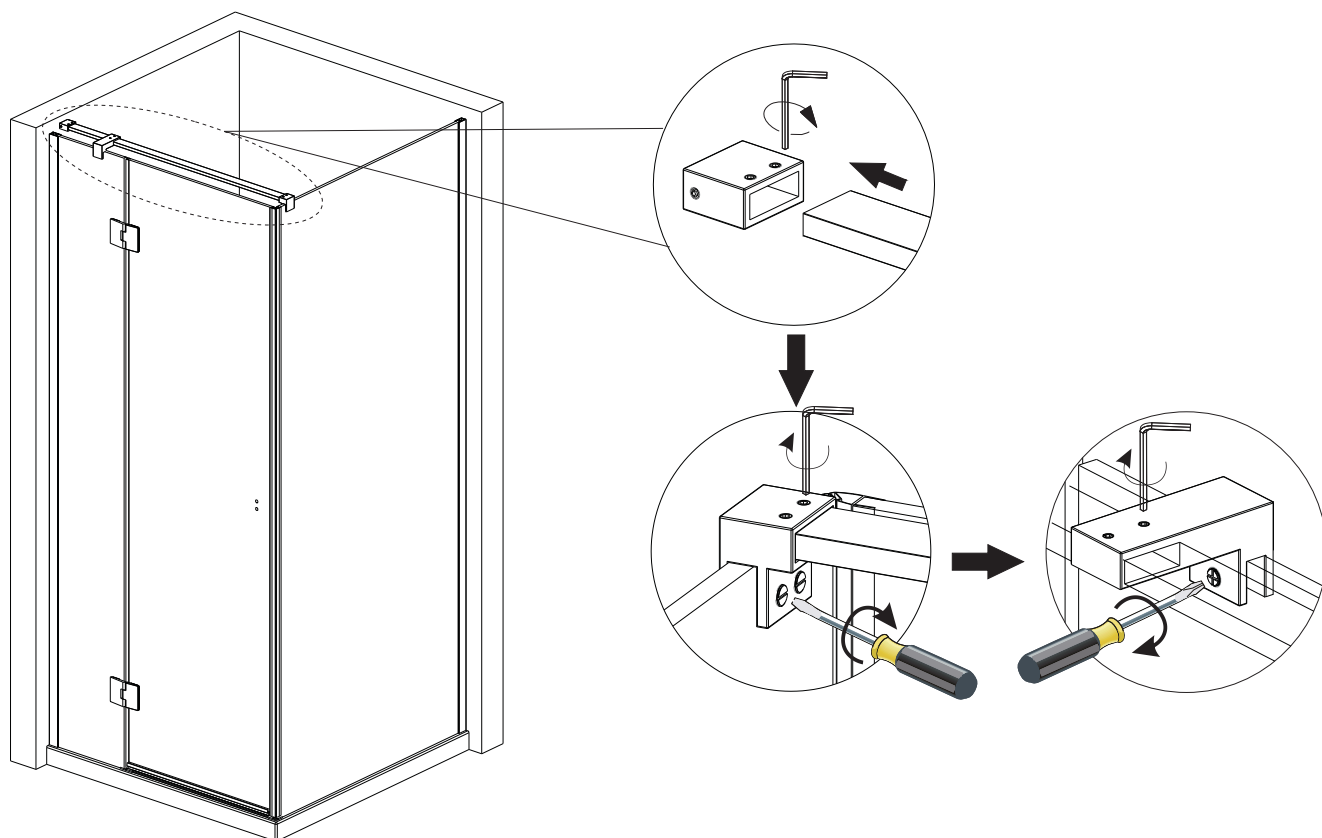

Step 9

