



8MM WALK IN

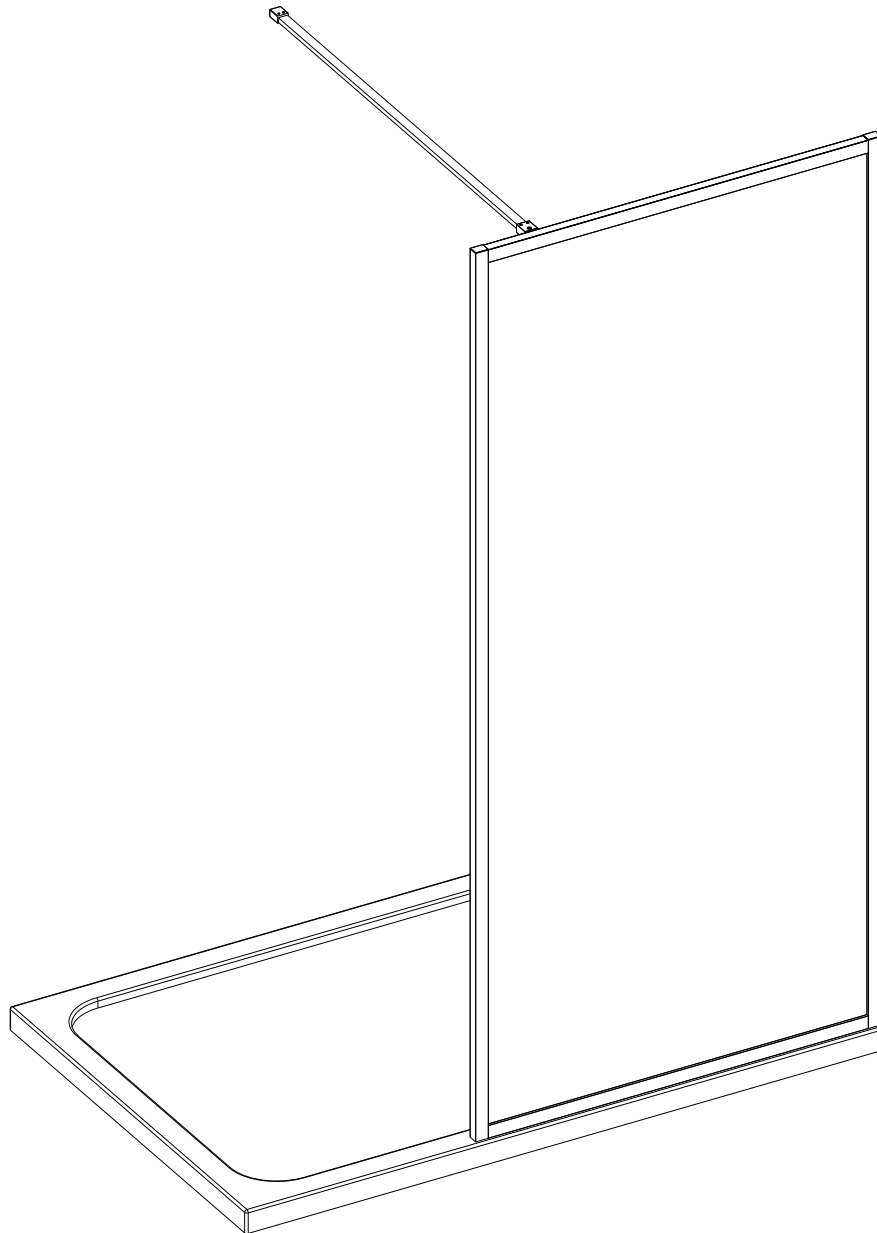


ASSEMBLY INSTRUCTIONS-DRAWING

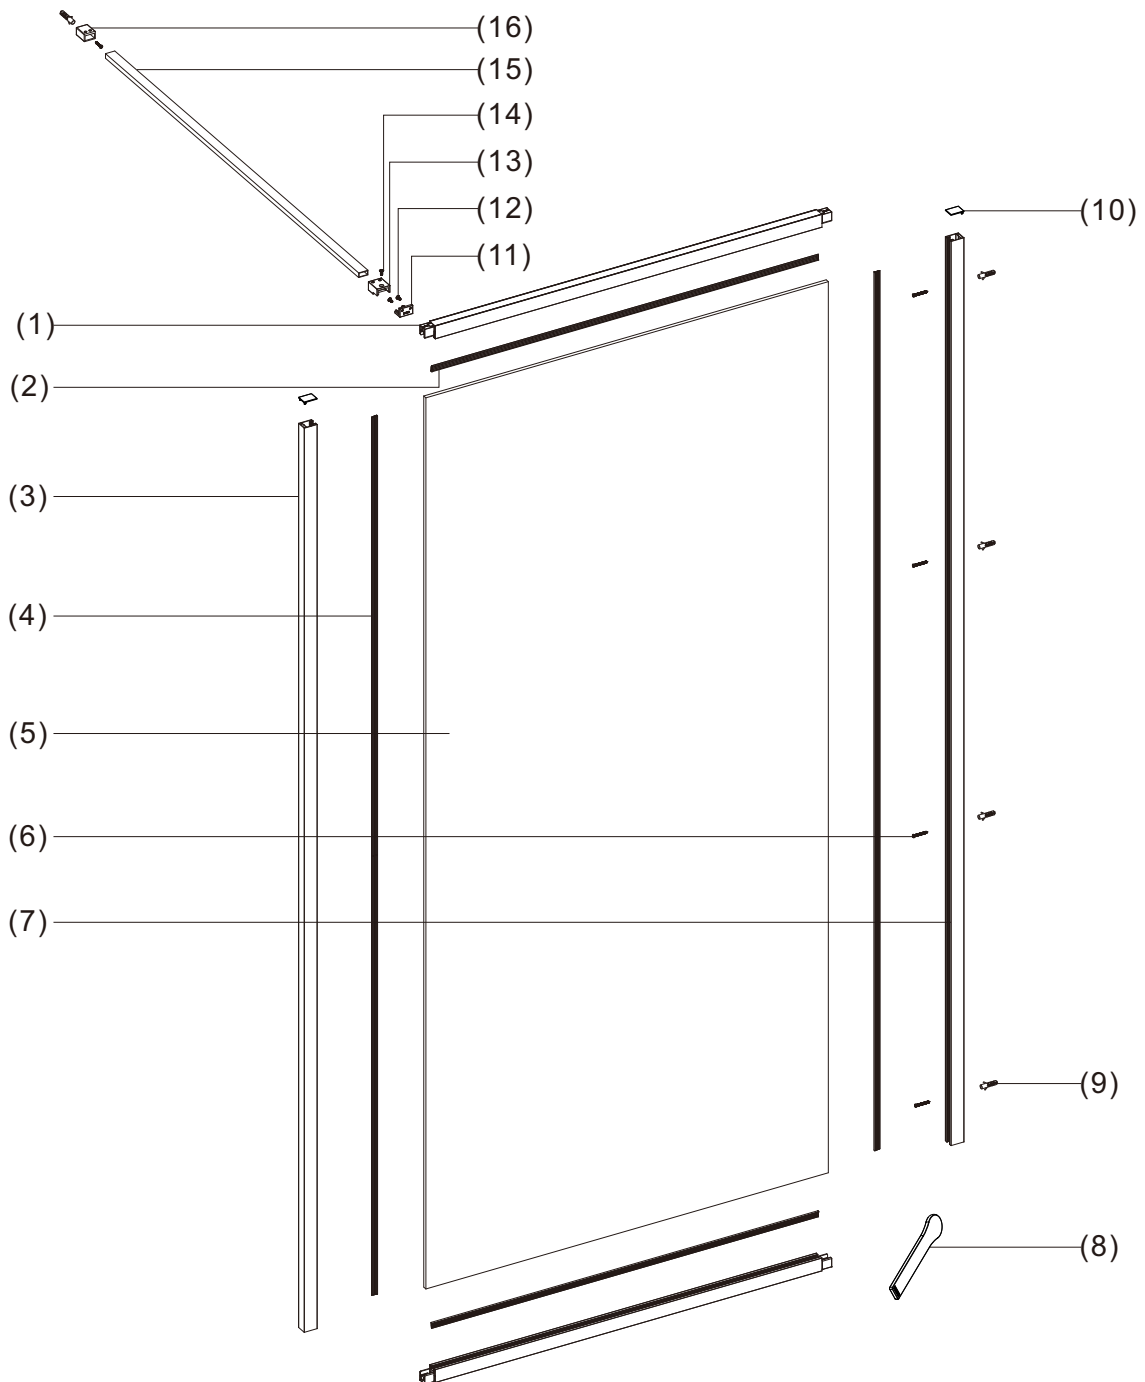

- (1) 2x Top And Bottom Profiles
- (2) 2x Wedge Gasket Seals A
- (3) 1x Vertical Profile
- (4) 2x Wedge Gasket Seals B
- (5) 1x Glass Panel
- (6) 5x Screws 4*30
- (7) 1x Wall Profile
- (8) 1x Gasket Hand Tool

- (9) 5x Wall Plugs
- (10) 2x Cover Caps
- (11) 1x Support Bracket A
- (12) 2x Screws 3.5*16
- (13) 1x Support Bracket B
- (14) 1x Screw 4*12
- (15) 1x Top Bar
- (16) 1x Wall Bracket

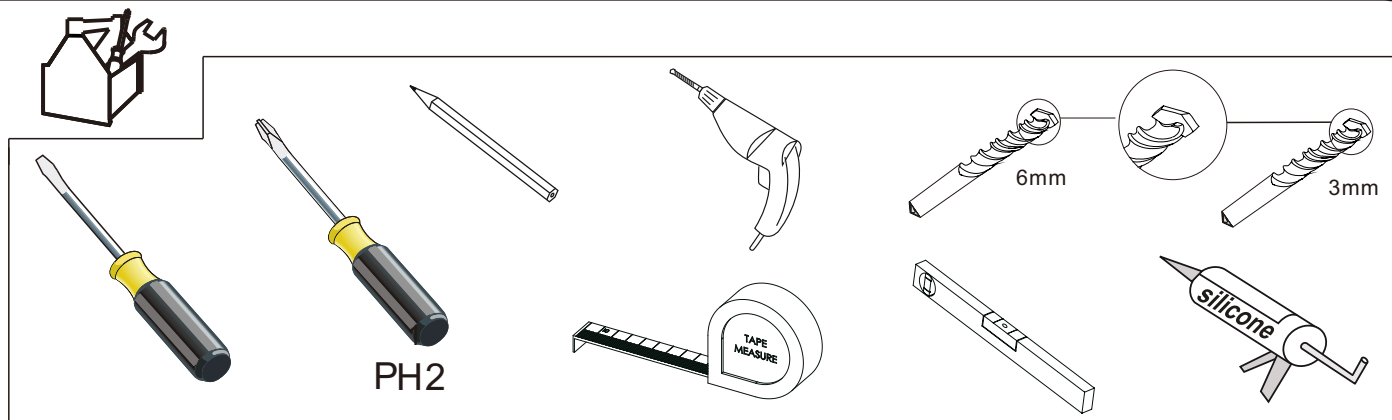


ASSEMBLY INSTRUCTIONS

If you require help, we advise you firstly contact a competent plumber


Installation Steps

Step 1


MAKE SURE THE TRAY IS LEVEL, USING A SPIRIT LEVEL, BEFORE INSTALLING.
THIS SHOWER PANEL / DOOR.

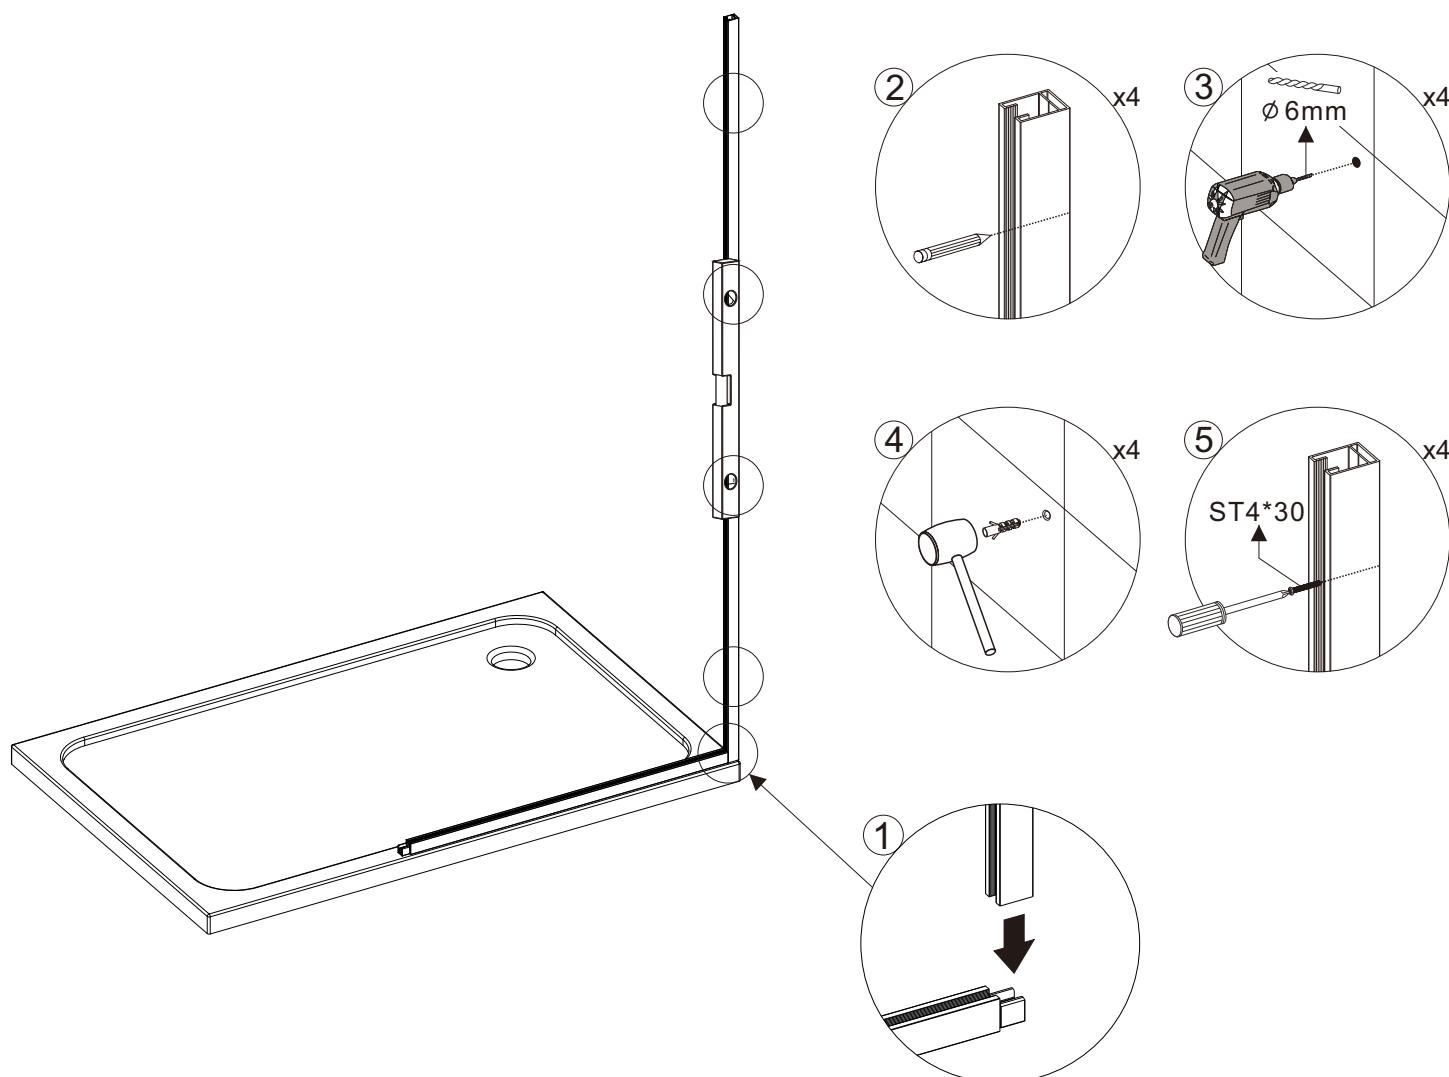


Step 2

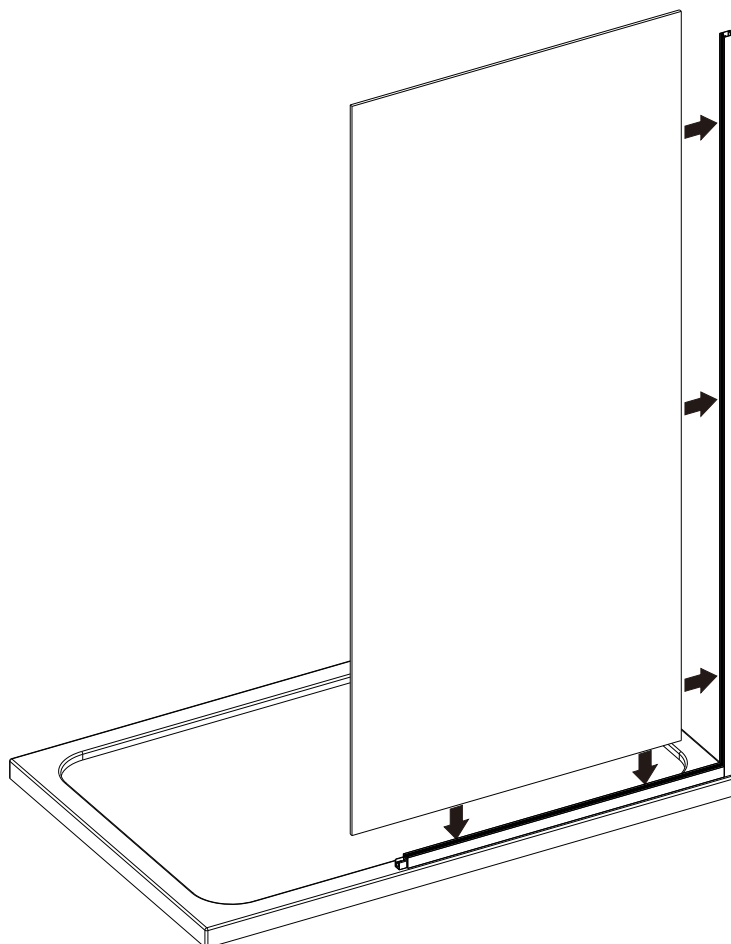



Step 3

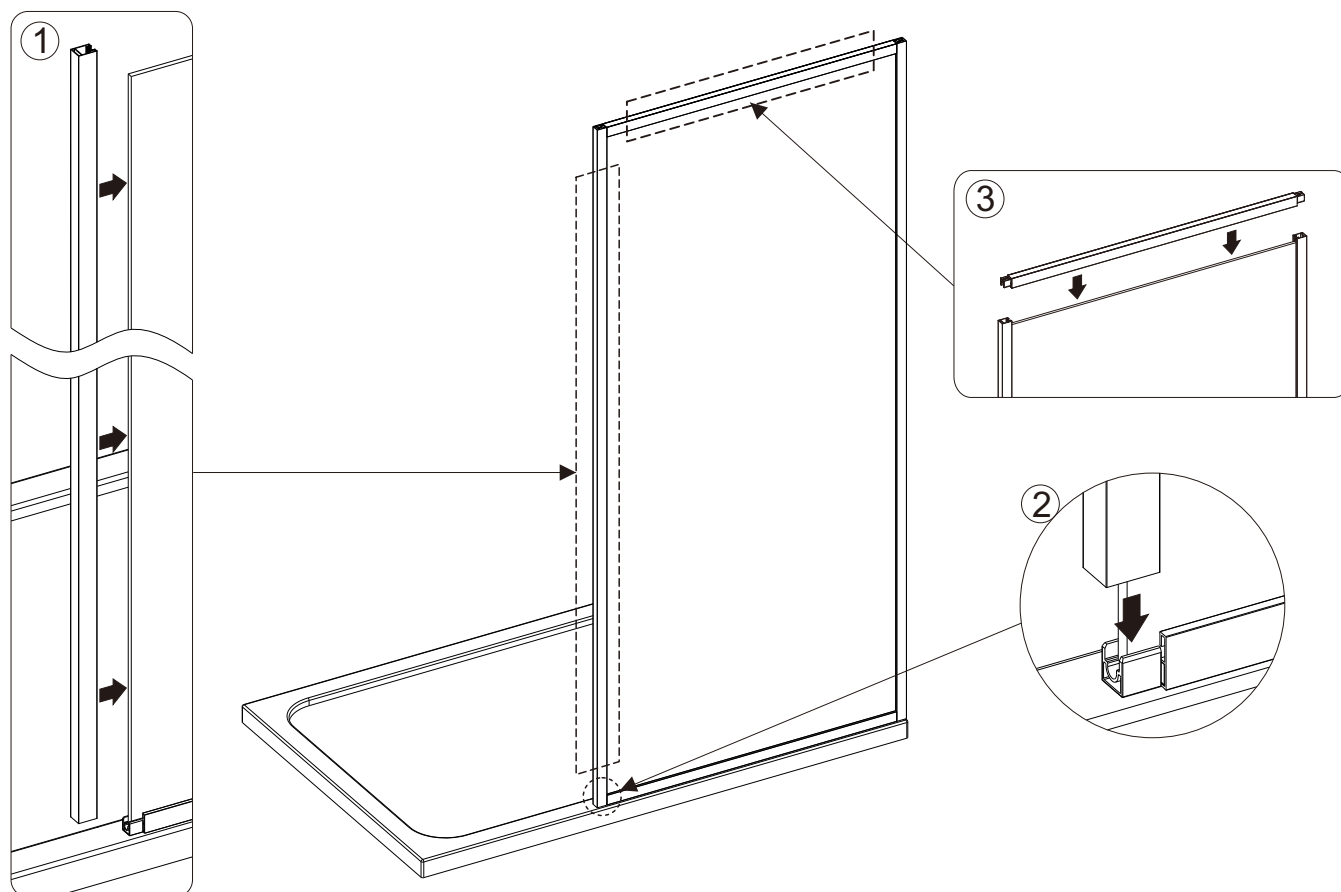














Step 4

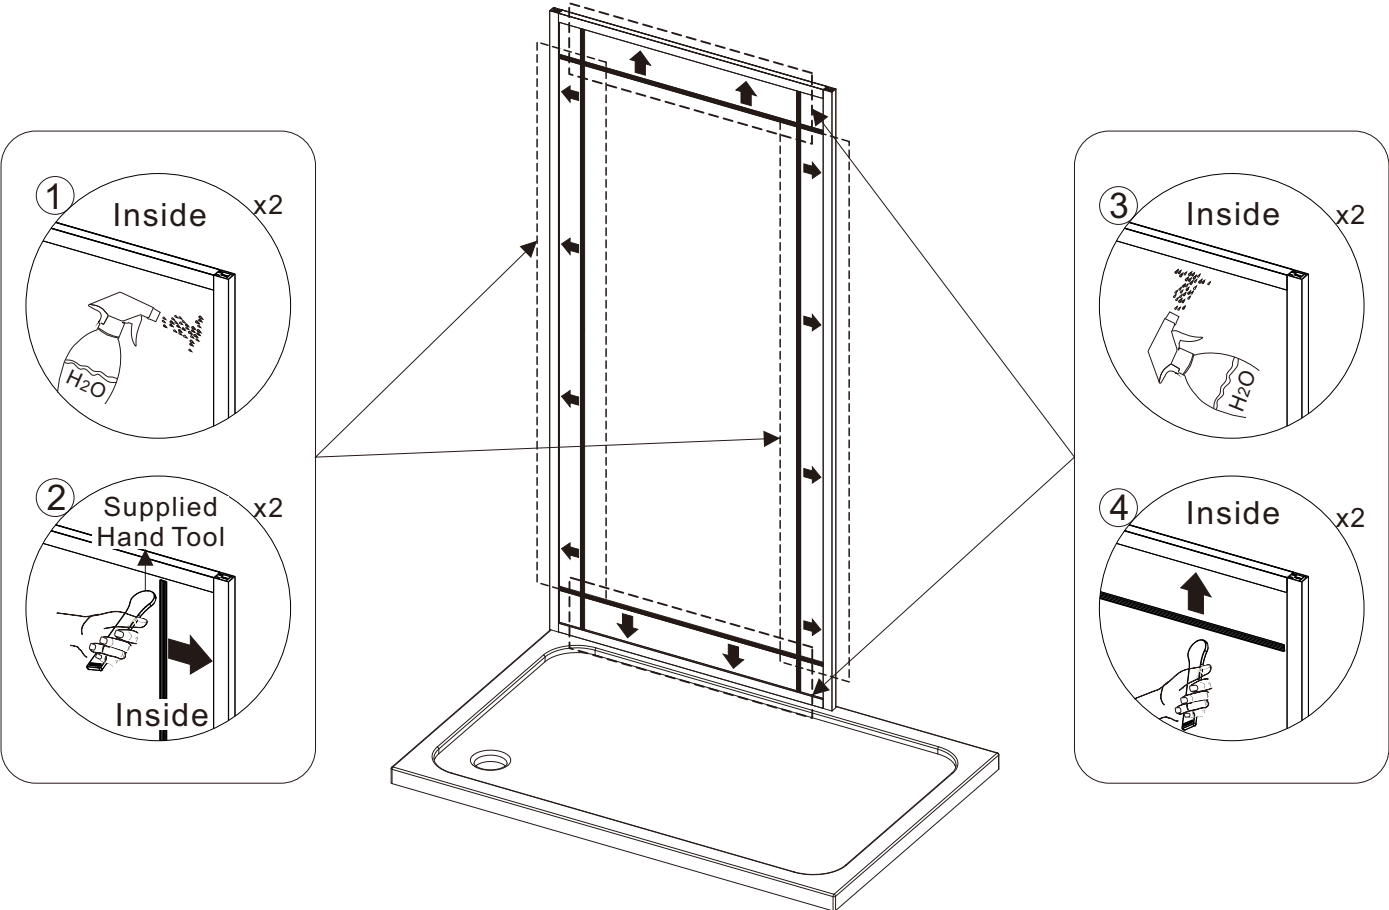


Step 5

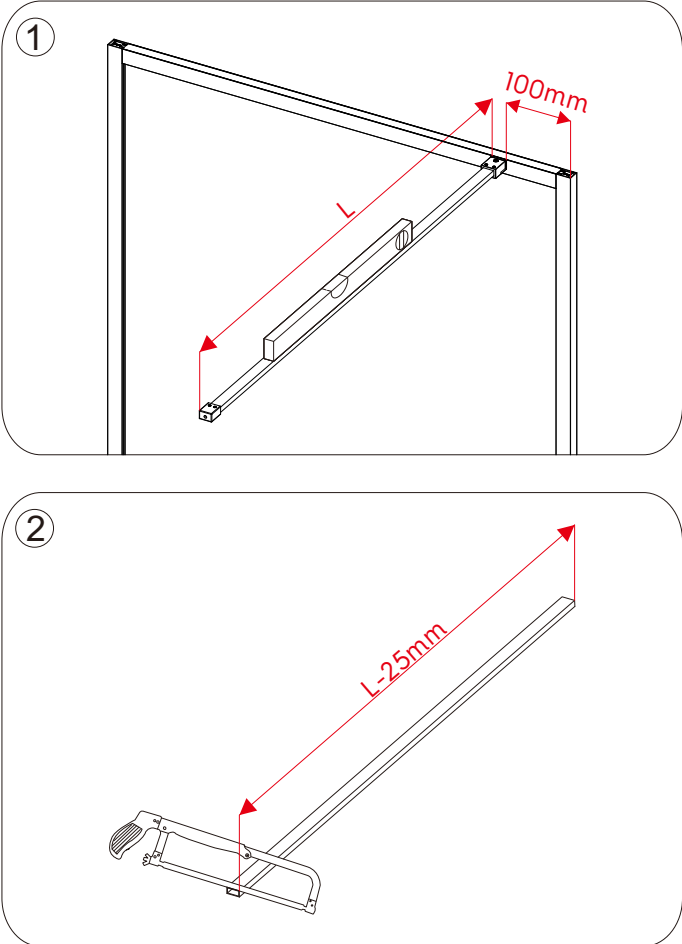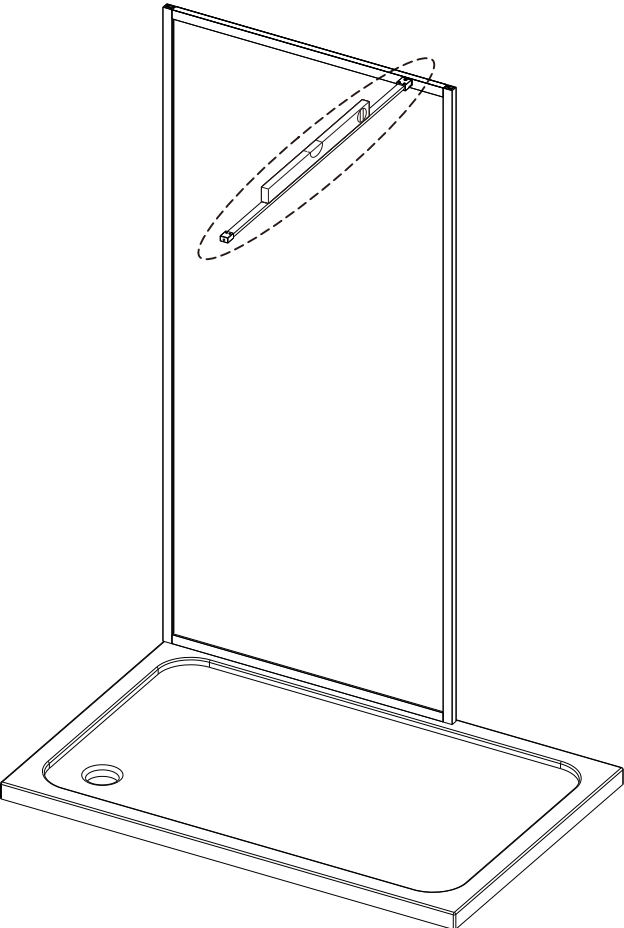


Step 6

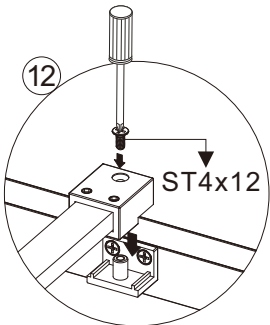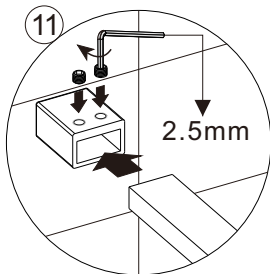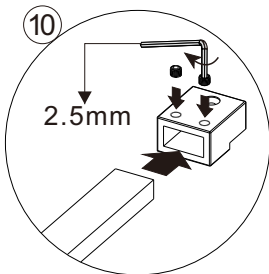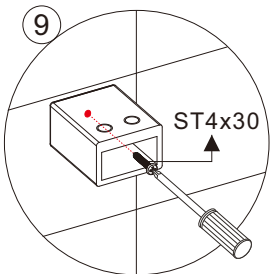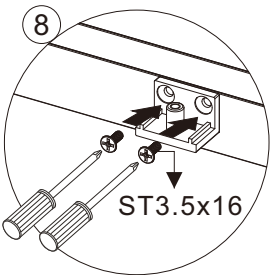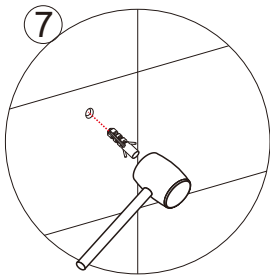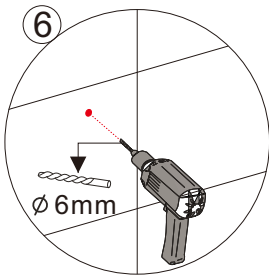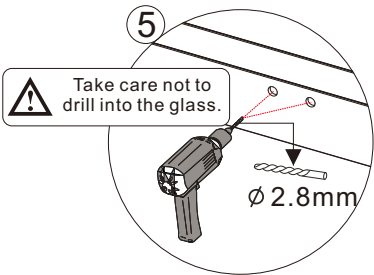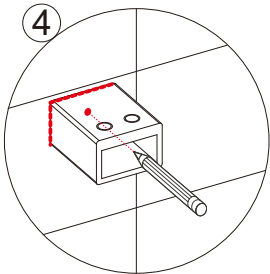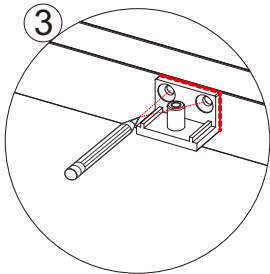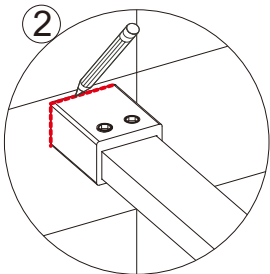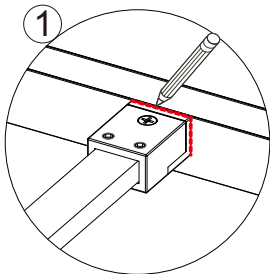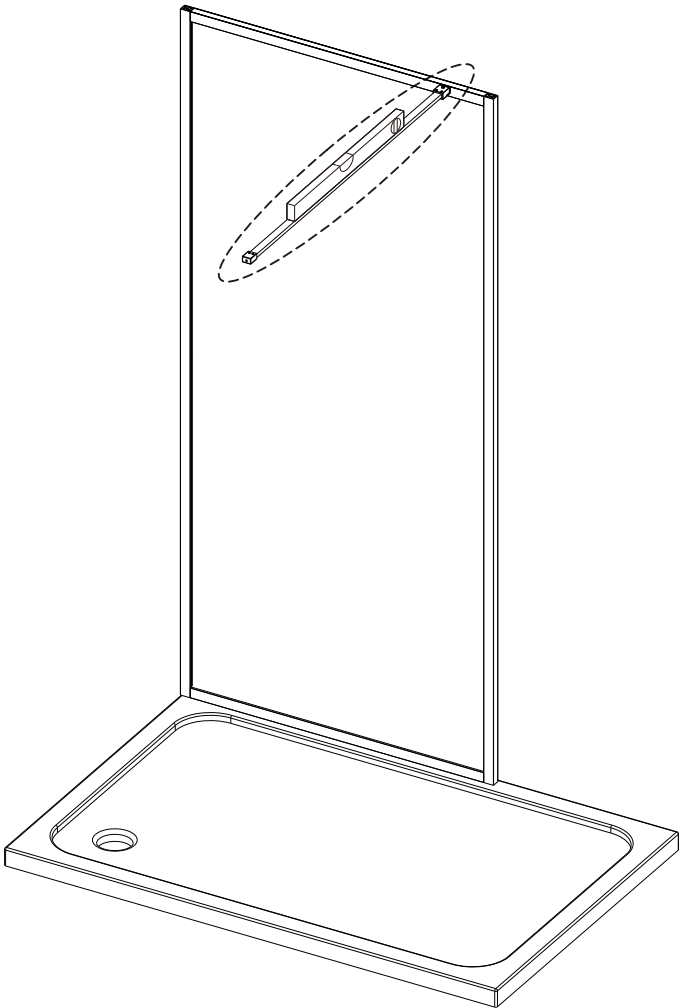

Step 7

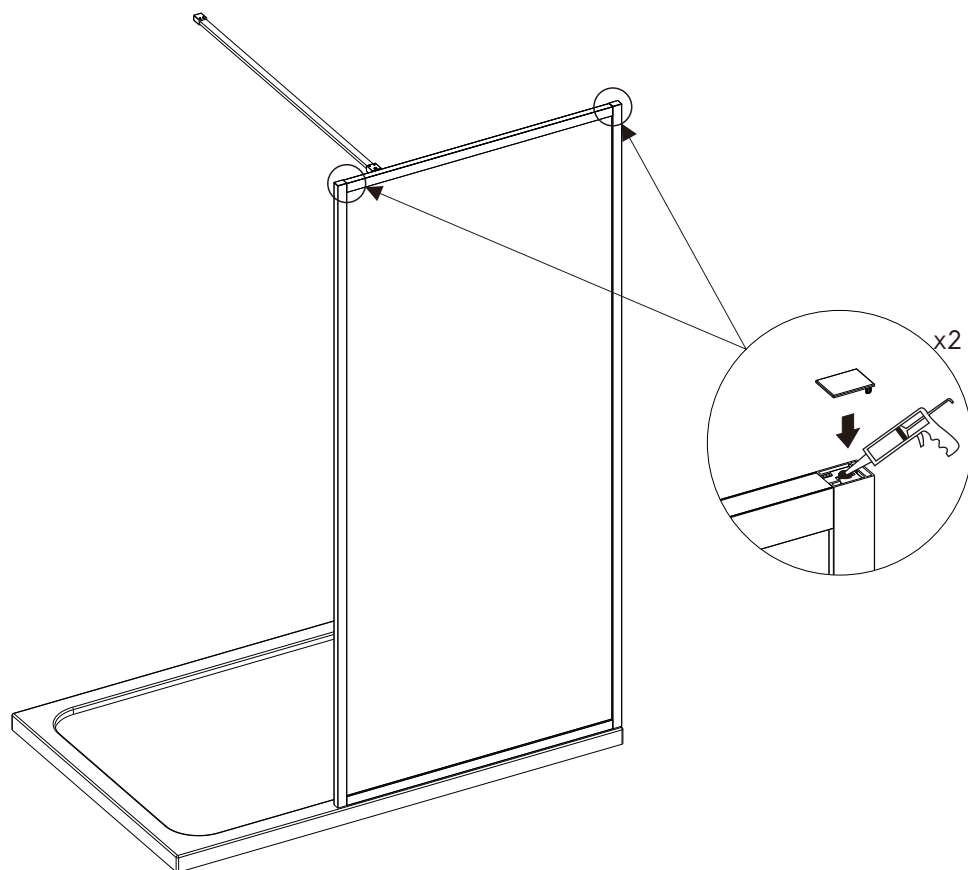

Step 8

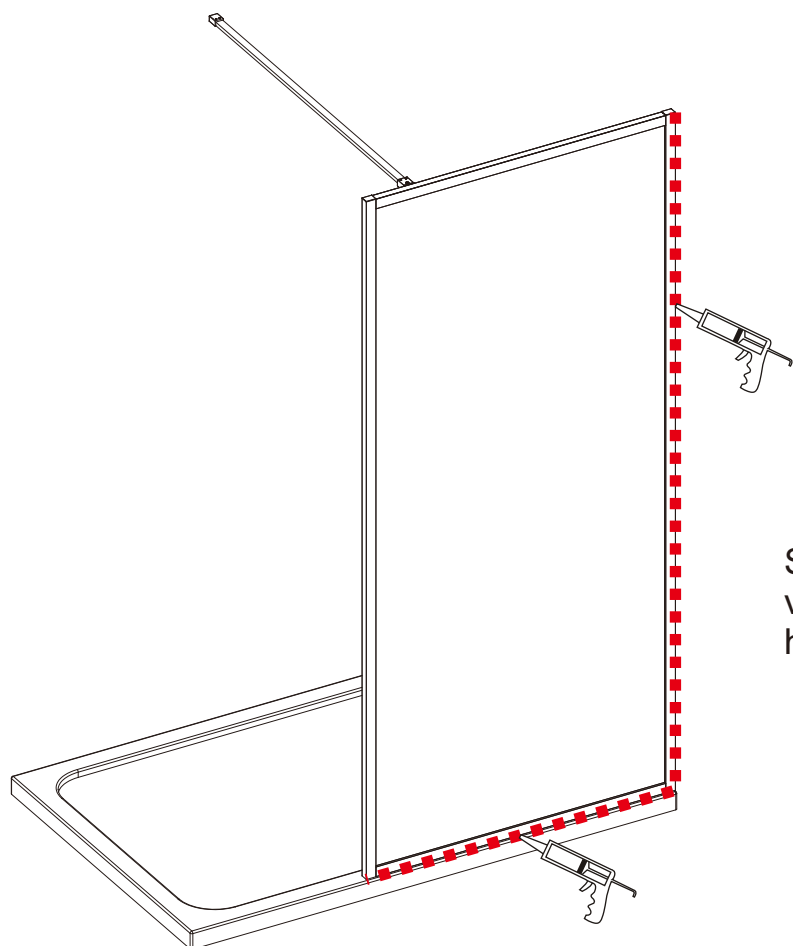

Silicone (inside edge only) where the vertical profiles meet the wall, and the horizontal profile meets the tray