



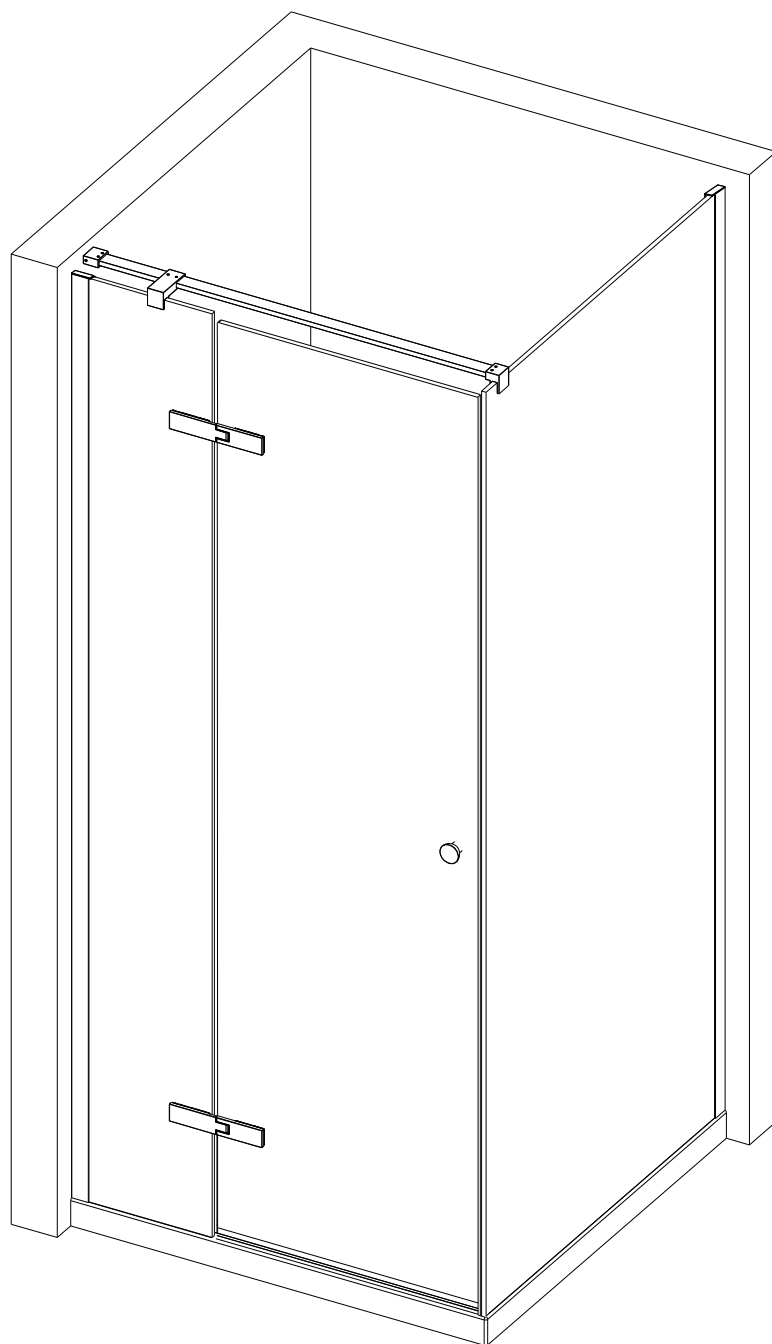


(B)


Step 1

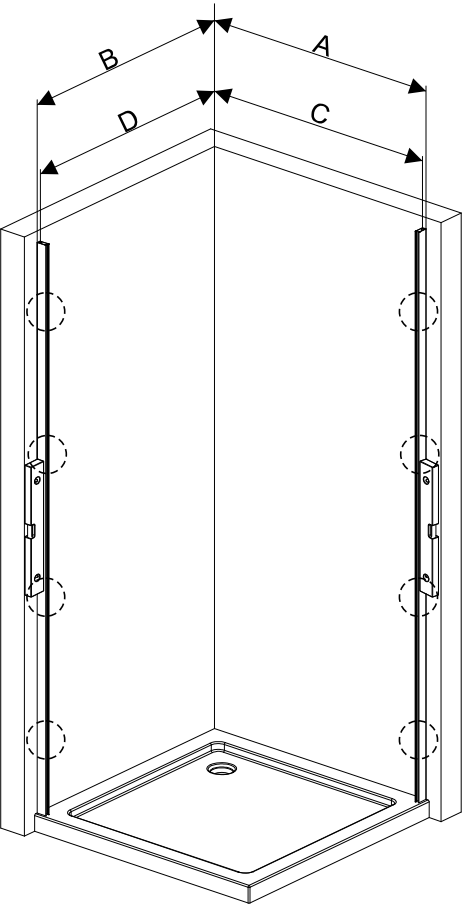







CODE	A	C (drill hole)	CODE	B	D (drill hole)
SS08/17-R-850	840-860	822-842	SS08/17-FF-250	840-860	822-842
SS08/17-R-900	896-916	878-898	SS08/17-FF-300	895-915	877-897
SS08/17-R-950	940-960	922-942	SS08/17-FF-350	940-960	922-942
SS08/17-R-1000	996-1016	978-998	SS08/17-FF-400	995-1015	977-997
SS08/17-R-1100	1096-1116	1078-1098	SS08/17-FF-550	1140-1160	1122-1142
SS08/17-R-1150	1140-1160	1122-1142	SS08/17-FF-600	1195-1215	1177-1197
SS08/17-R-1200	1196-1216	1178-1098			

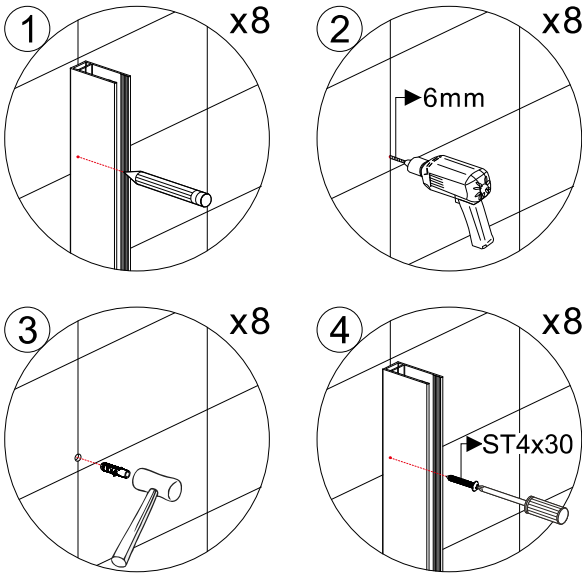




Step 2

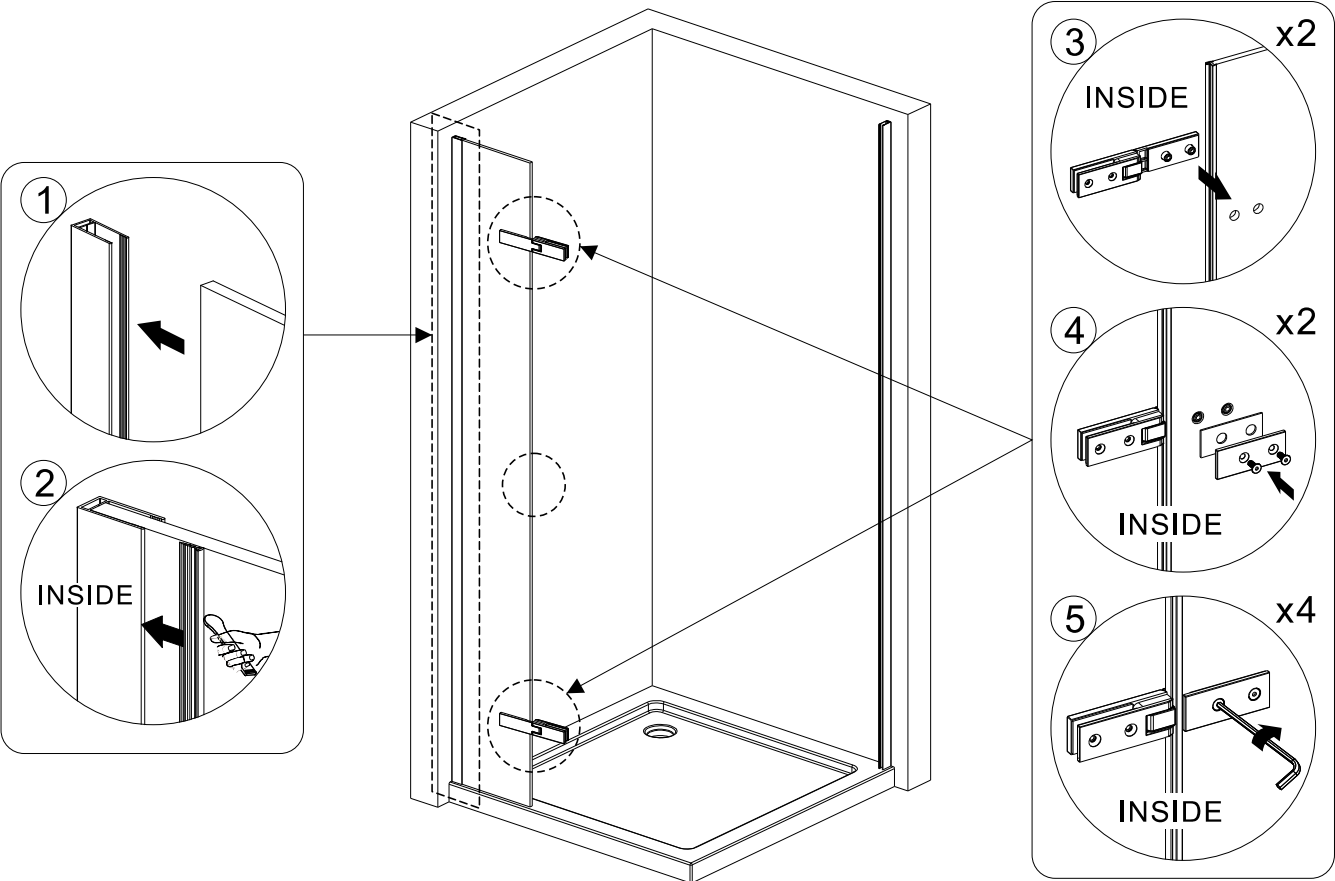



Step 3

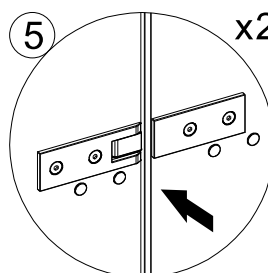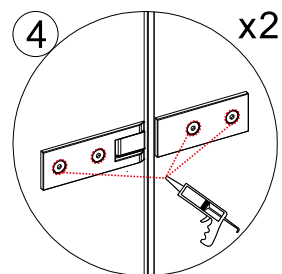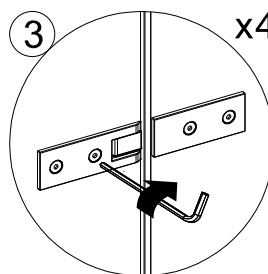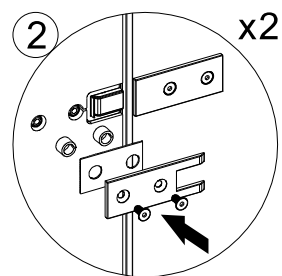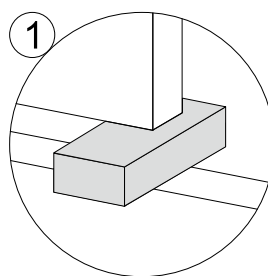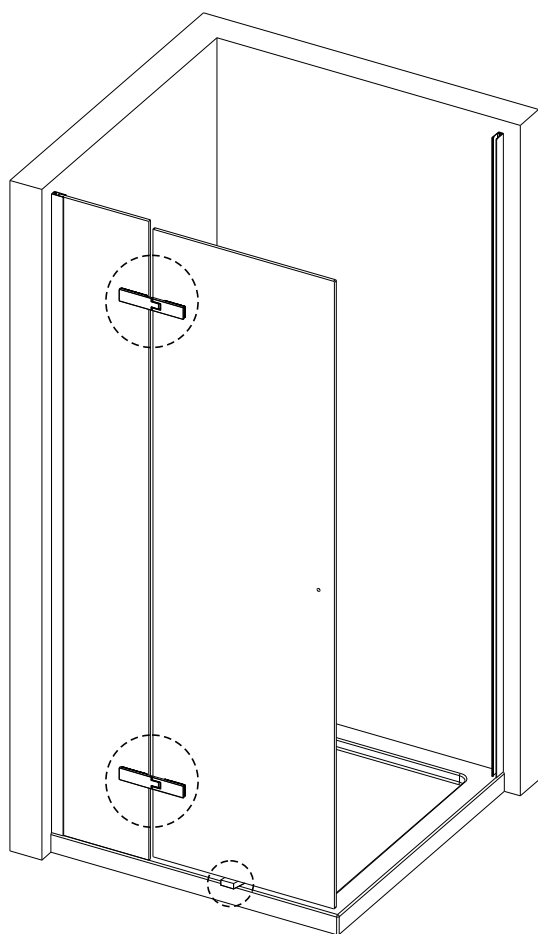


Step 4

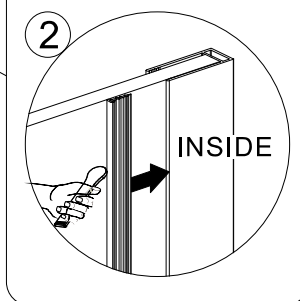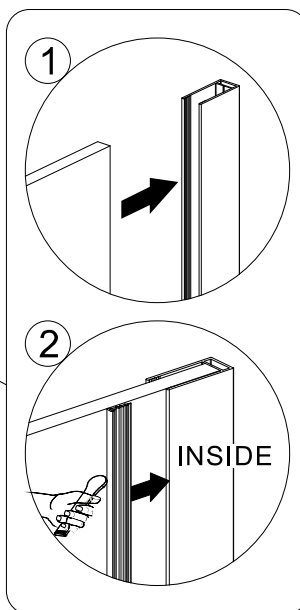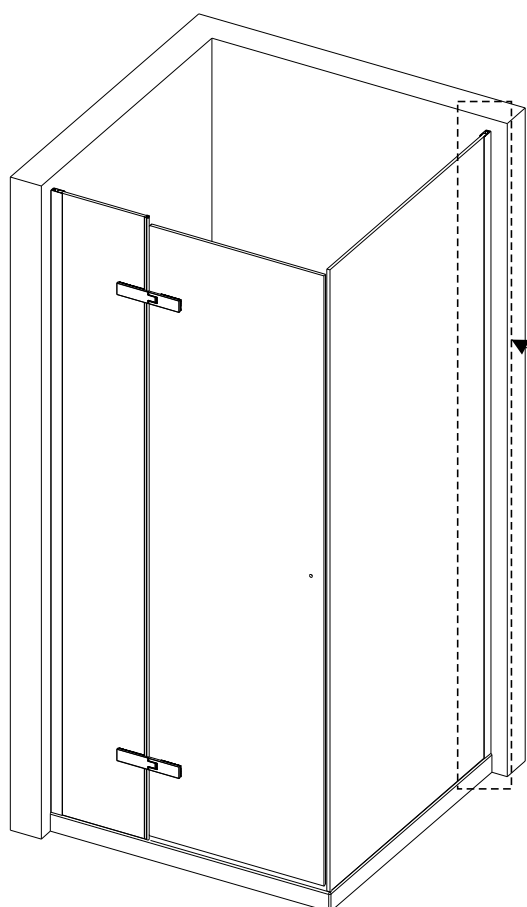

Step 5




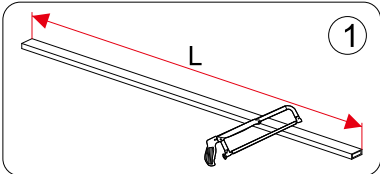
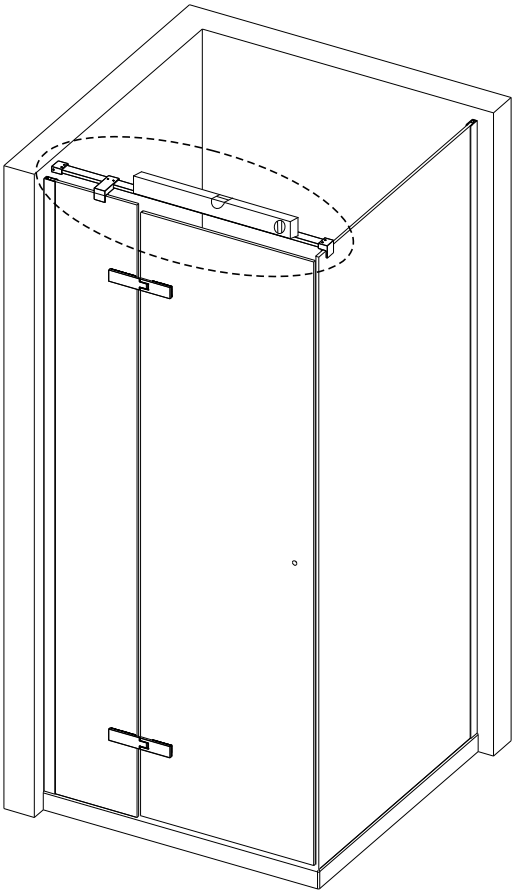


1


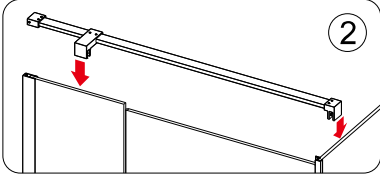


2

CODE	L
SS08/17-FF-250	830
SS08/17-FF-300	885
SS08/17-FF-350	930
SS08/17-FF-400	985
SS08/17-FF-550	1130
SS08/17-FF-600	1185

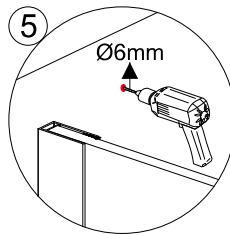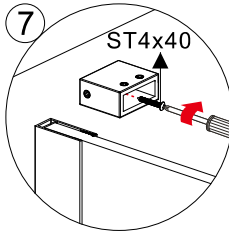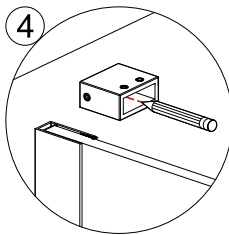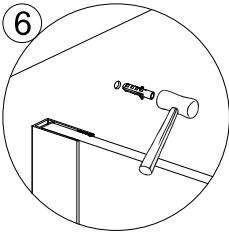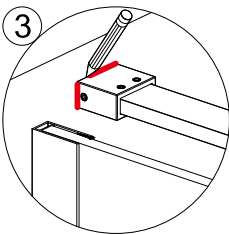


Step 6

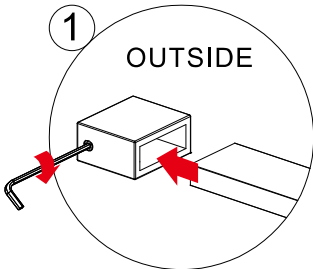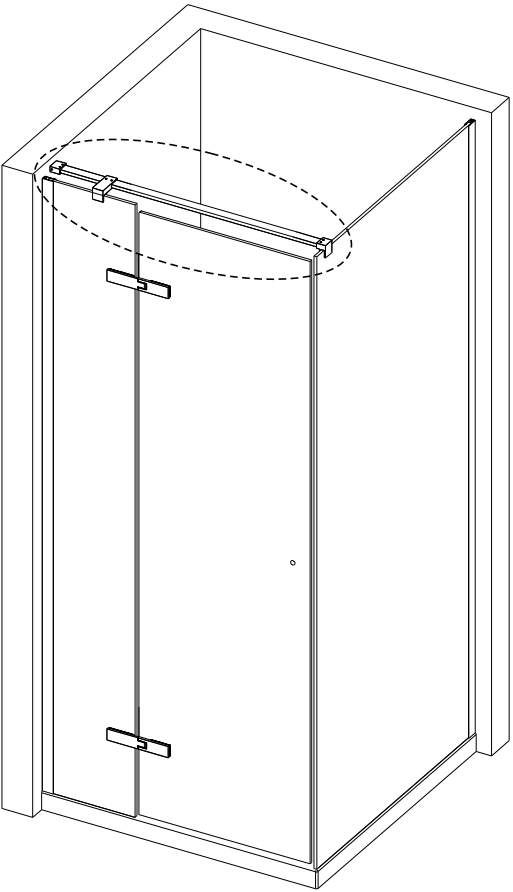

1


OUTSIDE

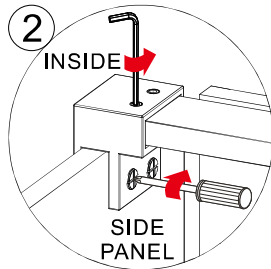

2

INSIDE


SIDE
PANEL

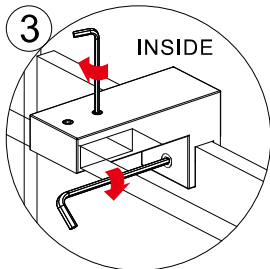


3

INSIDE



Step 7

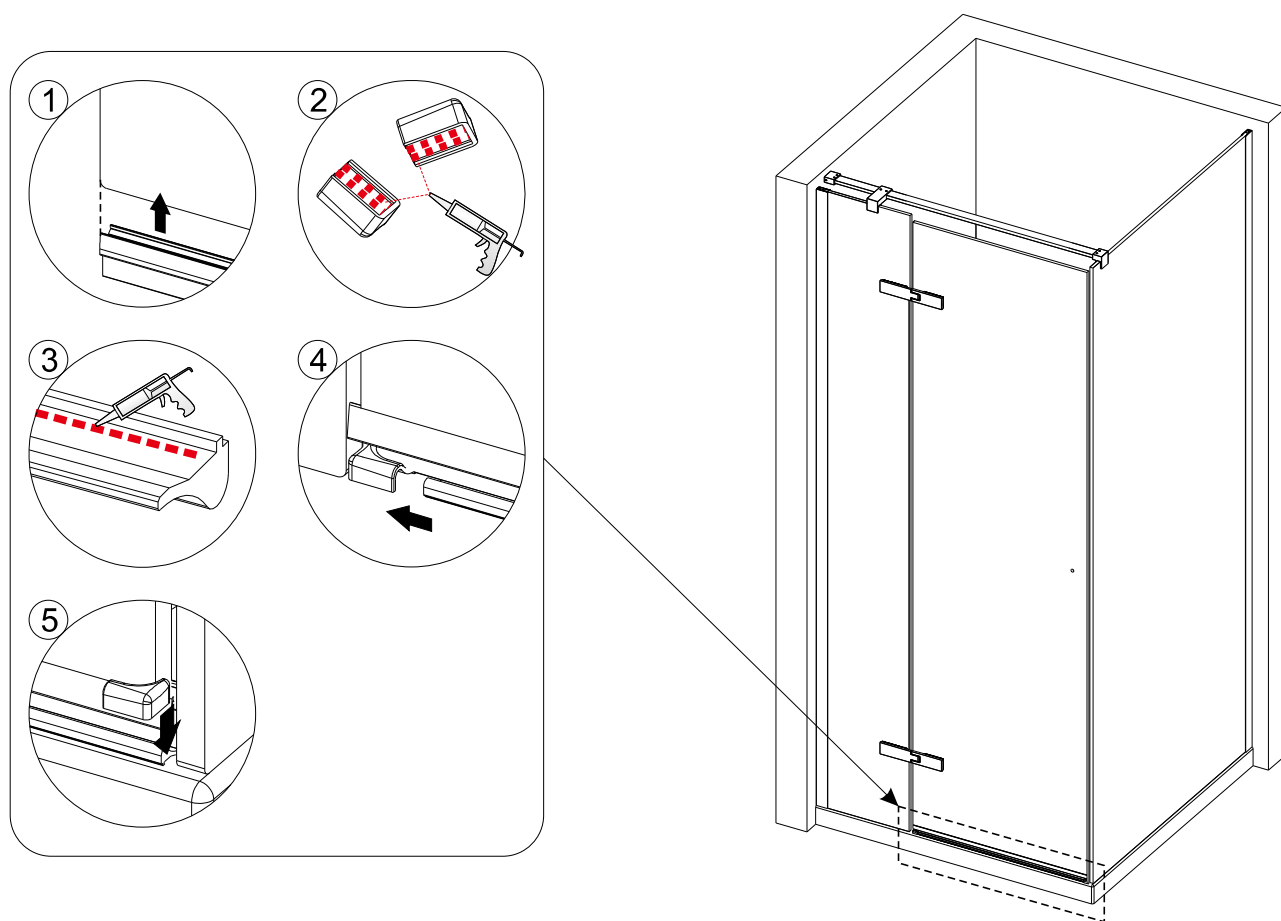

Step 8

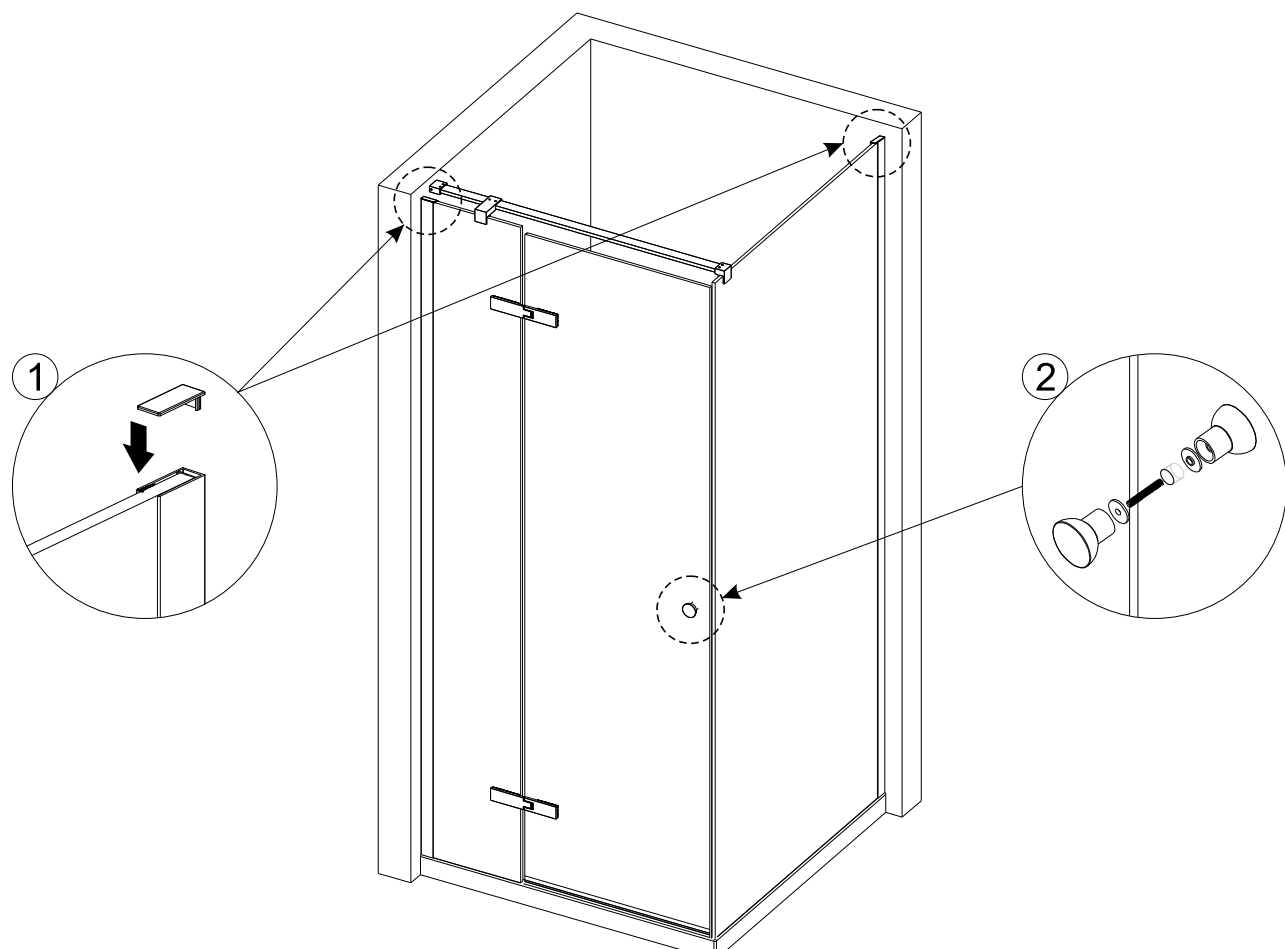

Step 9

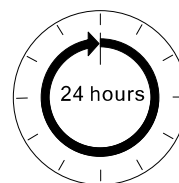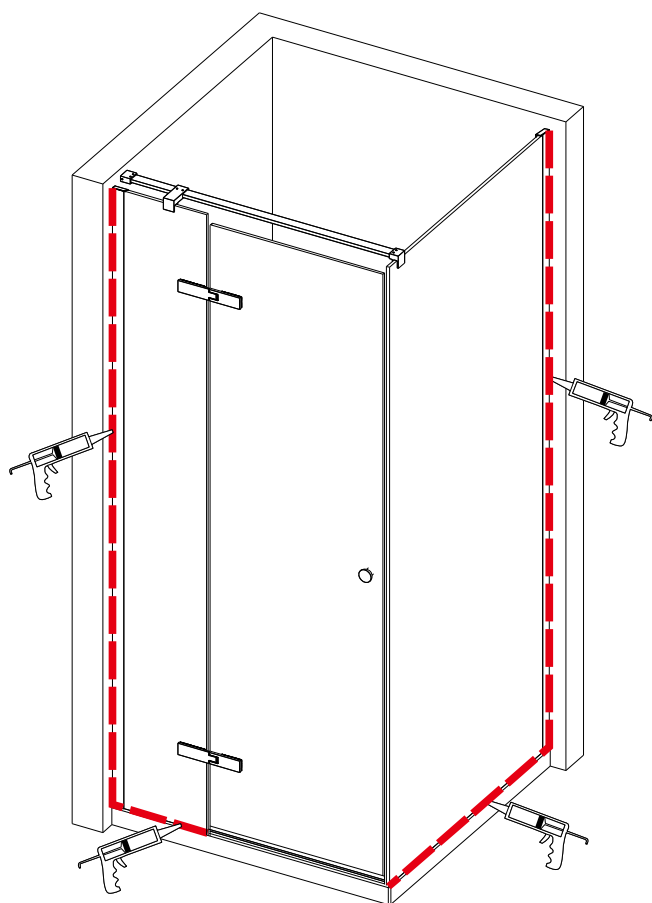

Silicone (inside edge only) where the vertical profiles meet the wall, and the horizontal profile meets the tray