



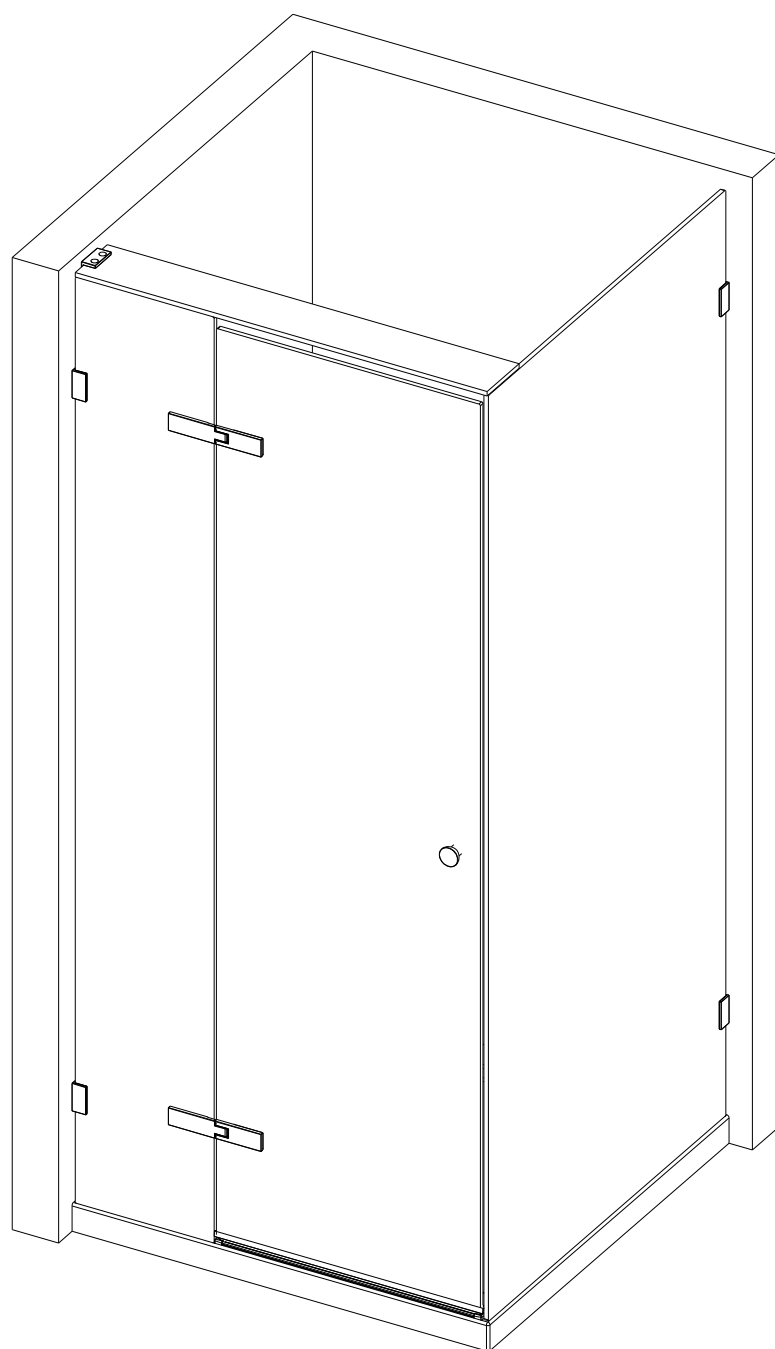

(A)

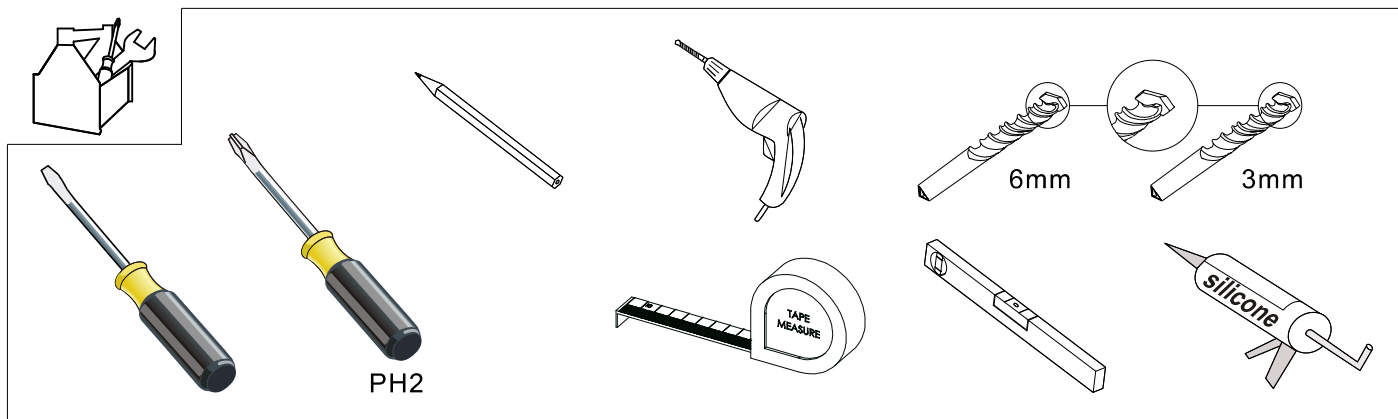

ASSEMBLY INSTRUCTIONS


If you require help, we advise you firstly contact a competent plumber

Installation


Steps

Step 1





MAKE SURE THE TRAY IS LEVEL, USING A SPIRIT LEVEL, BEFORE INSTALLING.
THIS SHOWER PANEL / DOOR.

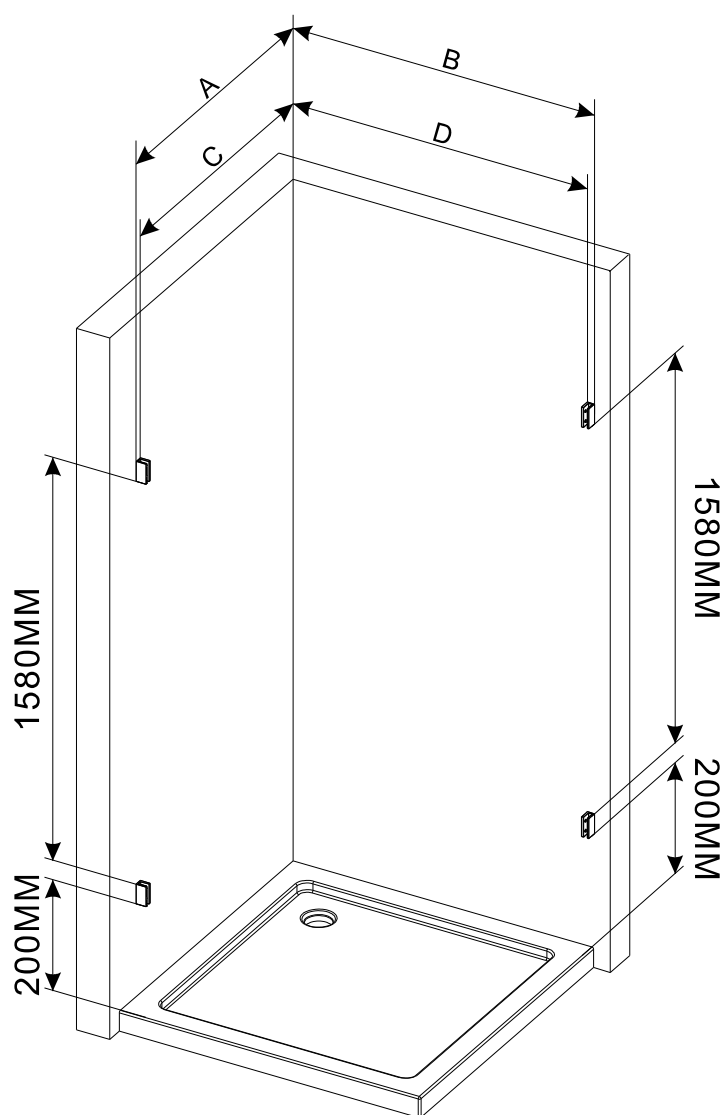





CODE	A	C (drill hole)	CODE	B	D (drill hole)
SS08/17-R-850	843	823	SS08/17-FF-250	843	823
SS08/17-R-900	899	879	SS08/17-FF-300	898	878
SS08/17-R-950	943	923	SS08/17-FF-350	943	923
SS08/17-R-1000	999	979	SS08/17-FF-400	989	978
SS08/17-R-1100	1099	1079	SS08/17-FF-550	1143	1123
SS08/17-R-1150	1143	1123	SS08/17-FF-600	1198	1178
SS08/17-R-1200	1199	1179			

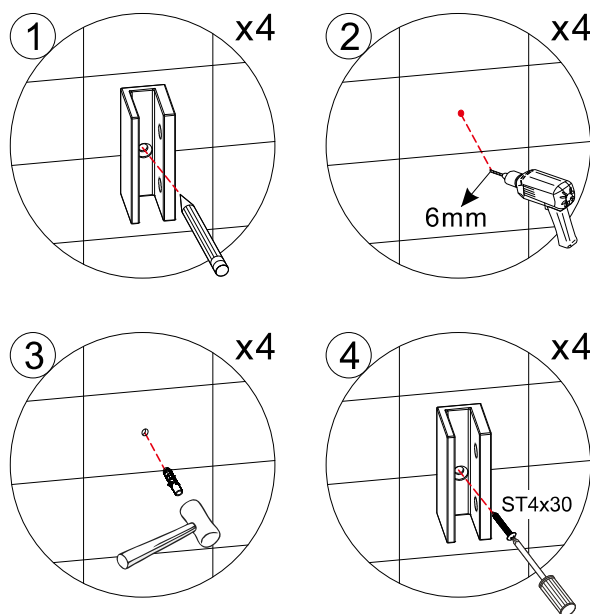



Step 2

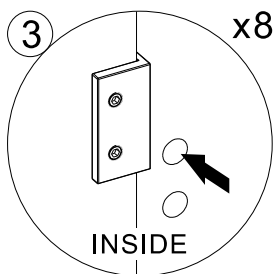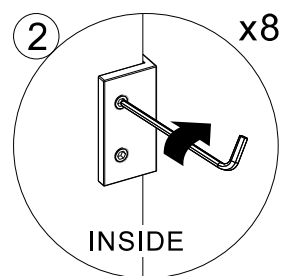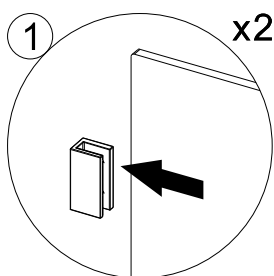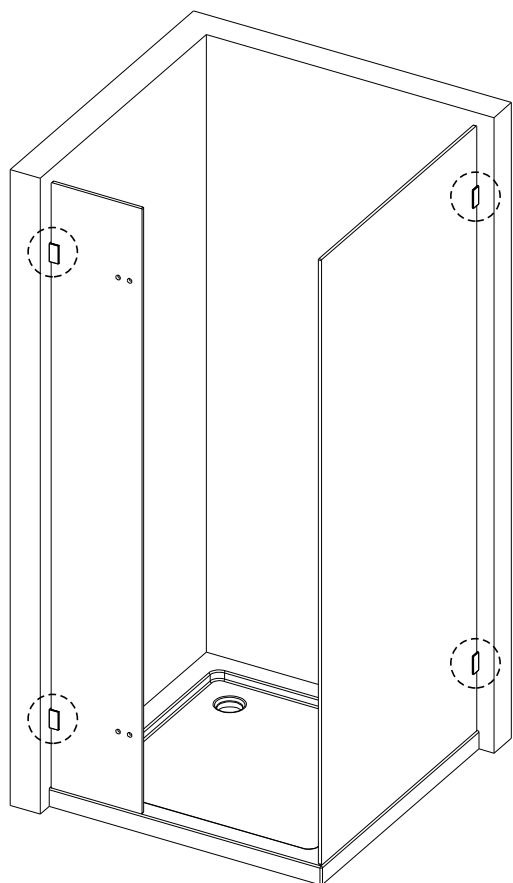



Step 3

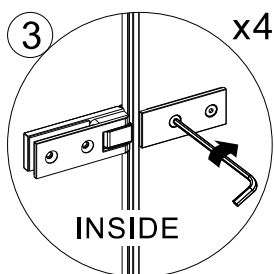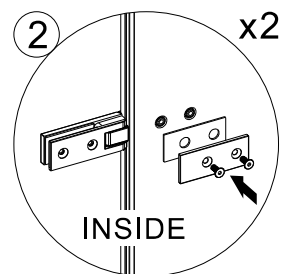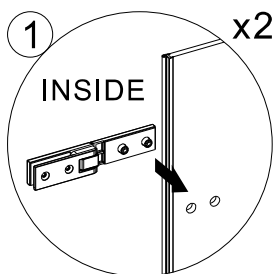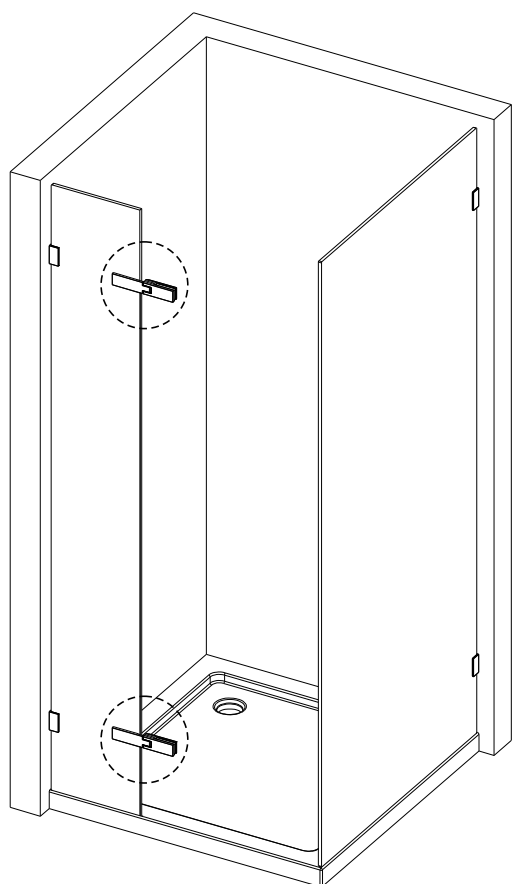


Step 4

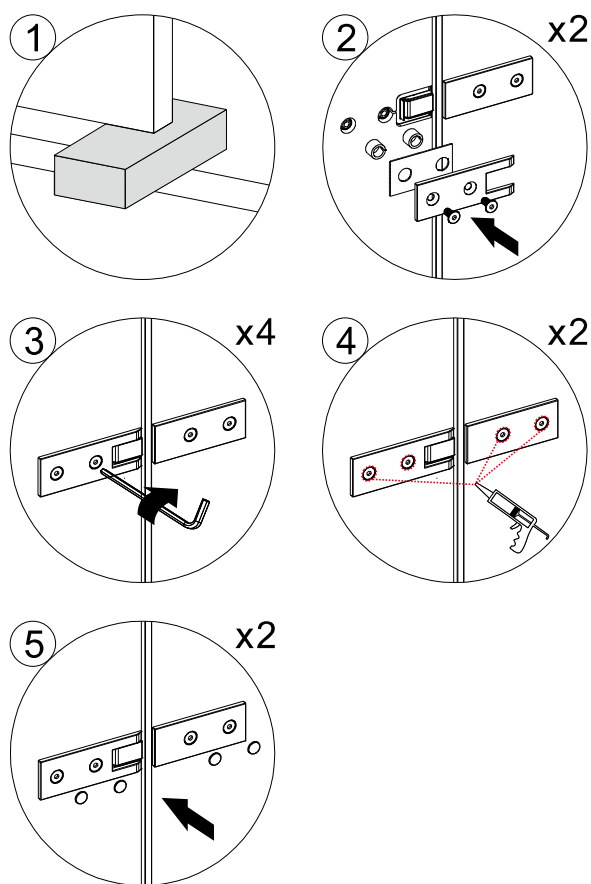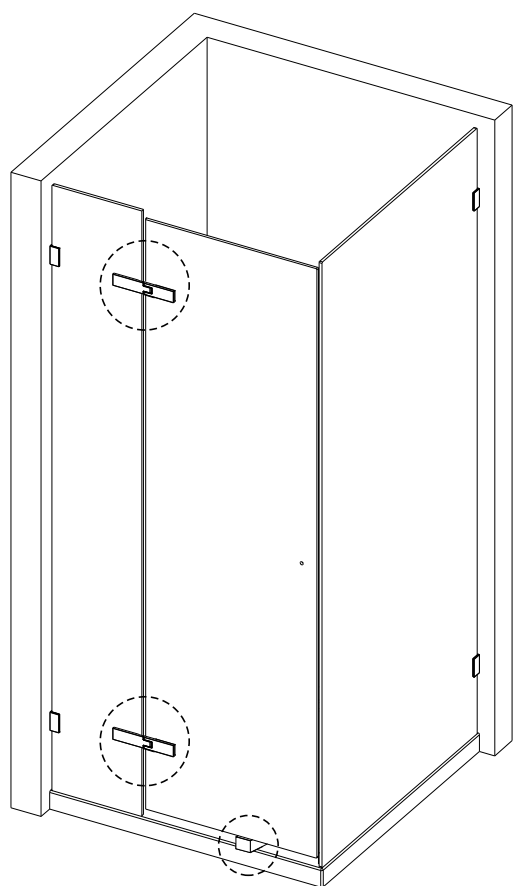


Step 5

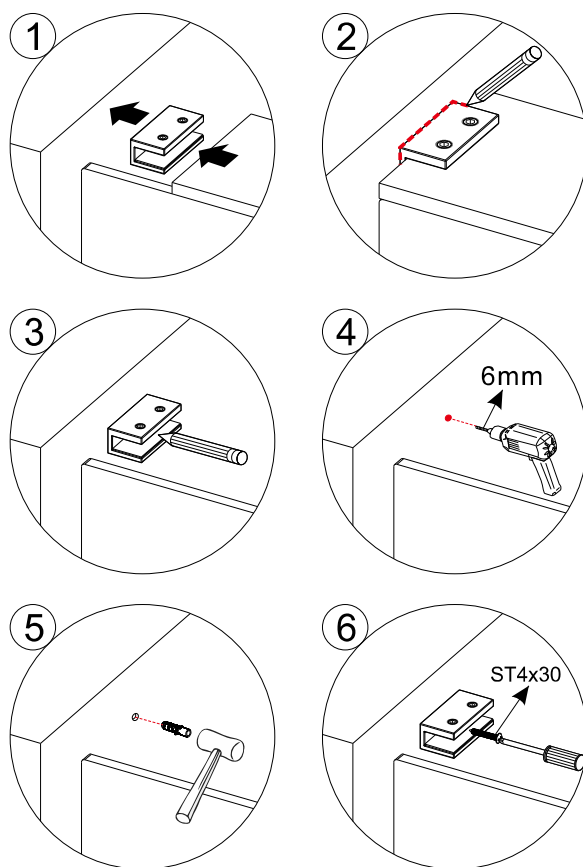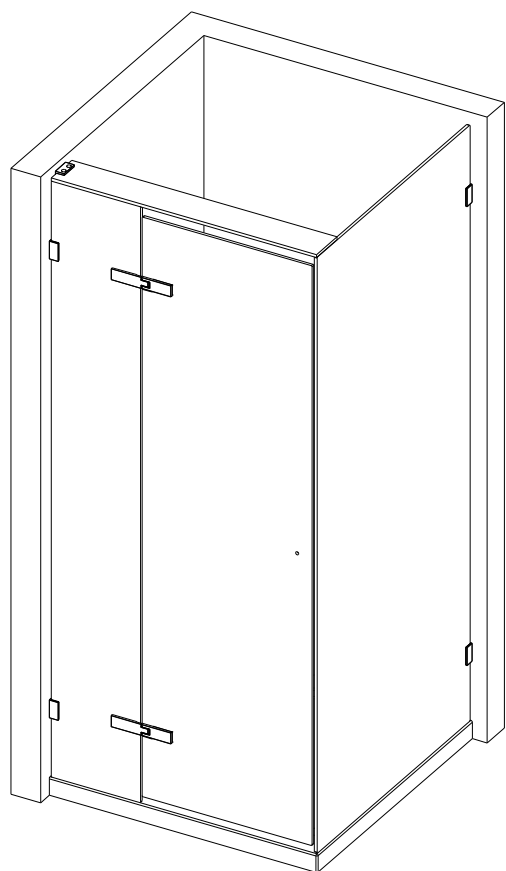




Step 6

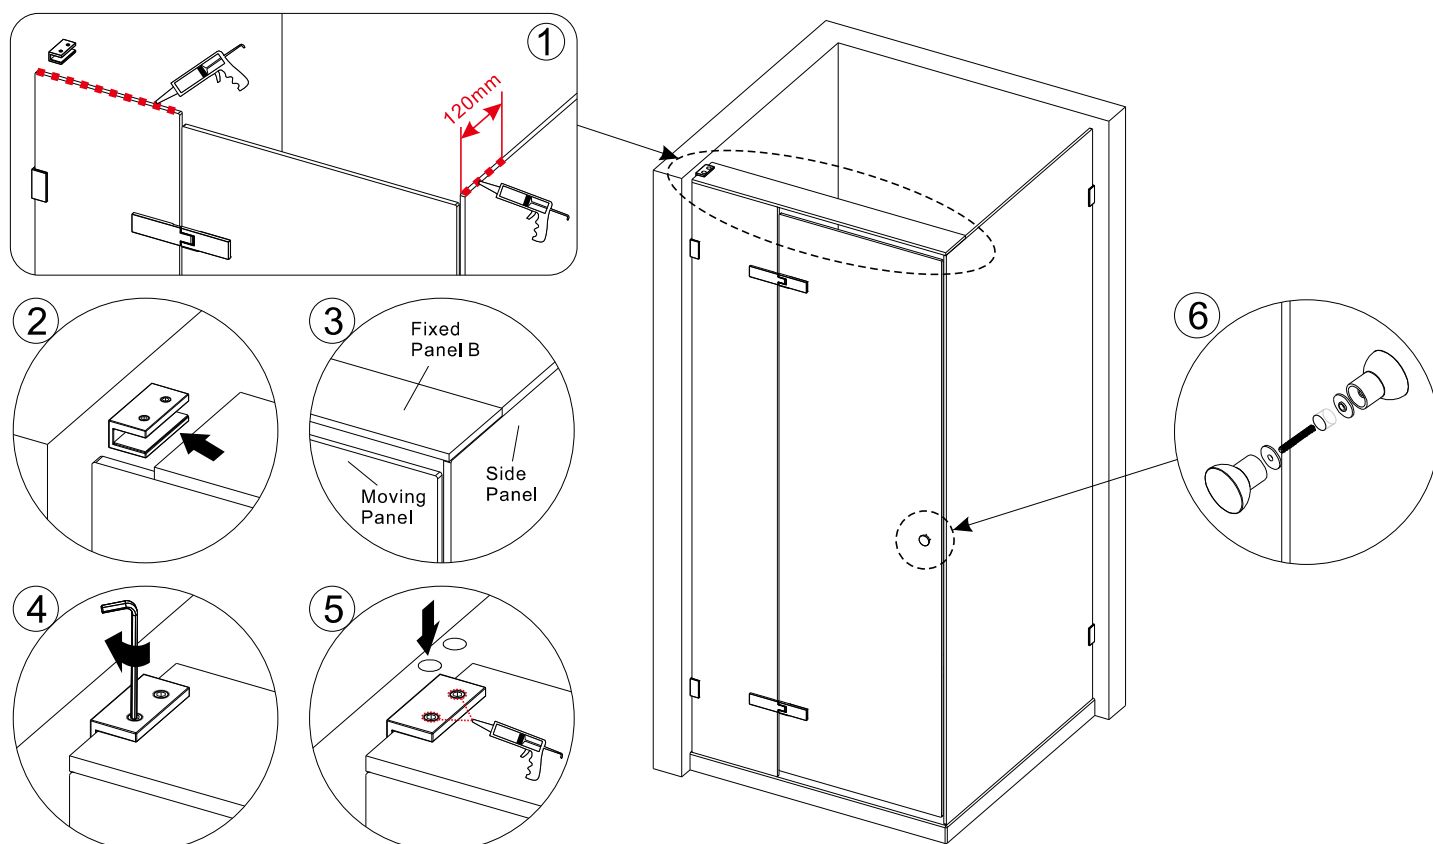


Step 7

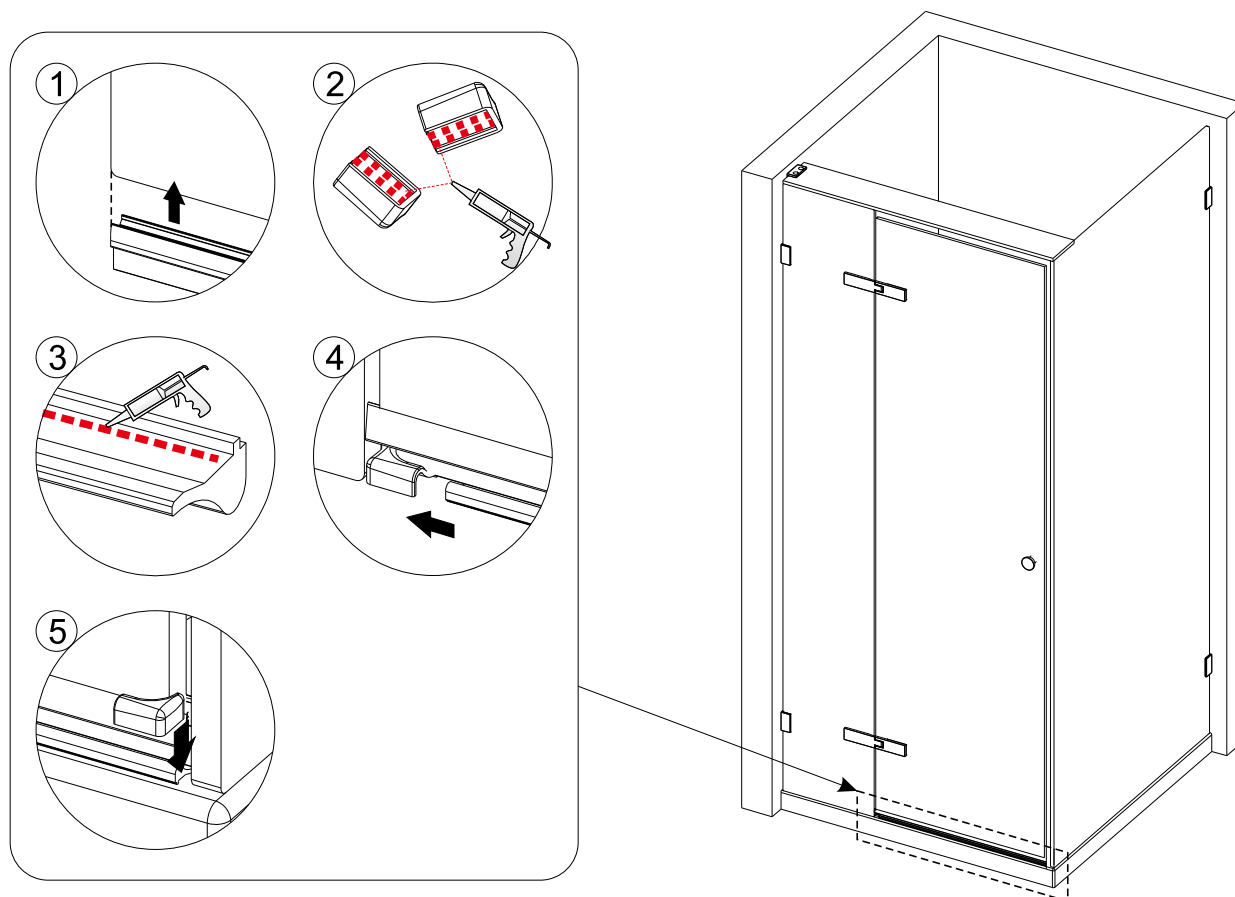

Step 8

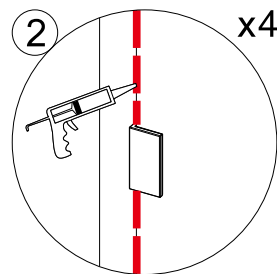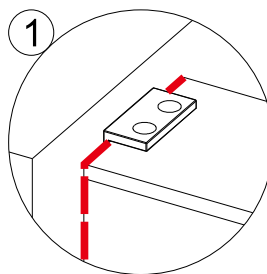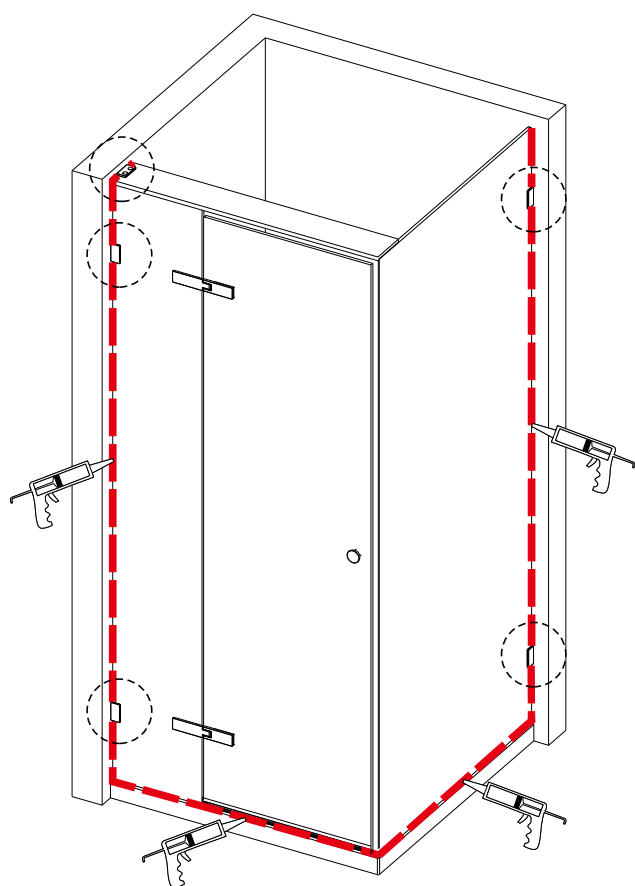

x4

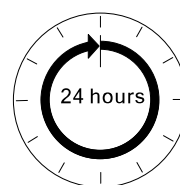

Silicone (inside edge only) where the fixed glass meet the wall and the tray/floor.