



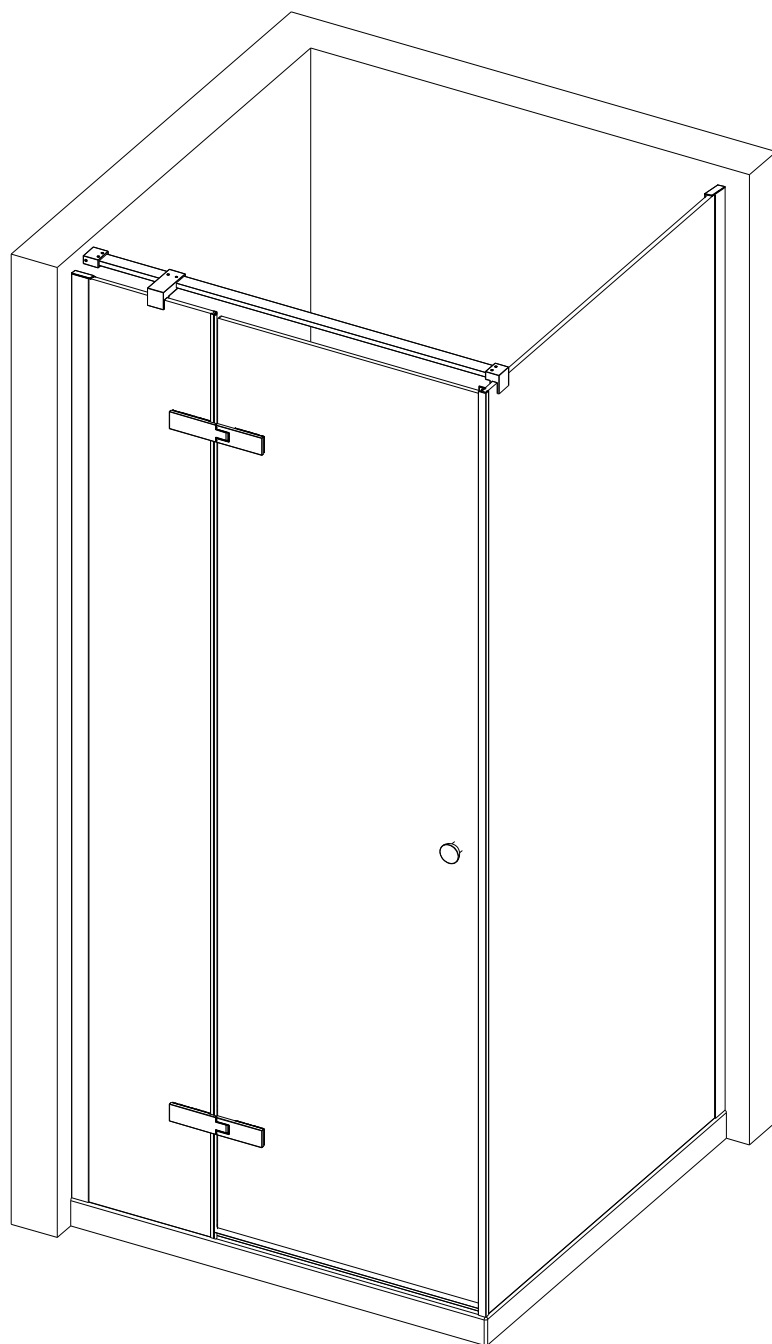


(B)


Step 1

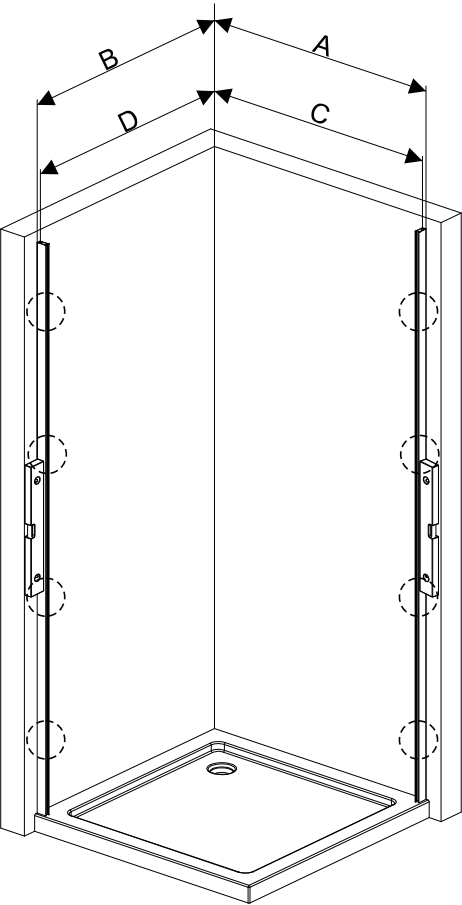







CODE	A	C (drill hole)	CODE	B	D (drill hole)
SS08/17-R-850	840-850	822-832	SS08/17-FF-250	840-850	822-832
SS08/17-R-900	890-900	872-882	SS08/17-FF-300	890-900	872-882
SS08/17-R-950	940-950	922-932	SS08/17-FF-350	940-950	922-932
SS08/17-R-1000	990-1000	972-982	SS08/17-FF-400	990-1000	972-982
SS08/17-R-1100	1090-1100	1072-1082	SS08/17-FF-550	1140-1150	1122-1132
SS08/17-R-1150	1140-1150	1122-1132	SS08/17-FF-600	1190-1200	1172-1182
SS08/17-R-1200	1190-1200	1172-1182			

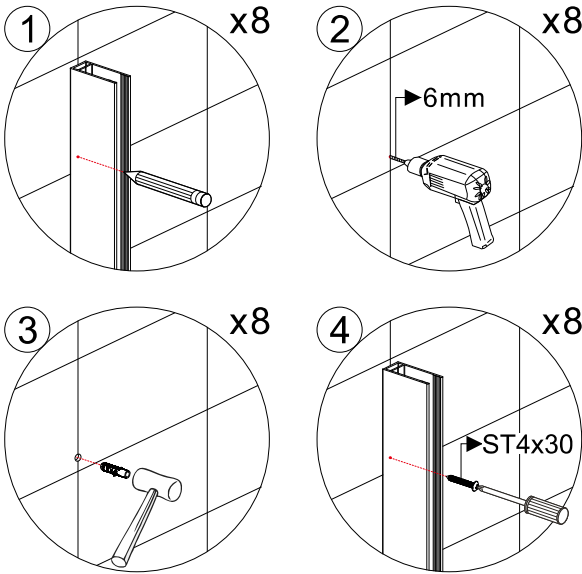





Step 2

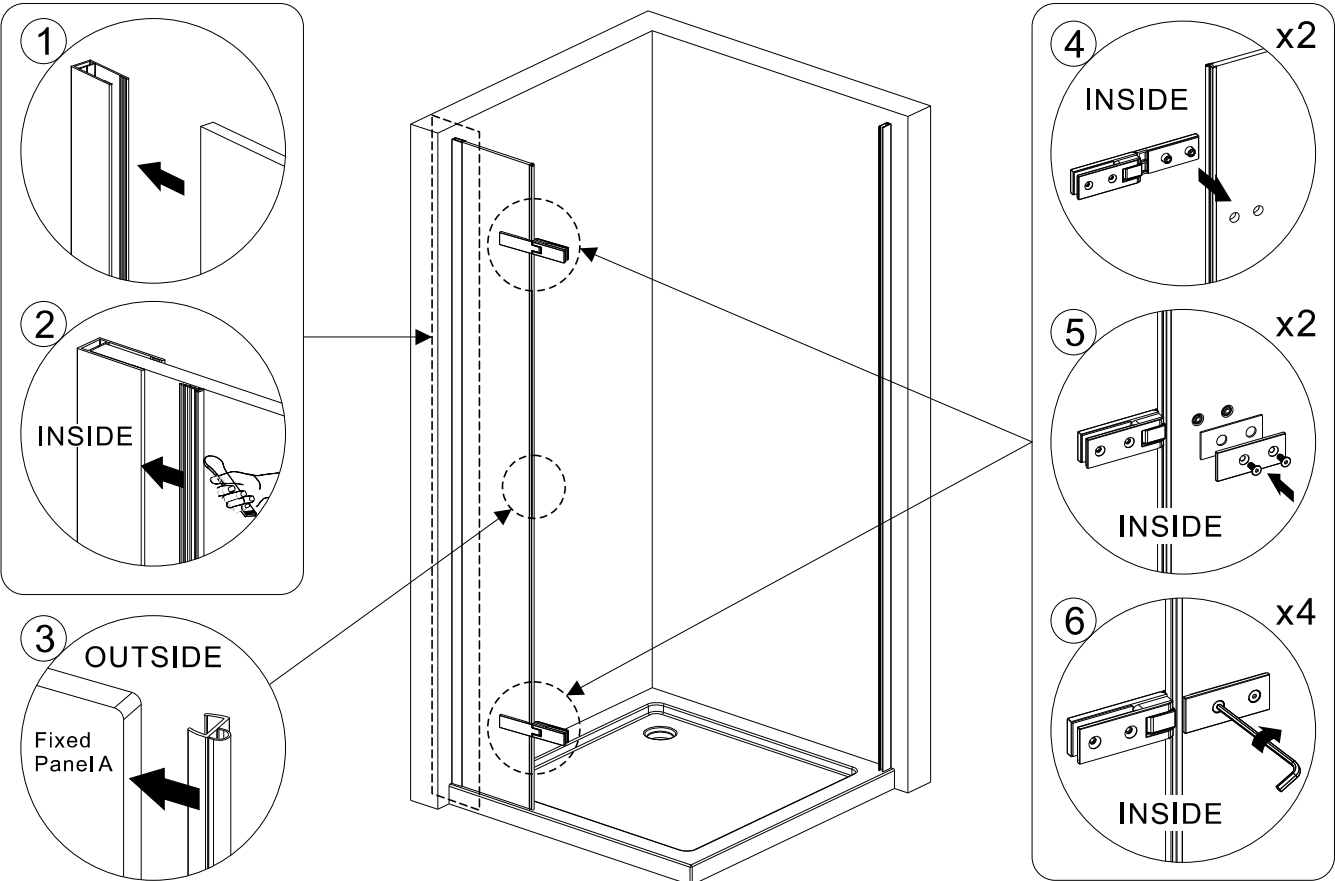




Step 3

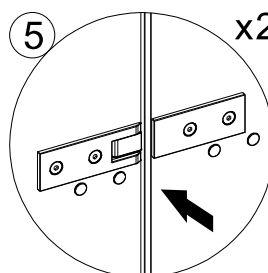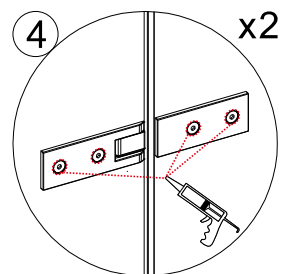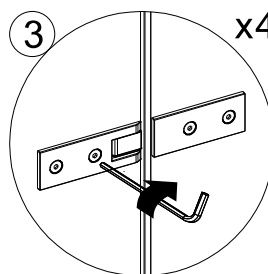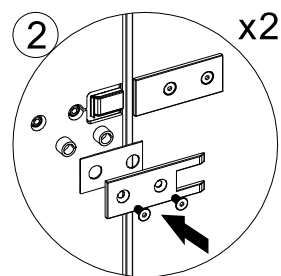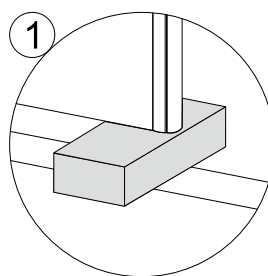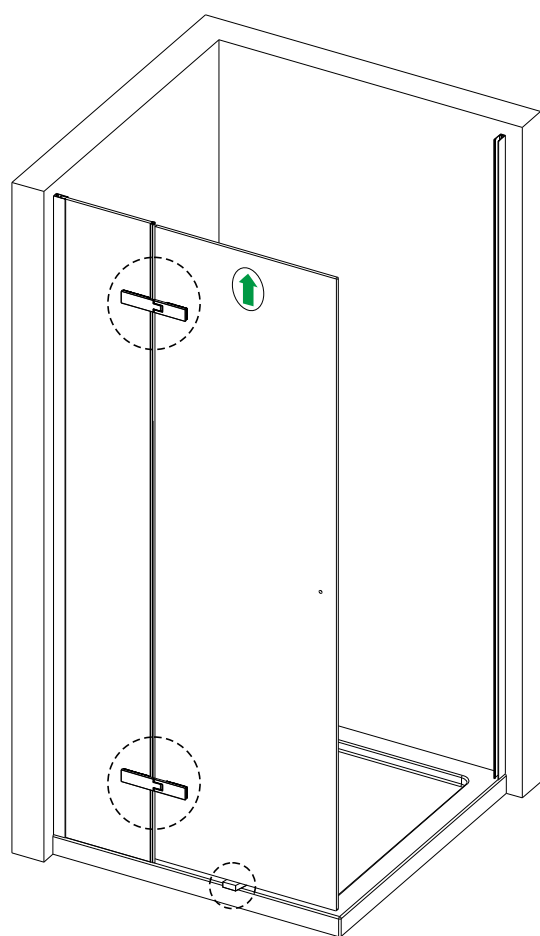






Step 4

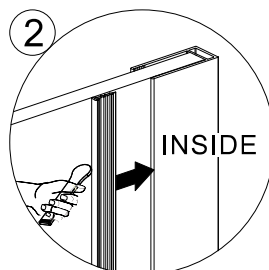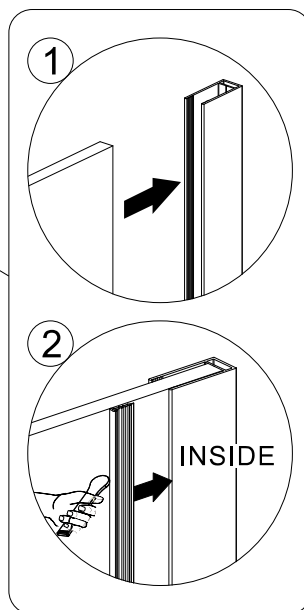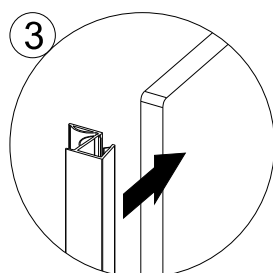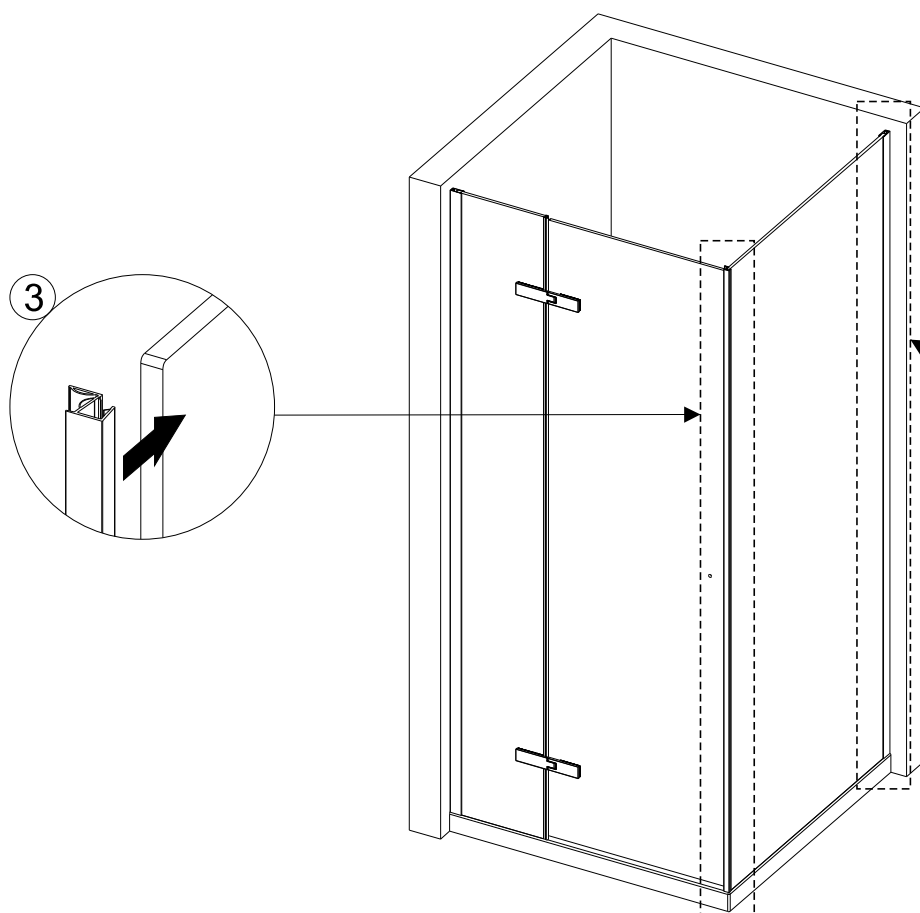





Step 5

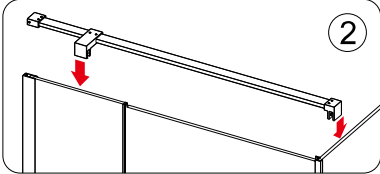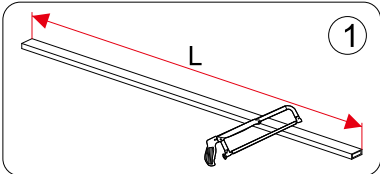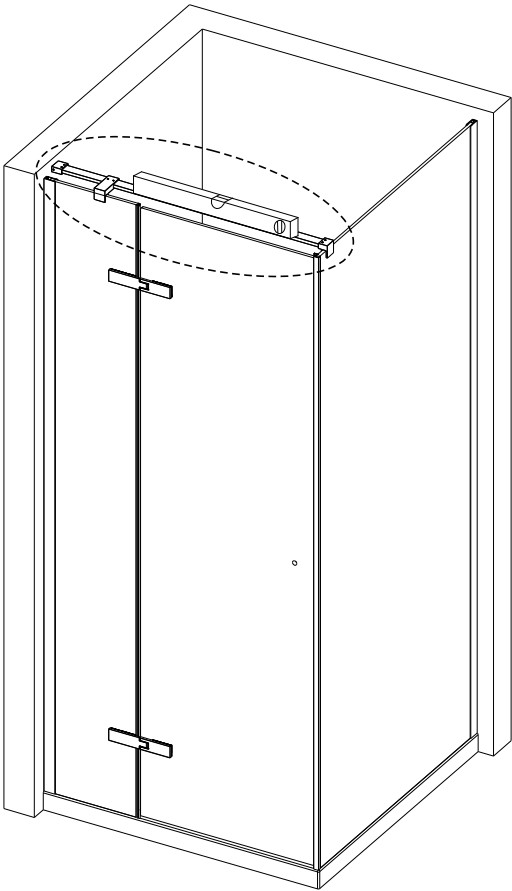


CODE	L
SS08/17-FF-250	820
SS08/17-FF-300	870
SS08/17-FF-350	920
SS08/17-FF-400	970
SS08/17-FF-550	1120
SS08/17-FF-600	1170

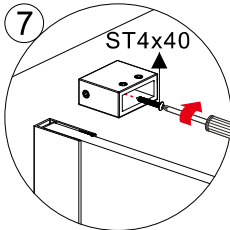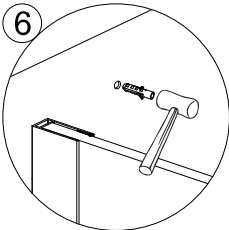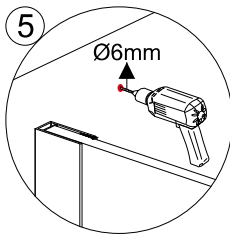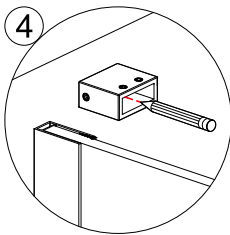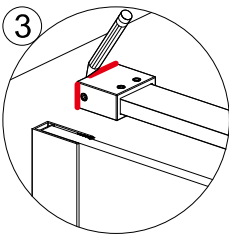


Step 6

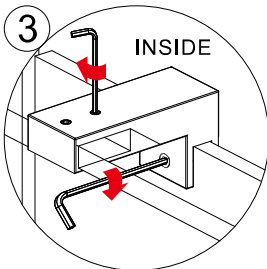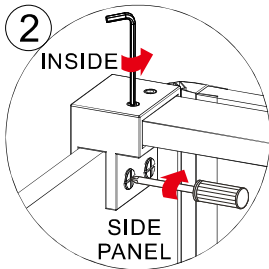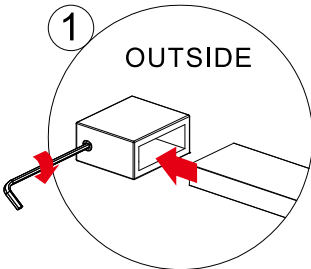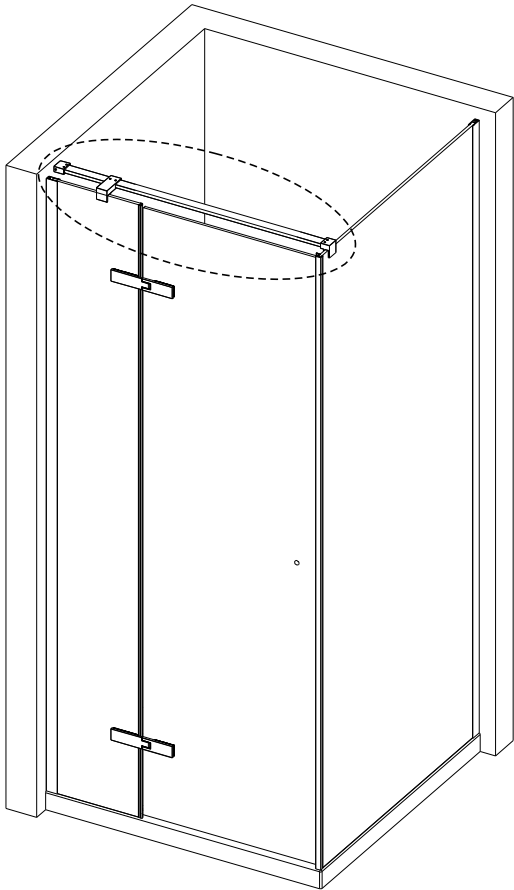



Step 7

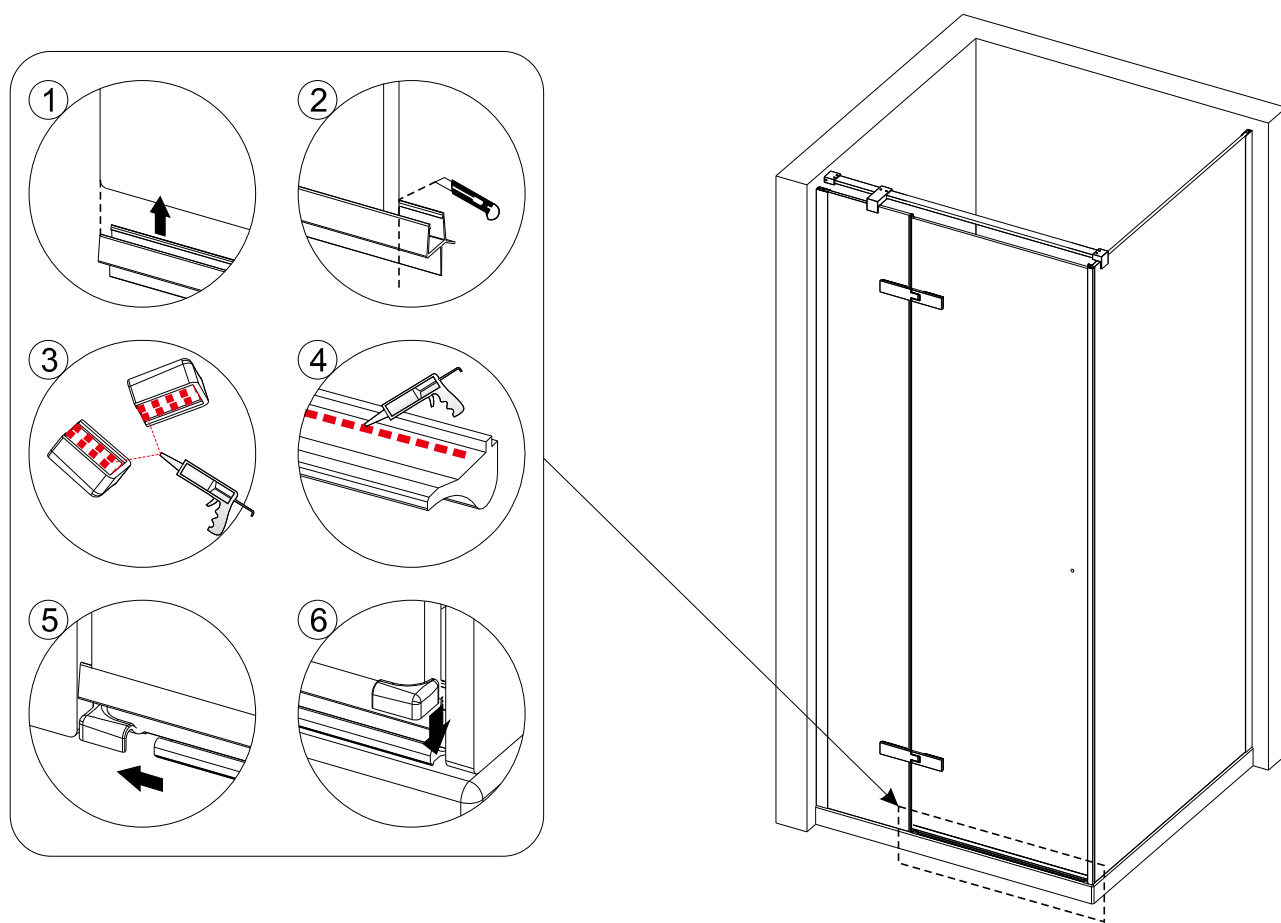

Step 8

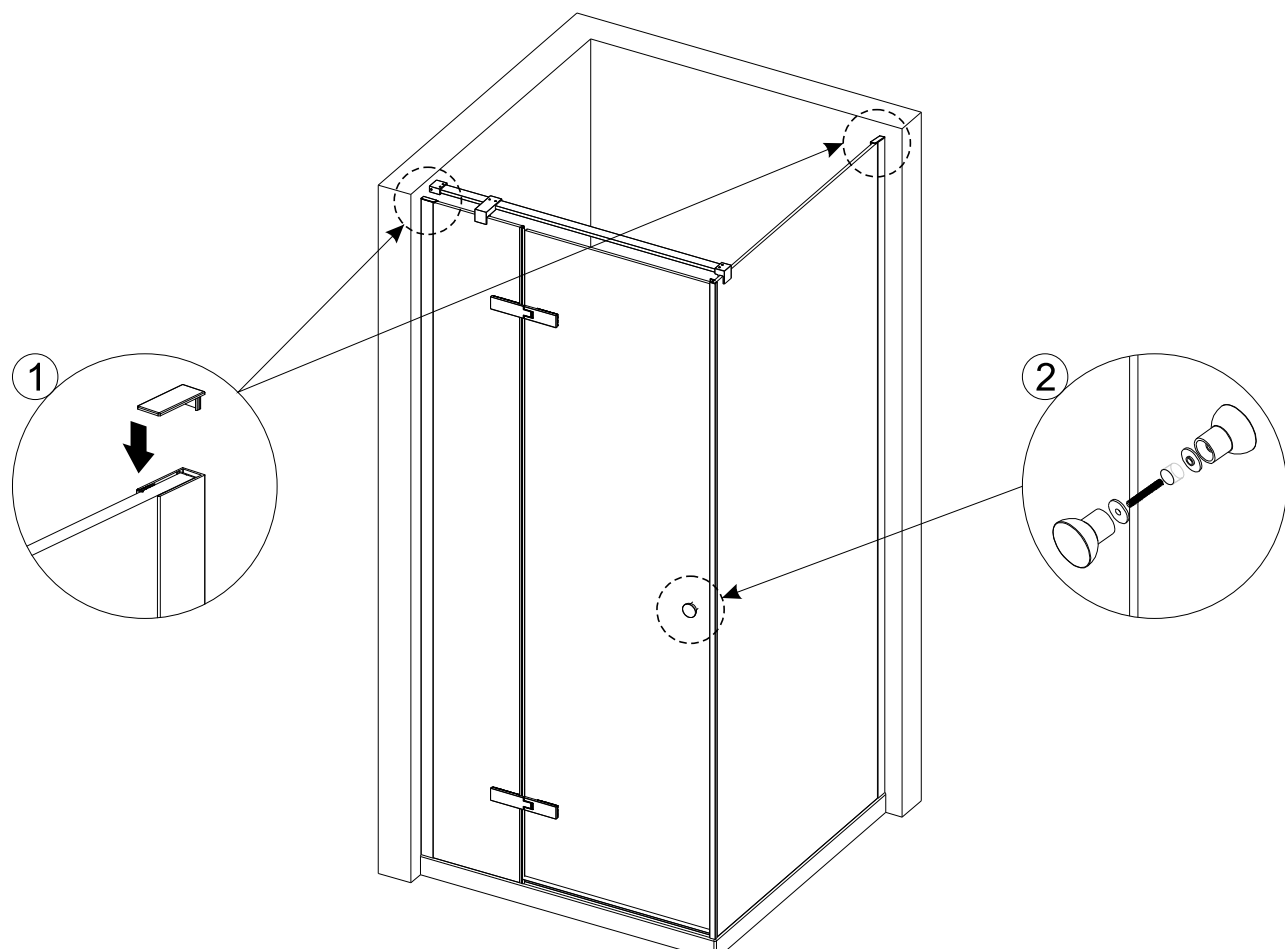

Step 9

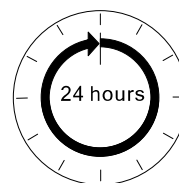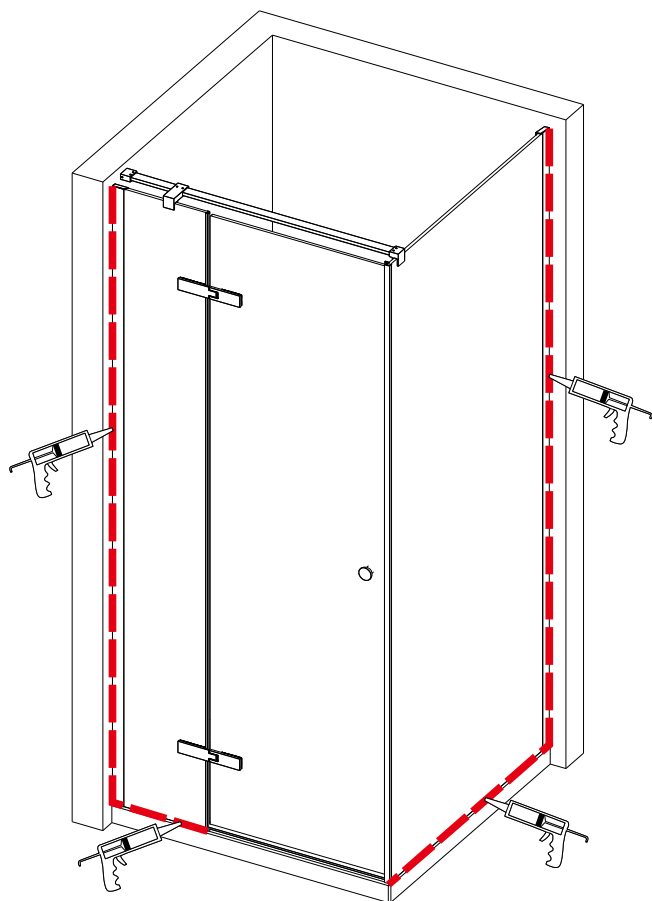

Silicone (inside edge only) where the vertical profiles meet the wall, and the horizontal profile meets the tray