

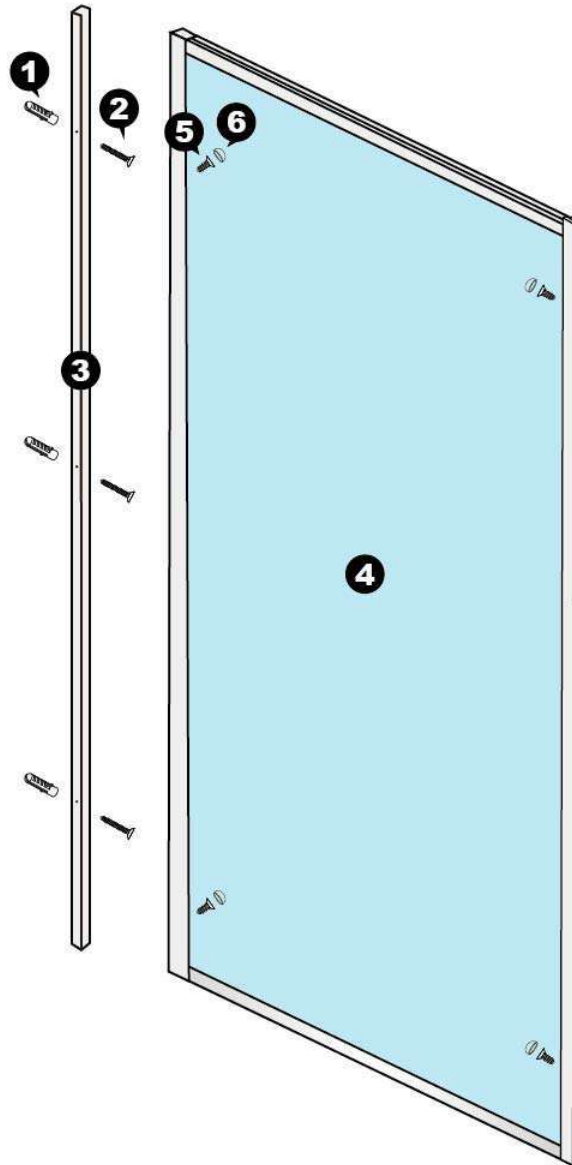


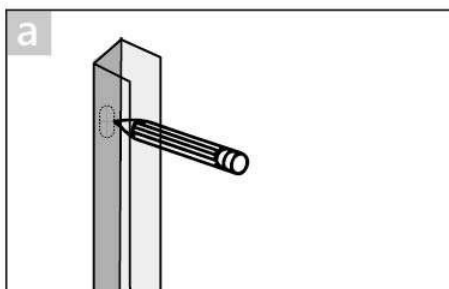


Parts list

1  x3	2  x3	3  x1
Wall plugs	ST4 x 30 Screws	Wall channel
4  x1	5  x4	6  x4
Return Panel	ST4 x 10 screws	Screw cover caps


1

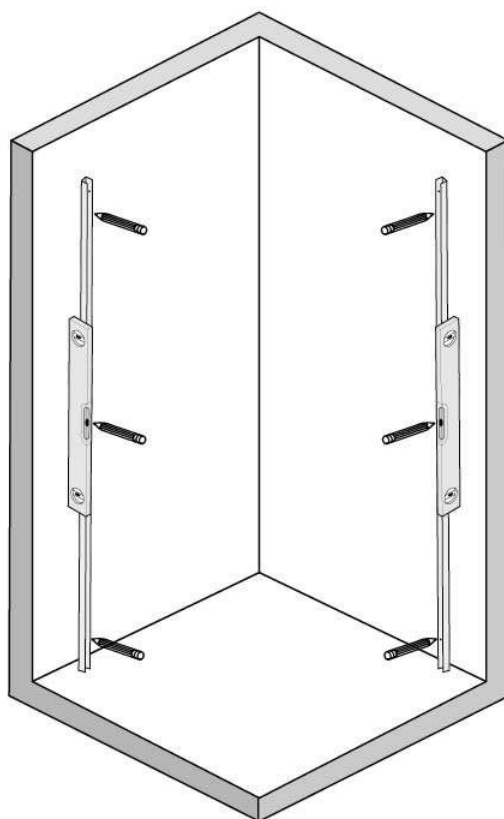


a Position and level the wall channels. Mark the fastening holes.

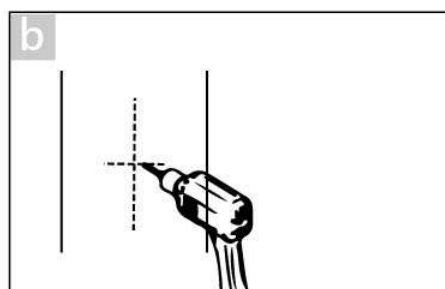

b Drill the wall covering.

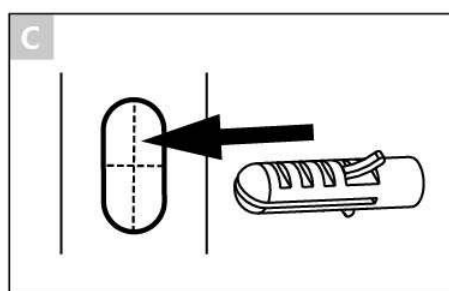


c If no studs are behind the wall covering, use wall plugs when fastening the wall channels.

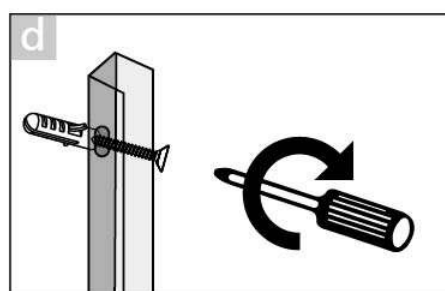



d Fasten the wall channel with ST4*30 screws.

2

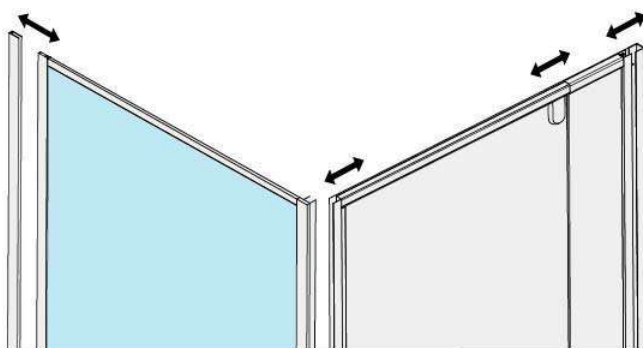


Assemble the door frame with return panel. Position and level frame by adjusting top & bottom tracks telescopically.

3

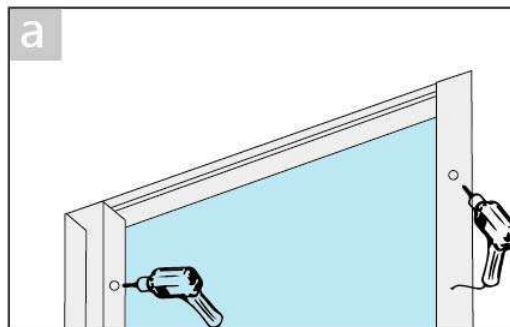
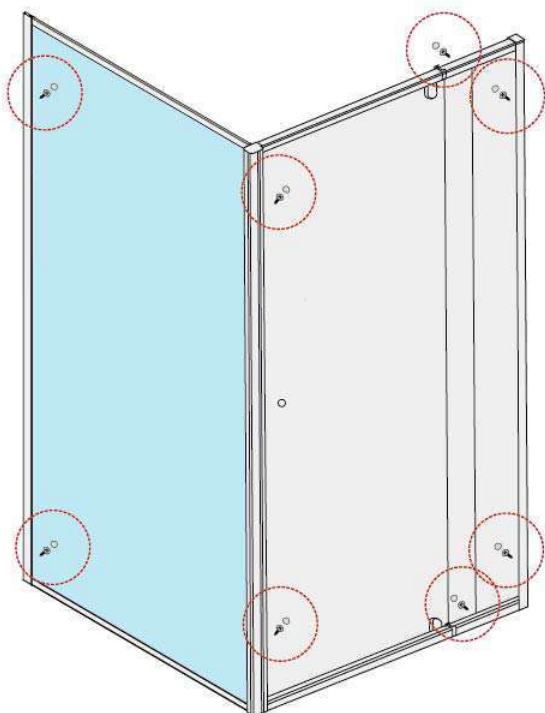


a Drill the holes on wall channels, top and bottom tracks

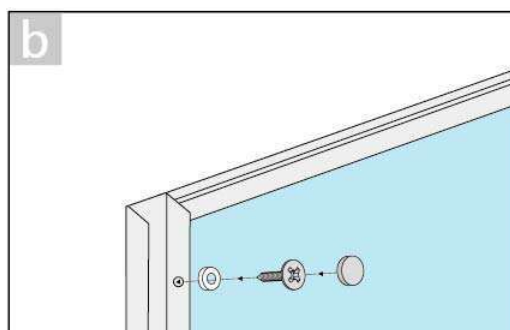



b Fasten the wall channels, top and bottom tracks with ST4*10 screws. Fit screw cover caps.

4

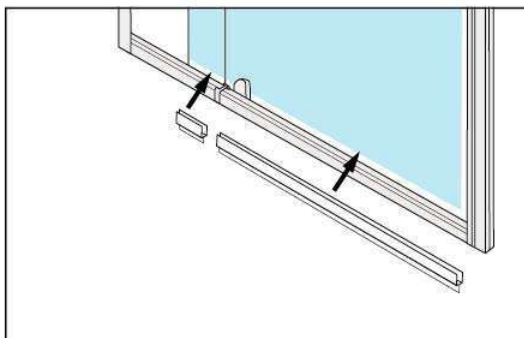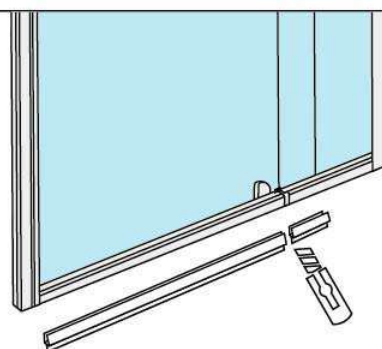

Cut water seal to suit length of door panel. Fit water seal to bottom of door panel.

5

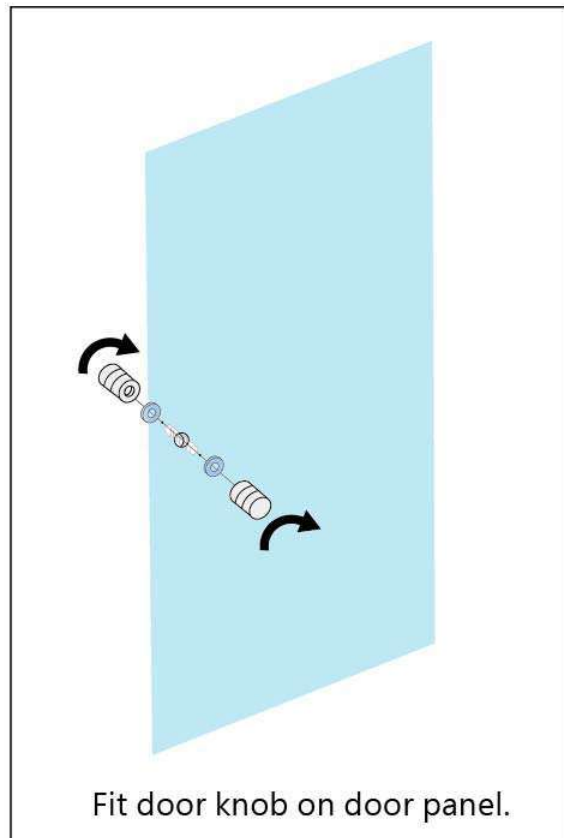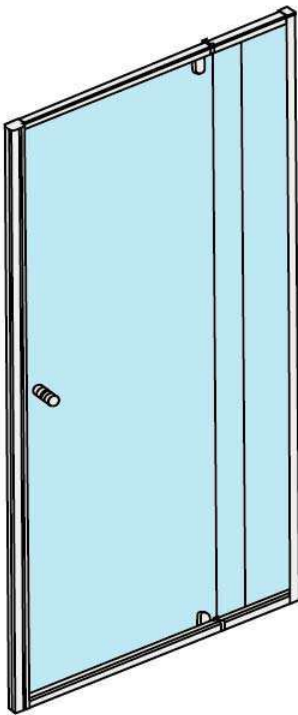

Fit door knob on door panel.

6

Silicone along wall channel and bottom track. Please allow at least 24 hours for the silicone to fully cure before using the shower.

