

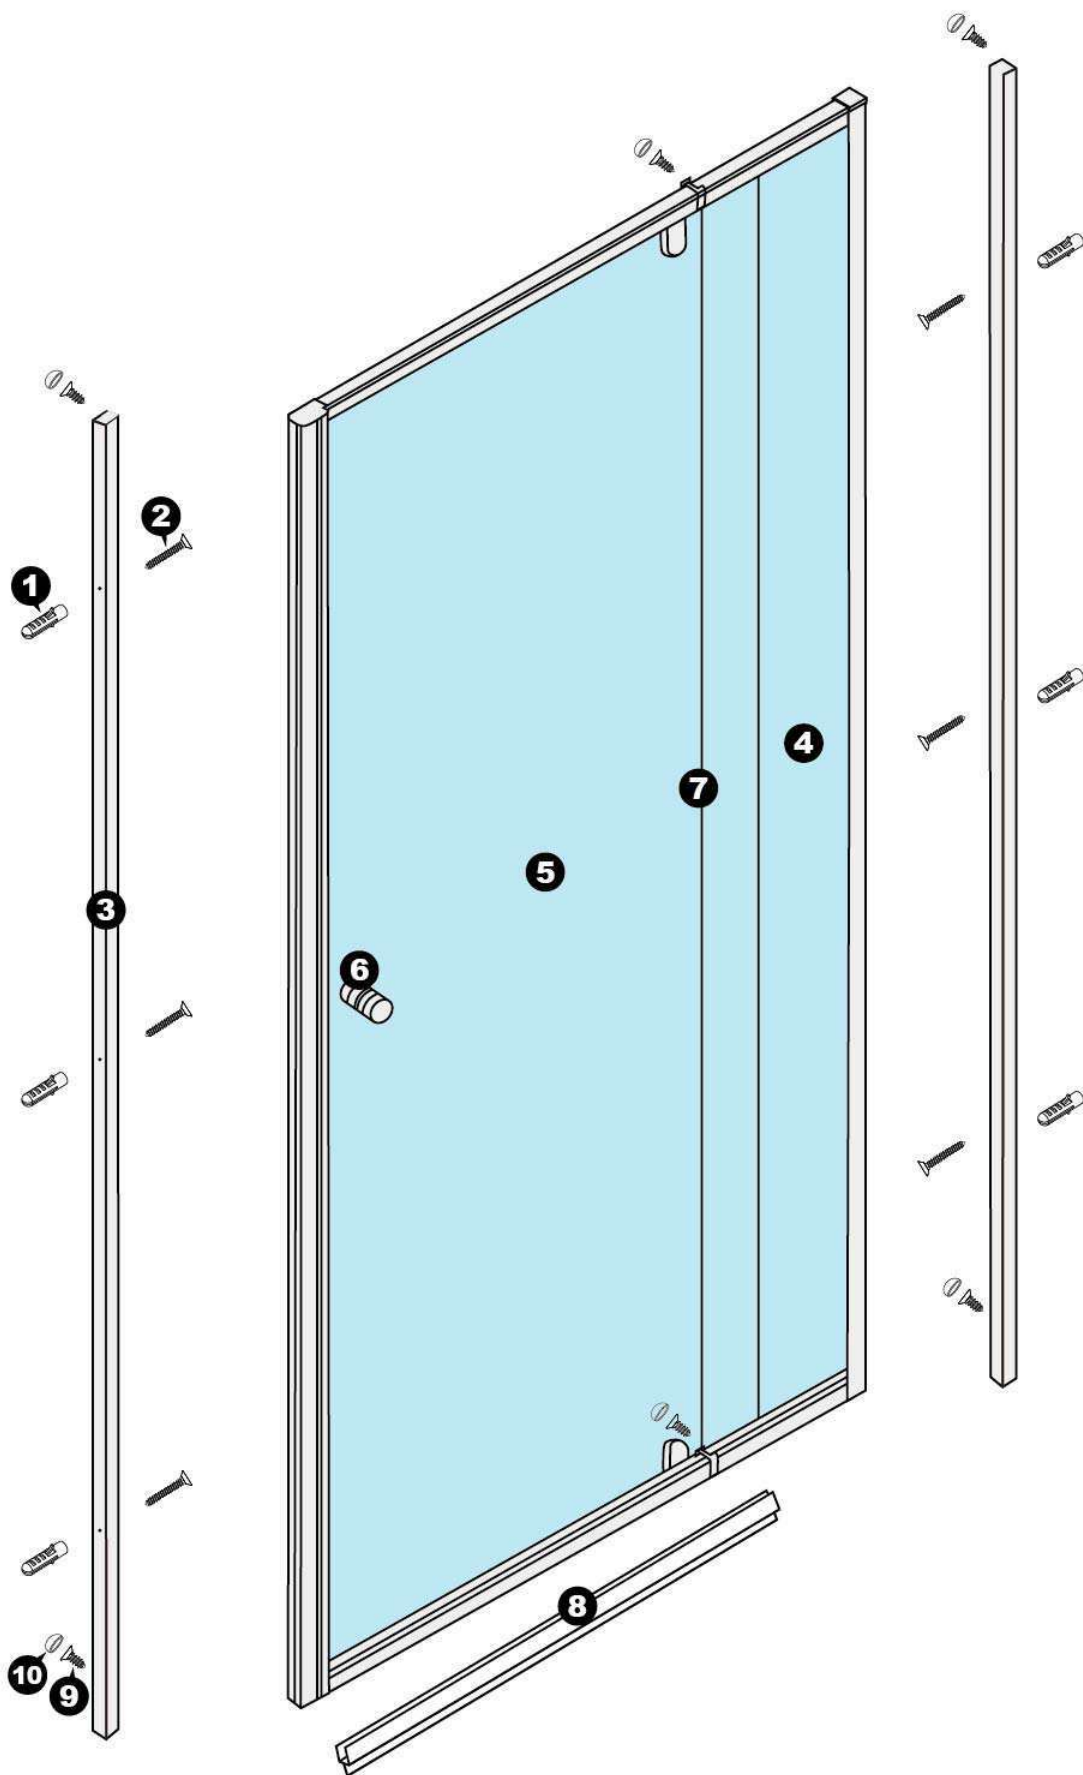










Parts list

1  x6	2  x6	3  x2	4  x1
Wall plugs	ST4 x 30 Screws	Wall channel	Fixed Panel
5  x1	6  x1	7  x1	8  x1
Door panel	Door knob	F shape water seal	Under door water seal
9  x6	10  x6		
ST4 x 10 screws	Screw cover caps		


Tools & Equipments Required

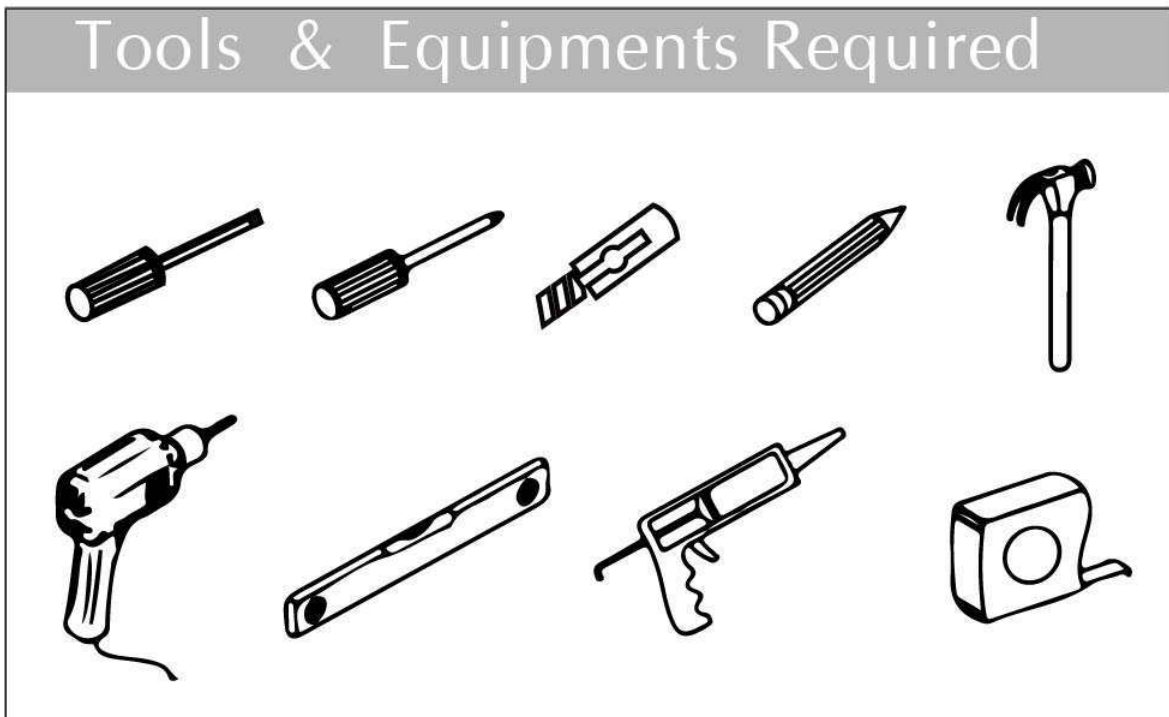


1

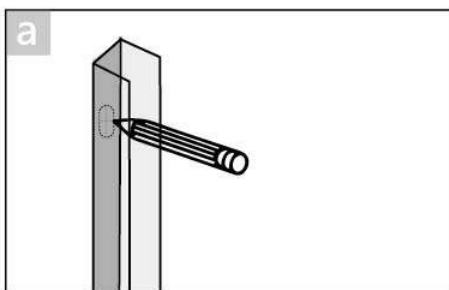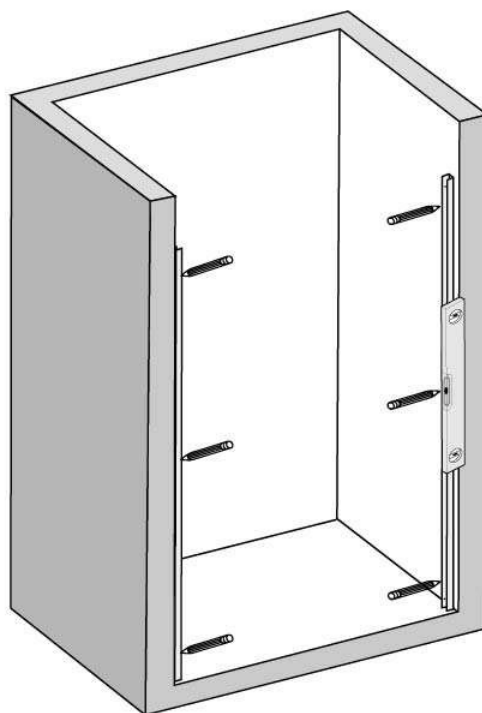


a Position and level the wall channels. Mark the fastening holes.

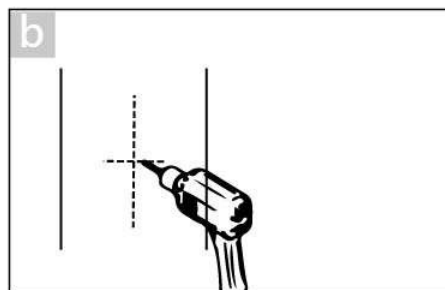

b Drill the wall covering.

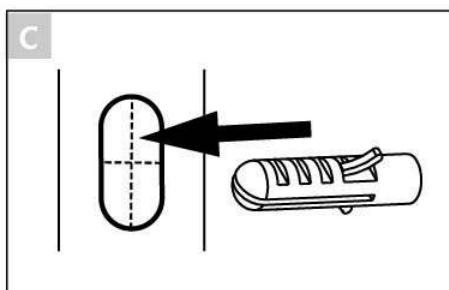


c If no studs are behind the wall covering, use wall plugs when fastening the wall channels.

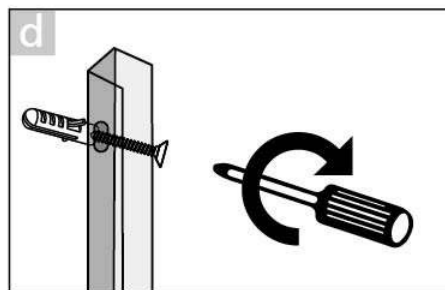


d Fasten the wall channel with ST4*30 screws.

2

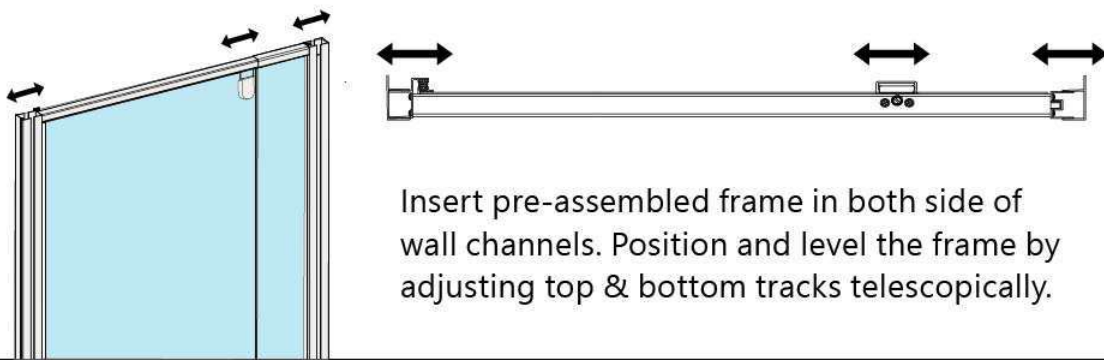


Insert pre-assembled frame in both side of wall channels. Position and level the frame by adjusting top & bottom tracks telescopically.


3

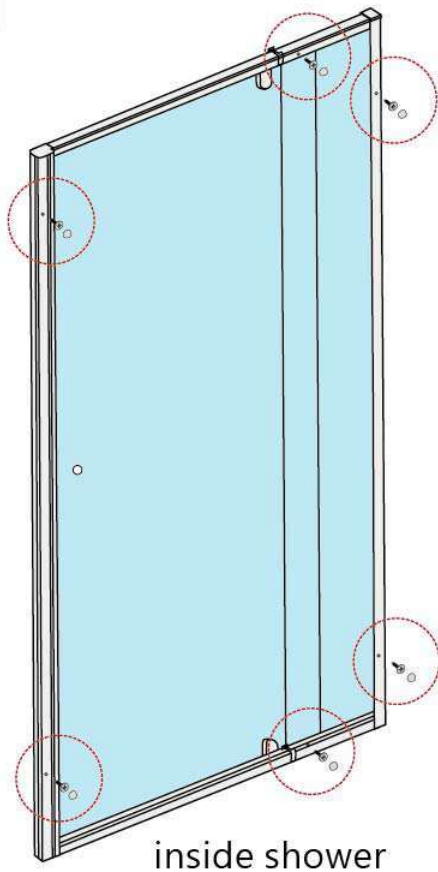

inside shower


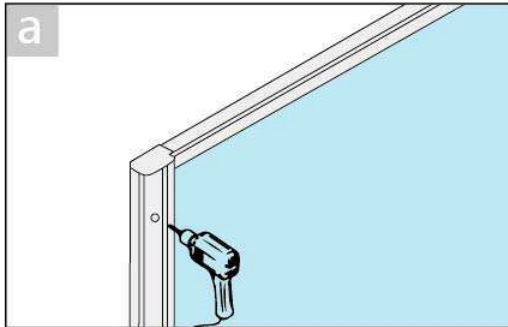


a Drill the holes on wall channels, top and bottom tracks

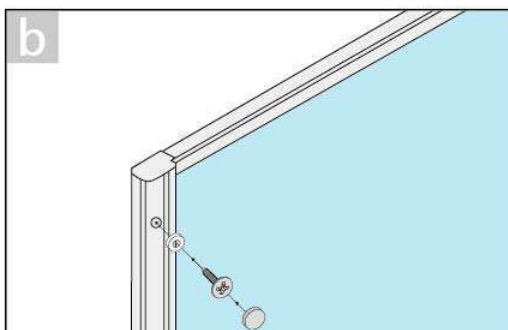



b Fasten the wall channels, top and bottom tracks with ST4*10 screws. Fit screw cover caps.

4

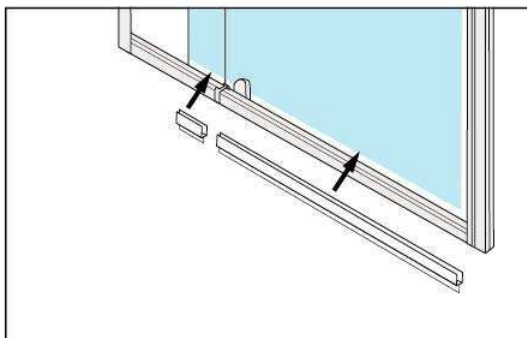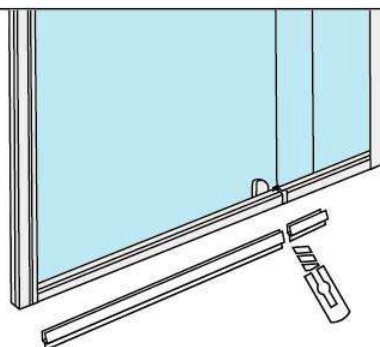


Cut water seal to suit length of door panel. Fit water seal to bottom of door panel.

5

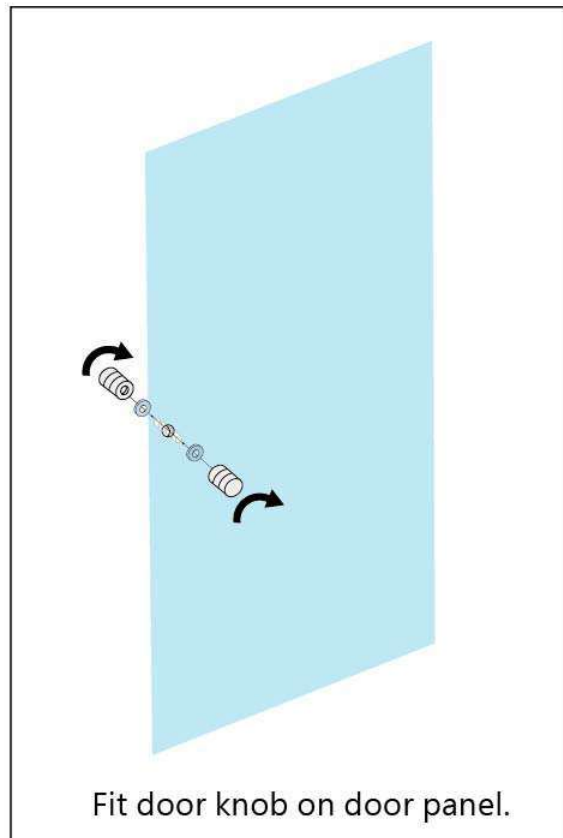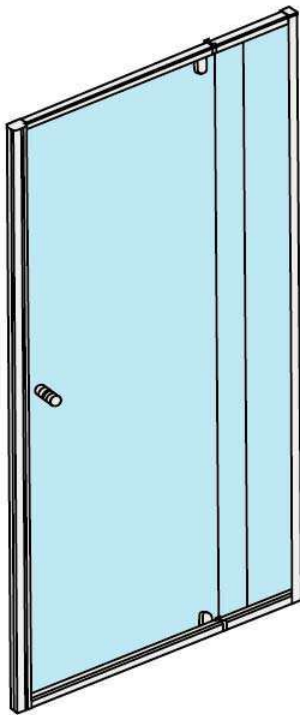

Fit door knob on door panel.

6

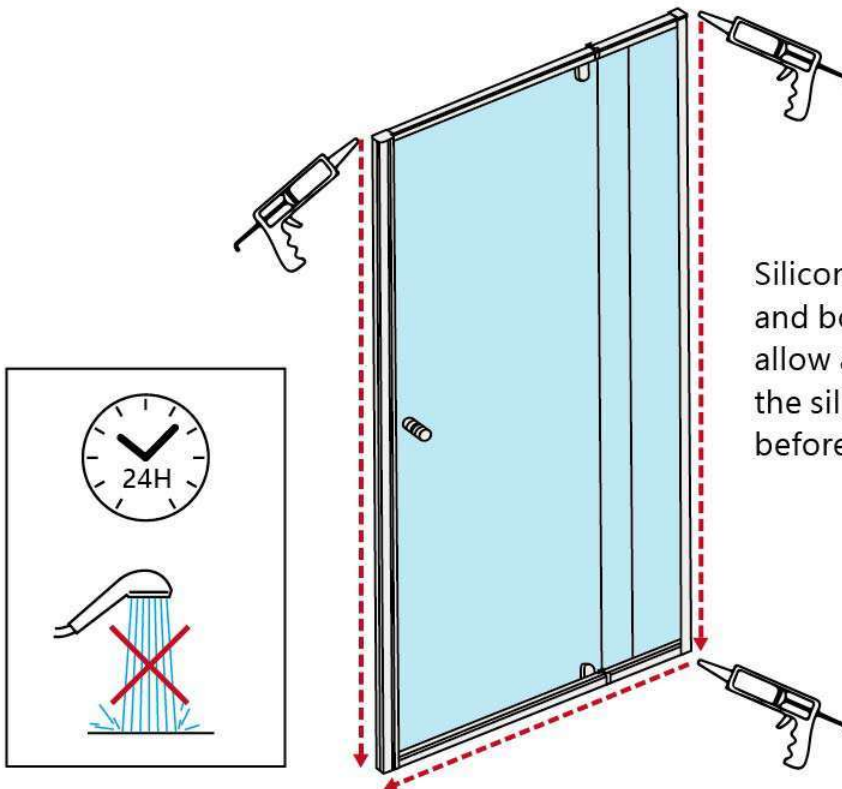

Silicone along wall channel and bottom track. Please allow at least 24 hours for the silicone to fully cure before using the shower.