



INSTALLATION GUIDE

ZENMO IQ COMPACT

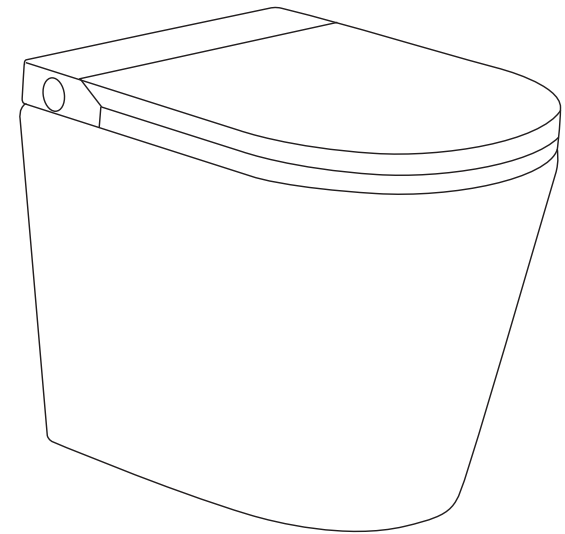

Smart Toilet with Integrated Water Tank

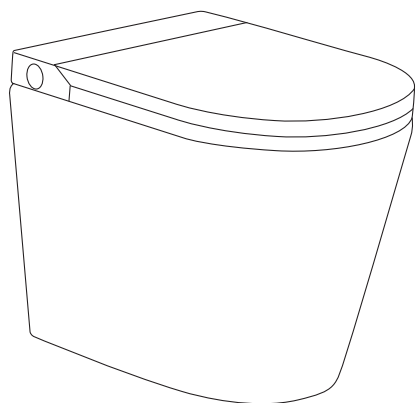

Smart Sensor
Cover Lifting



Tornado Flush
Technology



Multiple Wash
Modes



UF lid



Features

WELS 4 Star Rated, 4.5L/3L (3.5L Average Flush)

- Automatic flush
- Automatic seat and lid
- Rear, lady and Oscillating Wash function
- Remote control with full function
- Rimless Tornado Flush Technology
- Heated seat, Adjustable for water temperature, Warm and Air Drying
- UV light, Foam and Aroma module
- Waterproof Rating: IPX-4
- Selected for P-trap or S-Trap (Set out 125-230mm) installations

BEFORE INSTALLATION: CHECK ALL PARTS OF PRODUCT THOROUGHLY.

INSTALLATION IS ACCEPTANCE OF GOODS . TAKE EXTRA CARE WHILE TRANSPORTING AND HANDLING GOODS.

List of Components for Smart Toilet

1. Pan and smart seat 2. Pan connector 3. Smart accessories box

Include:

- | | | |
|--------------------|---------------------|------------------------|
| ①. Valve | ④. Hose | ⑦. Foam bottle(200ML) |
| ②. Stop valve | ⑤. Remote control | ⑧. Deodorizer(50ML) |
| ③. Three-way valve | ⑥. Power supply box | ⑨. Electrical coupling |

1. Pre-Installation Requirements & Preparatory Guidelines

The installation of the smart toilet involves both plumbing and electrical work. It is mandatory to consult licensed plumbers and licensed electricians to determine the optimal installation method tailored to your site conditions.

Beyond the standard water supply, the smart toilet requires a 220–240V electrical supply. The electrical installation must be carried out by a licensed electrician in accordance with AS/NZS 3000 and applicable state or territory electrical requirements. Two power connection methods are available:

- Concealed wiring: Permanent, in-wall cabling for a seamless aesthetic;
- Exposed wiring: Plug-in connection to a standard Australian 220–240V power outlet.

To ensure installation efficiency, the positions of power and water supply interfaces must be confirmed in advance. These interfaces may be routed:

- Behind the toilet pan for a fully integrated, hidden installation;
- Adjacent to the pan via access holes on either side of the toilet base.

Our two-piece smart toilet including dual check valves and integrated bidet seat in compliance with WMTS 051. Integral air-gap high hazard complies with AS2845.2:2025 Water Supply Backflow Prevention. Check local regulations to confirm if a RPZ valve is required as part of your installation.

Please arrange for licensed professionals to pre-install power and water supply services at the designated locations specified for your custom installation

2. Attentions

- Make sure all water connections are properly sealed and leak-free.
- For concealed wiring installations, A leakage protection device is equipped at one end of the connection between the power cord and the smart cover plate. It's provided to cut off the power supply to the toilet and perform a forced reset of the smart toilet seat when necessary.
- For exposed wiring installations, a switched power outlet shall be installed within a preferred range of 1 meter from the toilet installation location.


3. Water Supply Connection

Step 1: Install the supplied three-way valve onto the toilet's water inlet connection. Ensure the connection is correctly aligned and securely tightened.



The three-way valve

Step 2: Connect the 50cm flexible hose between the three-way valve and the water inlet at the bottom of the water tank.

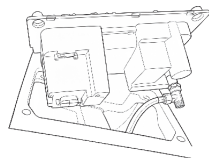

Step 3: Connect the second flexible hose between the three-way valve and the stop valve (there are side holes on both sides of the pan for water to enter from either side).

Then, open the water supply slowly and inspect all connections for leaks before proceeding with electrical connection.

4. Electrical Connection


Warning: This equipment must be installed by a licensed electrician. The product's power cord is equipped with an appropriately rated leakage protection device, and it should be installed in accordance with the requirements for damp areas. All installation work must comply with the provisions of AS/NZ3000 standard; the type and location of the power socket must also meet the requirements of AS/NZS3000.

Concealed wiring connection:

①. Determine the location for the concealed electrical supply connection behind the toilet. Ensure sufficient clearance is provided for the water supply pipe and the pan waste connection.

②. Mark the position clearly and use the appropriate drill bit to make a hole for the power cord behind the pan.

③. Connect the circuitry of the toilet to the power supply (using the supplied electrical coupling). Leave sufficient cable length to allow the toilet to be removed for future servicing.

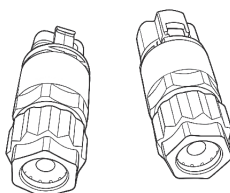

Electrical Coupling

④. Turn on and test the smart toilet, and check if there are any malfunctions in its operation (refer to the user manual for details).

Exposed wiring connection:

①. Determine the location of the power supply point and remove the corresponding cover of the pan. If the water supply is carried out through the hole on the side of the pan, the power supply should be conducted through the hole on the other side of the pan. (Water supply on the right side and power supply on the left side is recommended.)

②. At the wiring location of the smart seat, first disconnect the front connector of the square fuse, and then pass the wires through the side of the panel.

③. Reconnect using the coupler provided.




④. Insert the power cord into the power socket and turn on the power.

⑤. Test whether the operation of the smart toilet is normal (refer to the user manual for details).

5. Pan Connection Installation

Determine the required pan connection position based on the selected waste outlet configuration.

Then: Install the appropriate pan connector and ensure the connection is fully sealed before fixing the toilet in position.

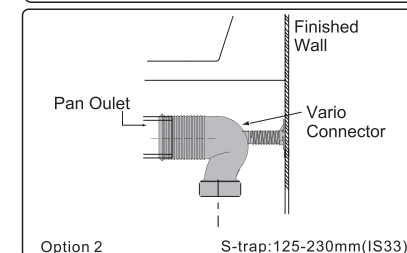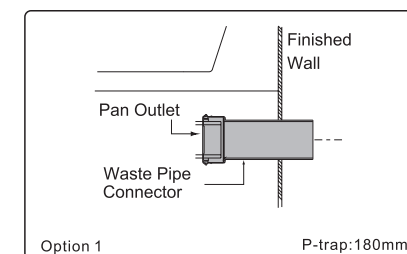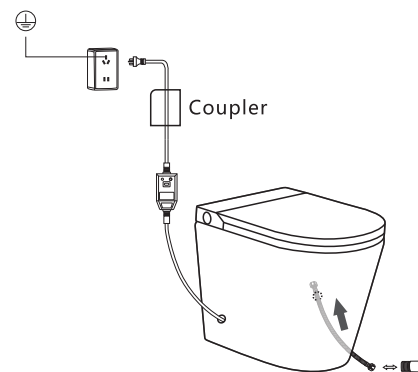

6. Testing the toilet:

①. Once all plumbing connections have been completed and checked for leaks, the toilet can be tested.

②. Make sure the toilet is connected to the power supply and the power is turned on.

③. The LED digital display will light up when powered on.

④. When using the nozzle function, be sure to keep your hand touching the right side of the seat ring. The Sense icon simulates the sitting posture of the human body.

⑤. Use the remote control or the side knob to sequentially operate each of the toilet functions to ensure that the equipment is functioning properly. (For toilet operation instructions and remote control usage methods, please refer to the 'SMART Manual'.)

7. Installation of the smart seat

Note: The seat cover will be provided as a set with the pan. If you need to remove or reinstall the smart seat, please follow the instructions below.

8. Smart seat removal:

①. Switch off and isolate the electrical supply before removing the smart seat. Where applicable, disconnect the toilet from the electrical supply.

②. Remove the decorative screw cover located on the screw slots at the top of the seat (which is situated beneath the seat cover and the seat itself).

③. Use a screwdriver to loosen and remove the two seat installation screws.

④. Remove the two flat washers from the opening of the seat mounting holes.

⑤. Now the seat can be removed from the base.

