



SUPER SLIM SHOWER BASE
INSTALLATION INSTRUCTIONS

SUPER SLIM SHOWER BASE	MODEL
Square 900x900 - Rear Outlet	SBSS26CW.KW
Rectangle 1200x900 - Rear Outlet	SBSS34CW.KW


1. General arrangement

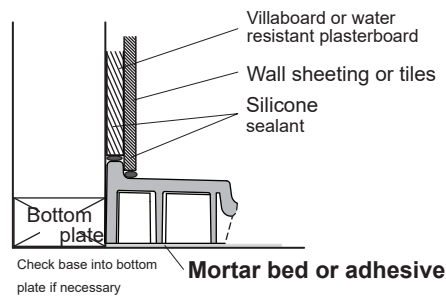


2. Timber floor

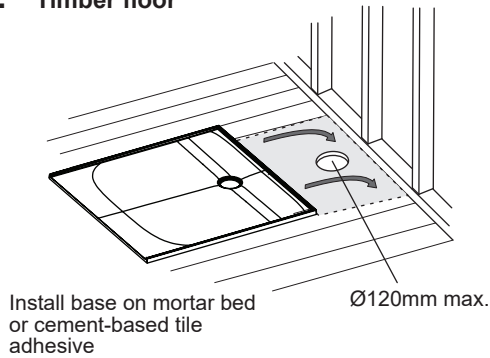


3. Concrete slab

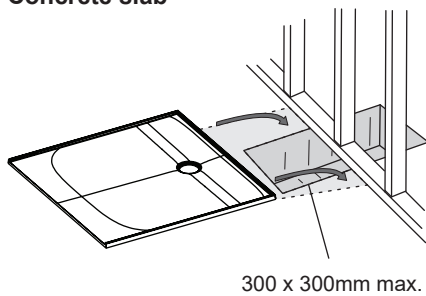

4. Test drainage to waste

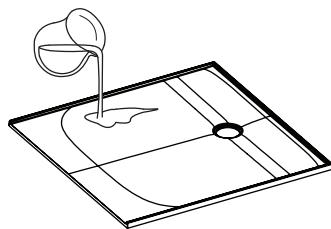

5. Smartpan/Smartwaste fitting

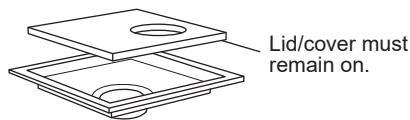

A. PRE-INSTALLATION NOTE

This product must be installed by a licensed and appropriately trained tradesperson to all relevant Australian standards. Measure the installation area and consider the wall cladding system to determine if it will be required to check the edge of the base into the wall by the width of the tiling flange in order to achieve a leak-free junction with the wall cladding material (Diagram 1)

B. TIMBER FLOOR (Diagram 2)

i. Floor boards or sheet flooring must cover the entire underside of the base. Cut a hole for waste less than 200mm and no greater than 300mm. Note: If renovating, ensure the floor is structurally sound. Replace the floor if necessary.

ii. Shower Base to be fixed to floor by spreading cement-based tile adhesive on the floor using a 12mm notched trowel, or by use of silicone sealant.

Alternatively, where the floor is not perfectly level, the base can be set into a mortar bed - spread a 10mm thick mortar bed of 4:1 Washed Sand: Spread the mortar over the whole area where base is to be installed then trowel off level.

⚠ Do not use 'Liquid Nails' or similar rigid construction-type adhesive to install base.

iii. Lay the shower base on the prepared bed and use a spirit level to adjust the base to ensure it is level along all sides and diagonally. This will allow the base to drain properly as it has an inbuilt fall to the waste outlet.

iv. At this point it is imperative to check that water drains to the waste outlet prior to lining the shower walls (Diagram 4). Failure to do so is a breach of warranty.

C. CONCRETE SLAB (Diagram 3)

i. Any boxed opening in the slab to accommodate the waste must not exceed 300mm in width beneath the shower base. Flat area (400mm x 400mm) to ensure effective seal with smart pan

ii. Shower Base to be fixed to floor by spreading cement-based tile adhesive on the floor using a 12mm notched trowel, or by use of silicone sealant.

Alternatively, where the floor is not perfectly level, the base can be set into a mortar bed - spread a 10mm thick mortar bed of 4:1 Washed Sand: Spread the mortar over the whole area where base is to be installed then trowel off level. Do not use 'Liquid Nails' or similar rigid construction-type adhesive to install base.⚠

iii. Lay the shower base on the prepared bed and use a spirit level to adjust the base to ensure it is level along all sides and diagonally. This will allow the base to drain properly as it has an inbuilt fall to the waste outlet.

iv. At this point it is imperative to check that water drains to the waste outlet prior to lining the shower walls (Diagram 4). Failure to do so is a breach of warranty.

v. Backfill the opening in the slab with a 4:1 Washed Sand: Cement mix ensuring the mortar is packed tightly around the waste outlet and all the way back into the boxed section of the slab and up to the underside of the base to give maximum support.

Note: Where required by regulation plastic pipe and fittings may need to be lagged prior to backfilling.

D. SMARTPAN/SMARTWASTE


When the installation uses these products as the waste collectors, ensure that the lid/cover is fitted, to provide adequate support for the base (Diagram 5).

E. SHOWER BASE WASTE

Install the shower waste as shown in Diagram 6 (overleaf)

SUPER SLIM SHOWER BASE INSTALLATION INSTRUCTIONS

6. Waste assembly

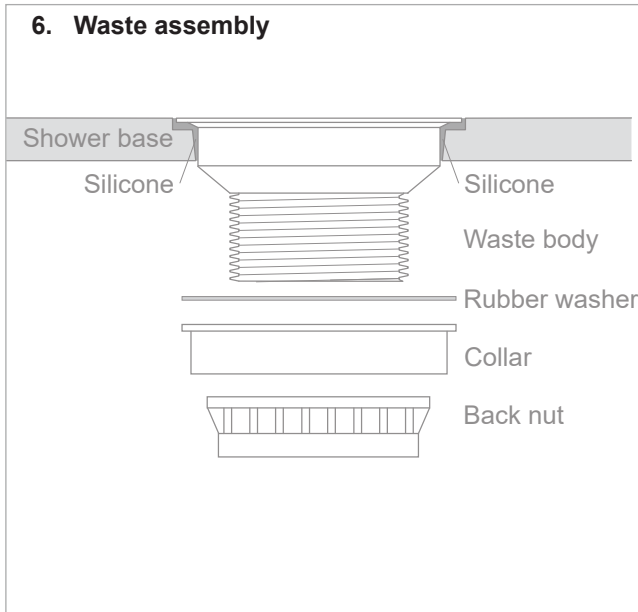

CLEANING

The surface of the shower base will resist surface build-up. However to preserve its high lustre it may be cleaned with a soft cloth using warm soapy water or mild household detergent.

Do not use any form of abrasive cleaner.

WARRANTY

Bathroom Products Australia's shower bases are made SMC compound.

SMC shower bases are guaranteed for 1 year against faulty materials or workmanship, subject to warranty terms and conditions.


Some hair dyes and colouring shampoos may cause staining to this shower base that is difficult to remove, these should NOT be used in the shower.

⚠ Guarantee will be void if:

- the installation and usage instructions are not adhered to
- the base is subjected to water at a temperature exceeding 55°C

-Do not use harsh chemicals or products containing vinegar or citric acid to clean the shower base as these may cause staining. Only mild household cleaning products should be used. Failure to follow this advise will void the warranty.

DIMENSIONS

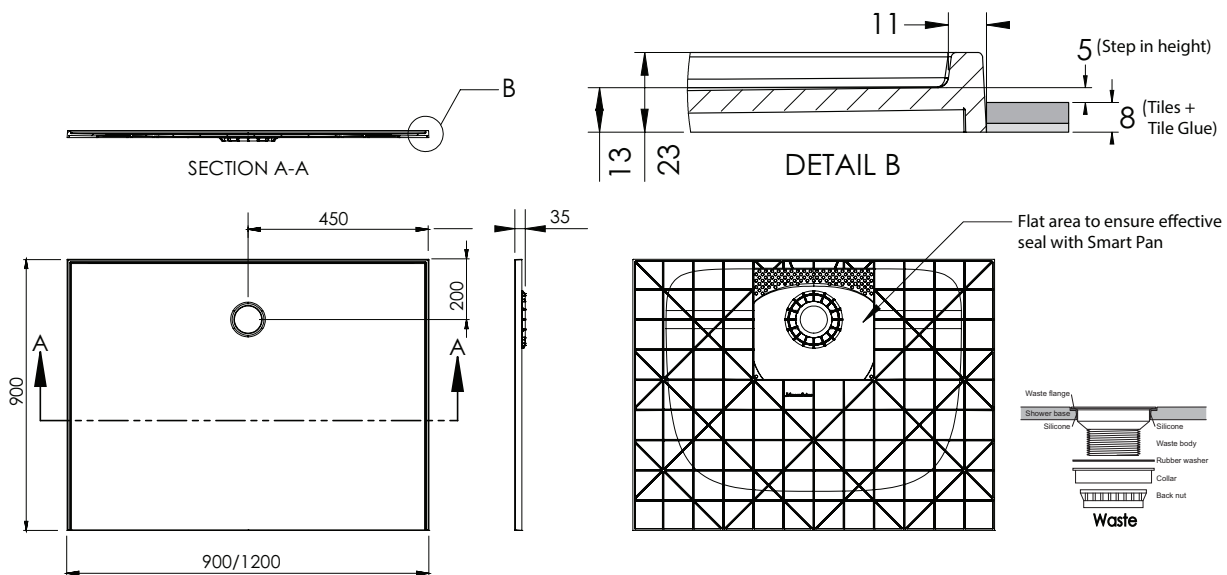

STORAGE

- Shower bases can distort if not stored correctly.
- If not installed immediately the base must be stored flat, top side up and not leaning on the waste outlet.
- Do not place objects on the base during storage.
- Distortion due to incorrect storage is not covered by warranty.