
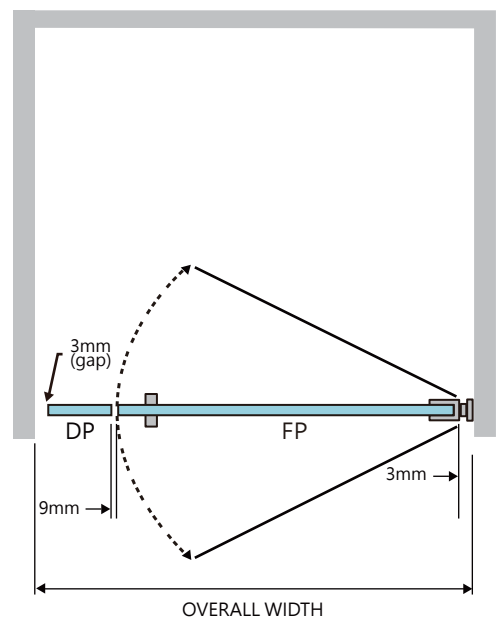
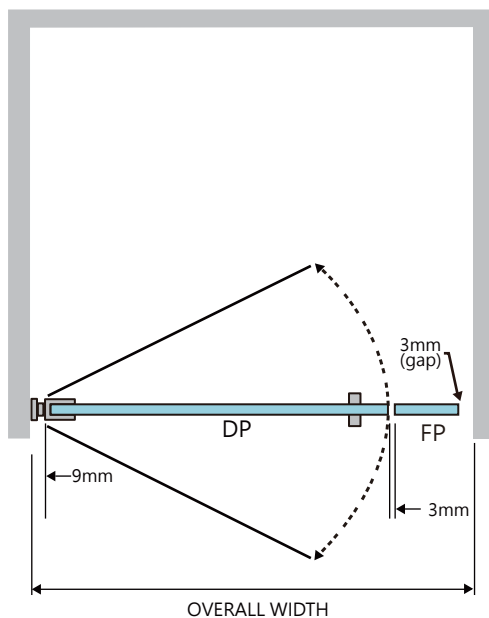


Installation Guide

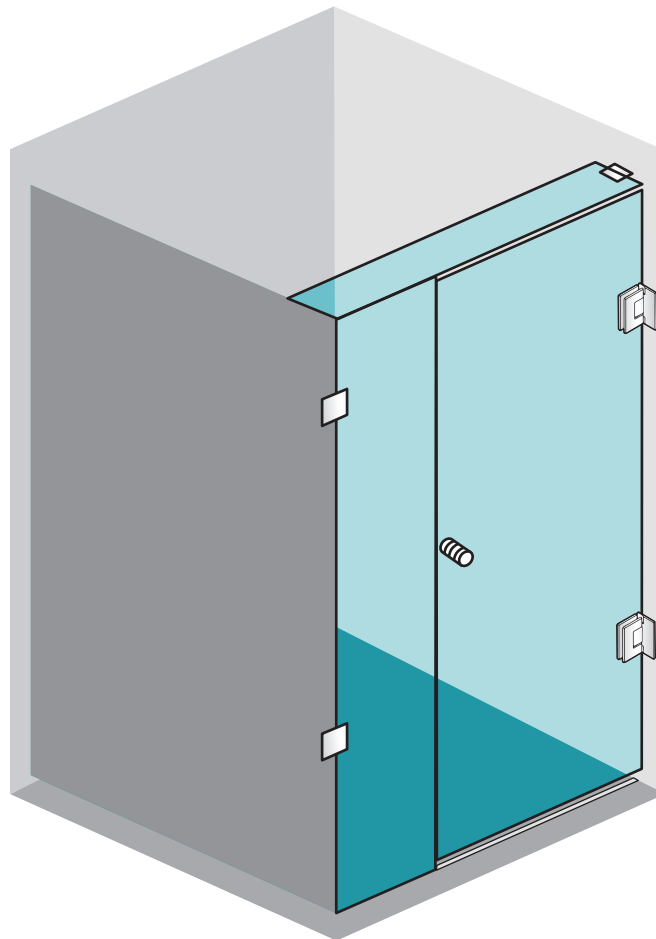

Important Notice for Purchaser/Installers

Check the contents of the pack carefully before installation.

MBS will not be held responsible for any de-fit/re-fit costs where faulty product has been fitted.

If any fault is found with materials or workmanship, it must be reported immediately to the MBS.

Remedial action will be taken, based on information received, on condition that:

1. Full details are supplied to the MBS;
2. The screen has not been modified or malicious/intentional damage or neglect;
3. The MBS is informed of any damage/shortages prior to installation.

We do NOT accept responsibility for any problems that may occur through incorrect installation.

The success of the installation and operation of any shower screen is, of course,

dependant on the squareness, alignment and construction of the walls to which fixing is to be carried out.

Glass Breakage Warning

MBS's shower glass panels are made from Grade A Toughened Safety Glass that complies with relevant Australian Standards. The glass can be damaged and broken if it is handled incorrectly, even if it is tough and hard to break. Always TWO persons install the panels with care. Toughened Safety Glass can NOT be cut, drilled or grinded like other ordinary glass.

We do NOT accept responsibility for glass breakage after dispatch from MBS.

The purchaser/installer acknowledge that it is their responsibility of checking if the glass at the time of handover was undamaged and free from any defects.

Safety Matters

ALWAYS :


- Check there is no electrical wires or hoses before you drill or mount anything.
- Wear safety glasses and gloves when handling chemicals, silicone or such.
- Work in a safe manner & comply with OHS requirements.
- Enter the shower slowly with care to avoid slipping, open & close the shower door gently to avoid any potential damage or injury.

DO NOT:


- Stand on the shower screen package or any other objects or fixings. It could cause injury or physical harm.
- Rest or place the glass panels on hard surfaces like tiles, concrete, other glass panels or metal surfaces.
- Cushion the edges with cardboard, soft timber or rubber mat.
- Impact or scratch the glass panels with any sharp metallic objects or tools.
- Allow children to use the shower alone or to play in the shower to prevent any injury.
- Use shower within 24 hours before the silicone fully dry.

Cleaning & Maintenance





Many household cleaners contain abrasive and chemical substances and should not be used for cleaning painted, plated or plastic fittings. These finished should be cleaned with a mild washing up detergent and wiped dry using a soft cloth. Regular cleansing with a biodegradable cleanser prevents stubborn stains and ensures a clean and hygienic surface for many years. Do NOT use scouring or caustic cleansers under any circumstances. These can damage the surface finish of this product.

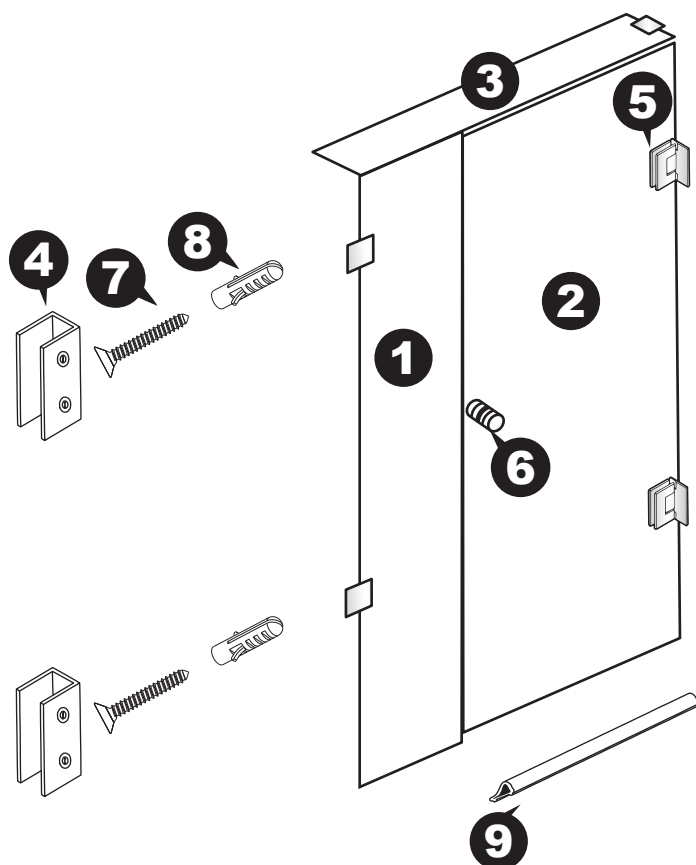



Tools & Equipments Required

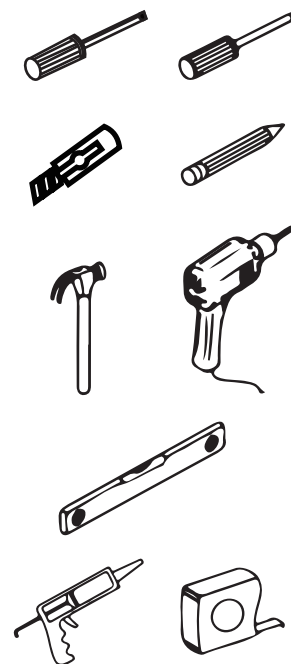


Parts list

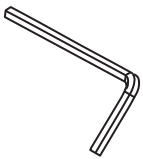1  x1 Fixed Panel	2  x1 Door Panel	3  x1 Brace Panel	4  x3 Wall Brackets
5  x2 Hinges	6  x1 Door knob	7  x3 ST4 x 30 Screws	8  x3 Wall plugs
9  x1 Water Bar	10  x1 Allen Key		


1

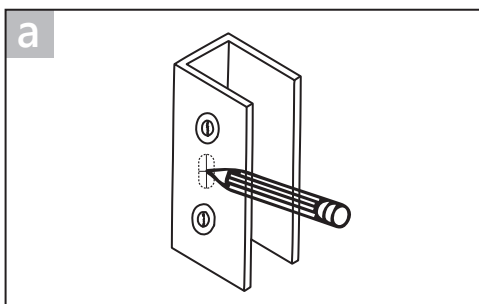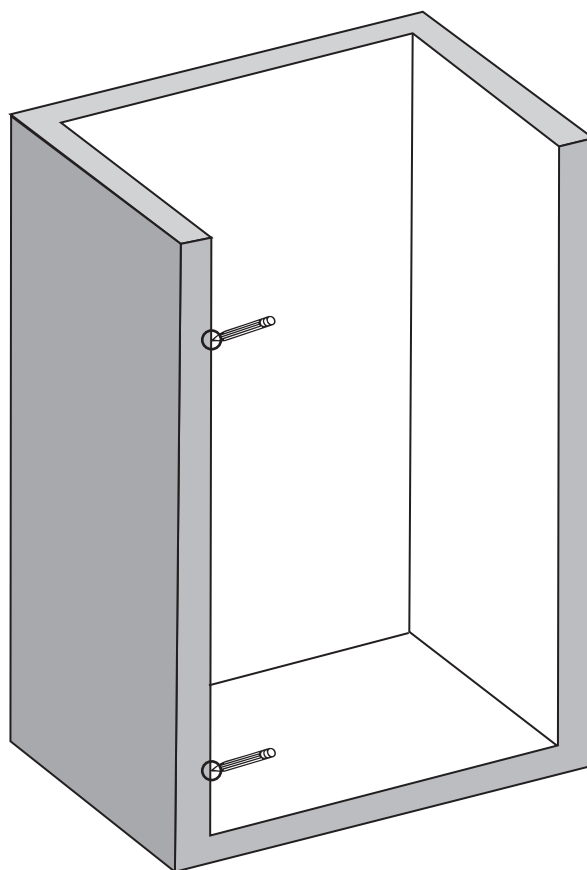


a Position and level the wall brackets. Mark the fastening holes.

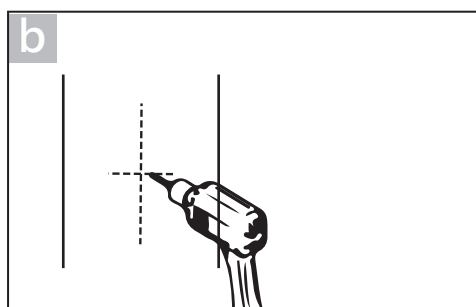

b Drill the wall covering.

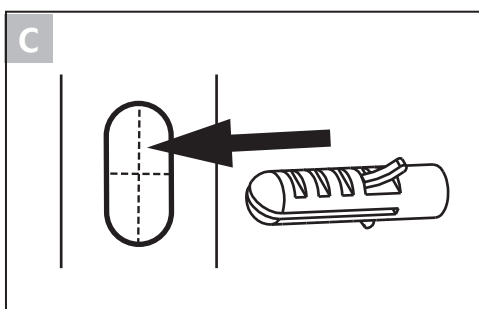


c If no studs are behind the wall covering, use wall plugs when fastening the wall brackets.

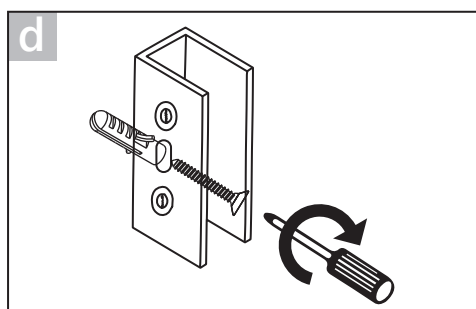


d Fasten the wall brackets with ST4*30 screws.

2

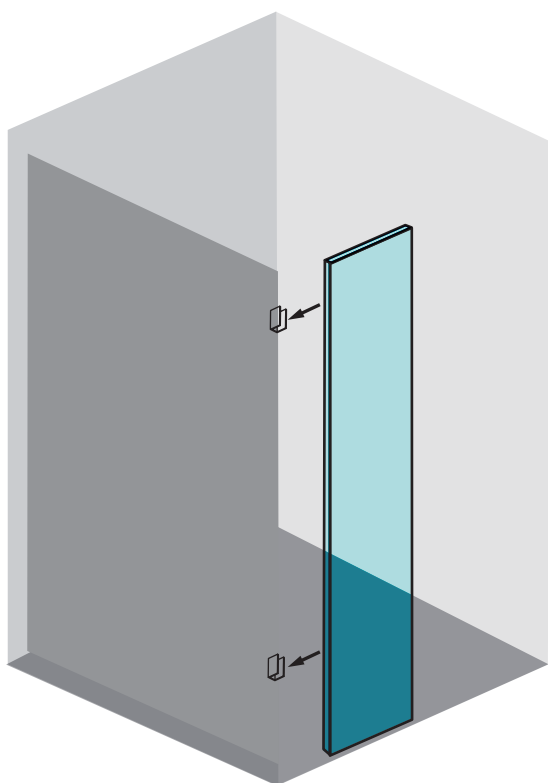


view from inside

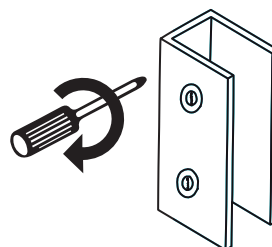


Insert fixed panel
into wall brackets
Fasten fixed panel
& wall brackets.

3

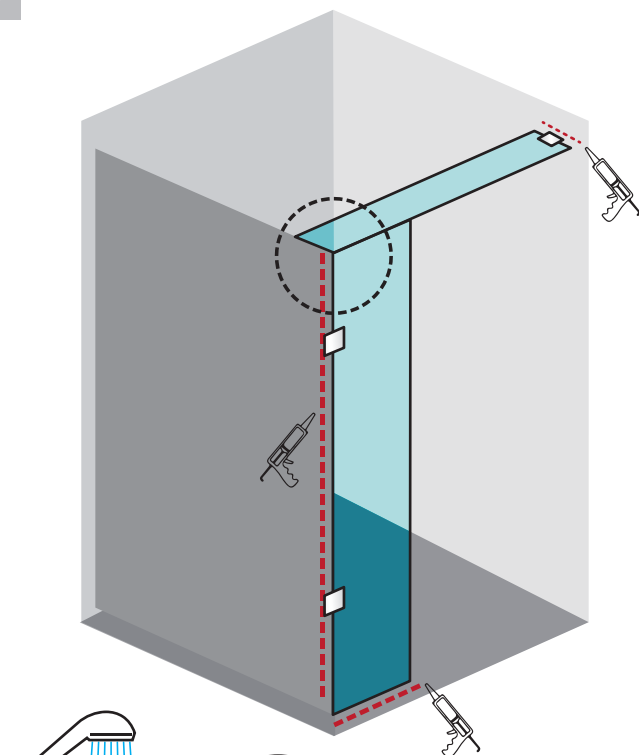


- Place the brace panel & fixed panel in the correct position.
- Fit and fasten the wall bracket on the wall for brace panel.

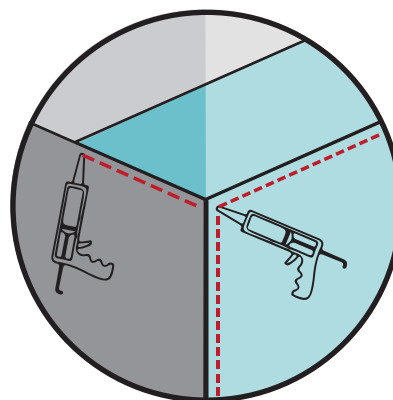


- Silicone the gap as shown in red line.
- Use masking tape or similar to hold brace panel , fixed panel until silicone fully dries.



4

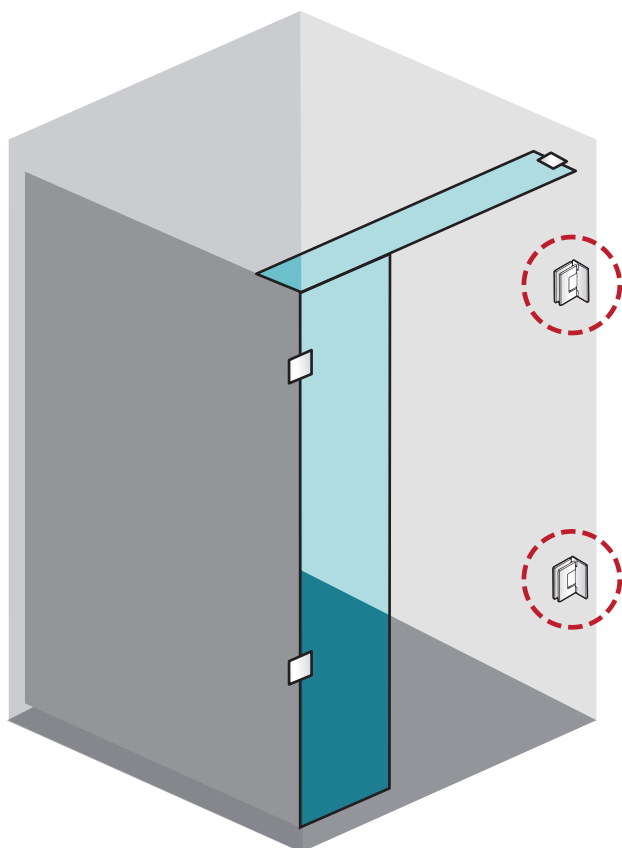


view from inside

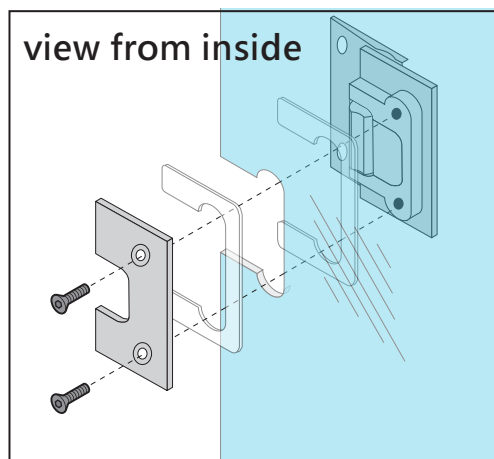


Measure and position 2 x wall to glass hinges , drill the hole and fasten the hinges on the wall.

•Note: Hinges need to be fixed on stud timber to avoid door panel slant.



5

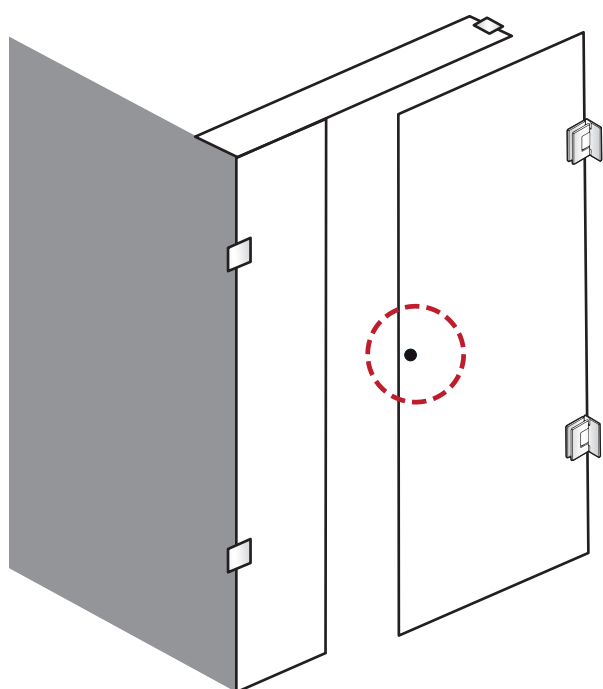


Fit the knob.

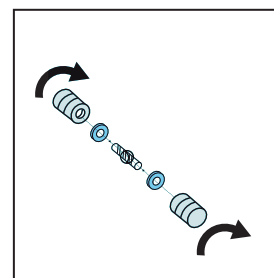

6

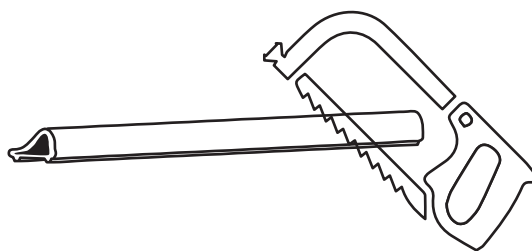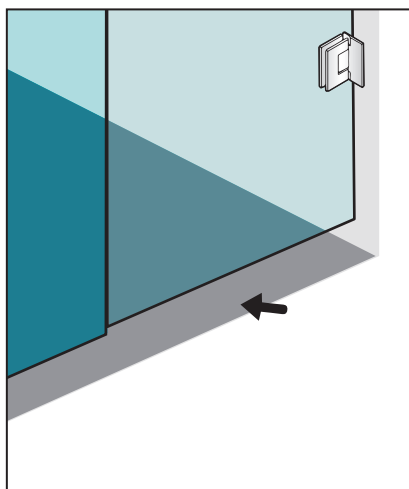

Measure and cut water bar to fit under the door panel. Silicone around the water bar.

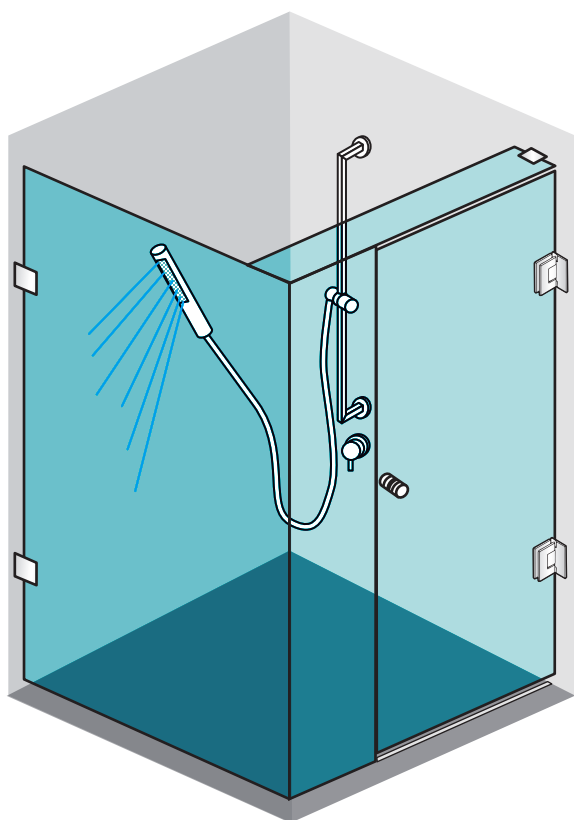

This shower system is projected to offer maximum aesthetics united to optimum functionality, assuring water tightness during showering, and quick rinsing operations. Only correct installation assures adequate water tightness.

